
gpiozero 2.0.1 Documentation

Release 2.0.1

Ben Nuttall

Feb 18, 2024

CONTENTS

1	Installing GPIO Zero	1
2	Basic Recipes	3
3	Advanced Recipes	37
4	Configuring Remote GPIO	45
5	Remote GPIO Recipes	53
6	Pi Zero USB OTG	57
7	Source/Values	61
8	Command-line Tools	69
9	Frequently Asked Questions	79
10	Backwards Compatibility	87
11	Migrating from RPi.GPIO	93
12	Contributing	99
13	Development	101
14	API - Input Devices	105
15	API - Output Devices	125
16	API - SPI Devices	147
17	API - Boards and Accessories	157
18	API - Internal Devices	189
19	API - Generic Classes	197
20	API - Device Source Tools	203
21	API - Fonts	211
22	API - Tones	215
23	API - Pi Information	217
24	API - Pins	221

25 API - Exceptions	239
26 Changelog	245
27 License	255
Python Module Index	257
Index	259

INSTALLING GPIO ZERO

GPIO Zero is installed by default in the [Raspberry Pi OS](https://www.raspberrypi.org/software/operating-systems/)¹ desktop image, [Raspberry Pi OS](https://www.raspberrypi.org/software/operating-systems/)² Lite image, and the [Raspberry Pi Desktop](https://www.raspberrypi.org/software/raspberry-pi-desktop/)³ image for PC/Mac, all available from [raspberrypi.org](https://www.raspberrypi.org)⁴. Follow these guides to installing on other operating systems, including for PCs using the *remote GPIO* (page 45) feature.

1.1 Raspberry Pi

GPIO Zero is packaged in the apt repositories of Raspberry Pi OS, [Debian](https://packages.debian.org/buster/python3-gpiozero)⁵ and [Ubuntu](https://packages.ubuntu.com/hirsute/python3-gpiozero)⁶. It is also available on [PyPI](https://pypi.org/project/gpiozero/)⁷.

1.1.1 apt

First, update your repositories list:

```
pi@raspberrypi:~$ sudo apt update
```

Then install the package for Python 3:

```
pi@raspberrypi:~$ sudo apt install python3-gpiozero
```

or Python 2:

```
pi@raspberrypi:~$ sudo apt install python-gpiozero
```

1.1.2 pip

If you're using another operating system on your Raspberry Pi, you may need to use pip to install GPIO Zero instead. Install pip using [get-pip](https://pip.pypa.io/en/stable/installing/)⁸ and then type:

```
pi@raspberrypi:~$ sudo pip3 install gpiozero
```

or for Python 2:

```
pi@raspberrypi:~$ sudo pip install gpiozero
```

To install GPIO Zero in a virtual environment, see the [Development](#) (page 101) page.

¹ <https://www.raspberrypi.org/software/operating-systems/>

² <https://www.raspberrypi.org/software/operating-systems/>

³ <https://www.raspberrypi.org/software/raspberry-pi-desktop/>

⁴ <https://www.raspberrypi.org/software/>

⁵ <https://packages.debian.org/buster/python3-gpiozero>

⁶ <https://packages.ubuntu.com/hirsute/python3-gpiozero>

⁷ <https://pypi.org/project/gpiozero/>

⁸ <https://pip.pypa.io/en/stable/installing/>

1.2 PC/Mac

In order to use GPIO Zero’s remote GPIO feature from a PC or Mac, you’ll need to install GPIO Zero on that computer using pip. See the *Configuring Remote GPIO* (page 45) page for more information.

1.3 Documentation

This documentation is also available for offline installation like so:

```
pi@raspberrypi:~$ sudo apt install python-gpiozero-doc
```

This will install the HTML version of the documentation under the `/usr/share/doc/python-gpiozero-doc/html` path. To view the offline documentation you have several options:

You can open the documentation directly by visiting `file:///usr/share/doc/python-gpiozero-doc/html/index.html` in your browser. However, be aware that using `file://` URLs sometimes breaks certain elements. To avoid this, you can view the docs from an `http://` style URL by starting a trivial HTTP server with Python, like so:

```
$ python3 -m http.server -d /usr/share/doc/python-gpiozero-doc/html
```

Then visit `http://localhost:8000/` in your browser.

Alternatively, the package also integrates into Debian’s *doc-base*⁹ system, so you can install one of the doc-base clients (*dochelp*, *dwww*, *dhelp*, *doc-central*, etc.) and use its interface to locate this document.

If you want to view the documentation offline on a different device, such as an eReader, there are Epub and PDF versions of the documentation available for download from the *ReadTheDocs site*¹⁰. Simply click on the “Read the Docs” box at the bottom-left corner of the page (under the table of contents) and select “PDF” or “Epub” from the “Downloads” section.

⁹ <https://wiki.debian.org/doc-base>

¹⁰ <https://gpiozero.readthedocs.io/>

BASIC RECIPES

The following recipes demonstrate some of the capabilities of the GPIO Zero library. Please note that all recipes are written assuming Python 3. Recipes *may* work under Python 2, but no guarantees!

2.1 Importing GPIO Zero

In Python, libraries and functions used in a script must be imported by name at the top of the file, with the exception of the functions built into Python by default.

For example, to use the *Button* (page 105) interface from GPIO Zero, it should be explicitly imported:

```
from gpiozero import Button
```

Now *Button* (page 105) is available directly in your script:

```
button = Button(2)
```

Alternatively, the whole GPIO Zero library can be imported:

```
import gpiozero
```

In this case, all references to items within GPIO Zero must be prefixed:


```
button = gpiozero.Button(2)
```

2.2 Pin Numbering

This library uses Broadcom (BCM) pin numbering for the GPIO pins, as opposed to physical (BOARD) numbering. Unlike in the [RPi.GPIO](https://pypi.python.org/pypi/RPi.GPIO)¹¹ library, this is not configurable. However, translation from other schemes can be used by providing prefixes to pin numbers (see below).

Any pin marked “GPIO” in the diagram below can be used as a pin number. For example, if an LED was attached to “GPIO17” you would specify the pin number as 17 rather than 11:

¹¹ <https://pypi.python.org/pypi/RPi.GPIO>

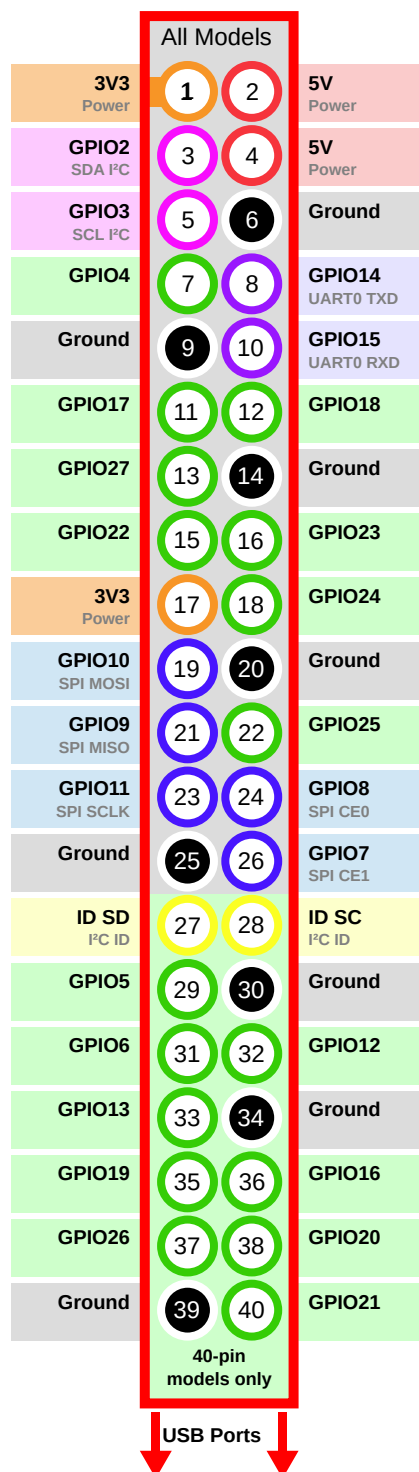

If you wish to use physical (BOARD) numbering you can specify the pin number as “BOARD11”. If you are familiar with the [wiringPi](https://projects.drogon.net/raspberry-pi/wiringpi/pins/)¹² pin numbers (another physical layout) you could use “WPI0” instead. Finally, you can specify pins as “header:number”, e.g. “J8:11” meaning physical pin 11 on header J8 (the GPIO header on modern Pis). Hence, the following lines are all equivalent:

```
>>> led = LED(17)
>>> led = LED("GPIO17")
>>> led = LED("BCM17")
>>> led = LED("BOARD11")
>>> led = LED("WPI0")
```

(continues on next page)

¹² <https://projects.drogon.net/raspberry-pi/wiringpi/pins/>

(continued from previous page)


```
>>> led = LED("J8:11")
```

Note that these alternate schemes are merely translations. If you request the state of a device on the command line, the associated pin number will *always* be reported in the Broadcom (BCM) scheme:

```
>>> led = LED("BOARD11")
>>> led
<gpiozero.LED object on pin GPIO17, active_high=True, is_active=False>
```

Throughout this manual we will use the default integer pin numbers, in the Broadcom (BCM) layout shown above.

2.3 LED

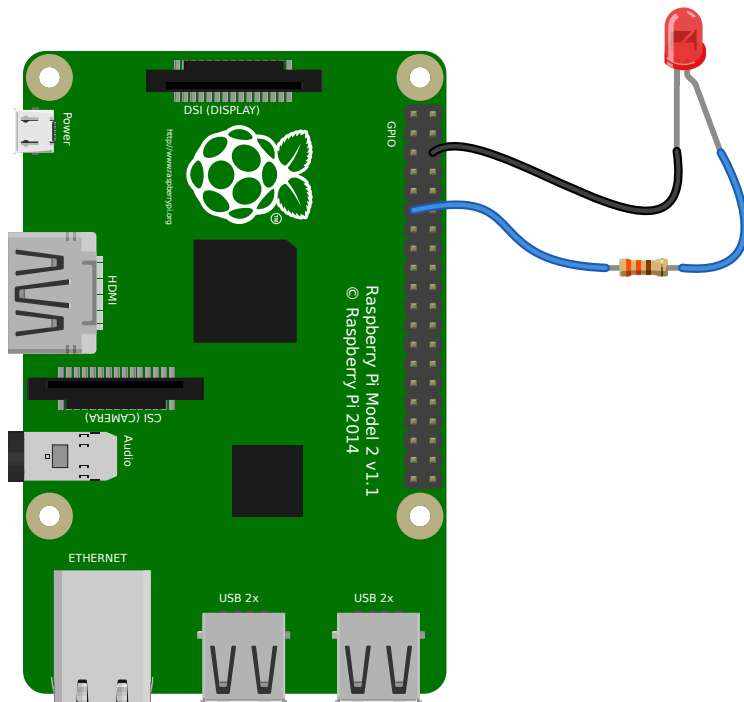

Turn an *LED* (page 125) on and off repeatedly:

```
from gpiozero import LED
from time import sleep

red = LED(17)

while True:
    red.on()
    sleep(1)
    red.off()
    sleep(1)
```

Alternatively:

```
from gpiozero import LED
from signal import pause

red = LED(17)

red.blink()
```


(continues on next page)

(continued from previous page)

```
pause()
```

Note: Reaching the end of a Python script will terminate the process and GPIOs may be reset. Keep your script alive with `signal.pause()`¹³. See *How do I keep my script running?* (page 79) for more information.

2.4 LED with variable brightness

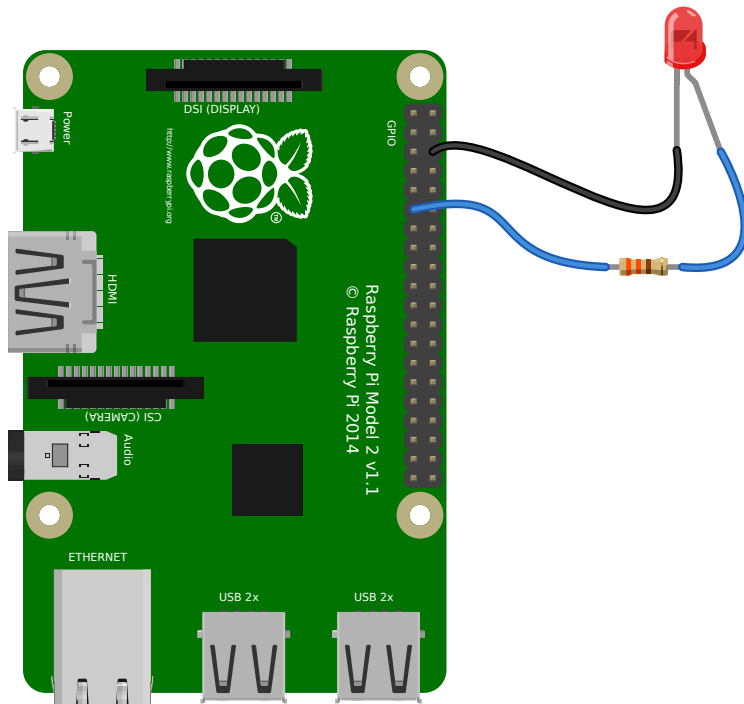

Any regular LED can have its brightness value set using PWM (pulse-width-modulation). In GPIO Zero, this can be achieved using `PWMLED` (page 127) using values between 0 and 1:

```
from gpiozero import PWMLED
from time import sleep

led = PWMLED(17)

while True:
    led.value = 0 # off
    sleep(1)
    led.value = 0.5 # half brightness
    sleep(1)
    led.value = 1 # full brightness
    sleep(1)
```

Similarly to blinking on and off continuously, a PWMLED can pulse (fade in and out continuously):

```
from gpiozero import PWMLED
from signal import pause

led = PWMLED(17)
```


(continues on next page)

¹³ <https://docs.python.org/3.9/library/signal.html#signal.pause>

(continued from previous page)

```
led.pulse()
pause()
```

2.5 Button

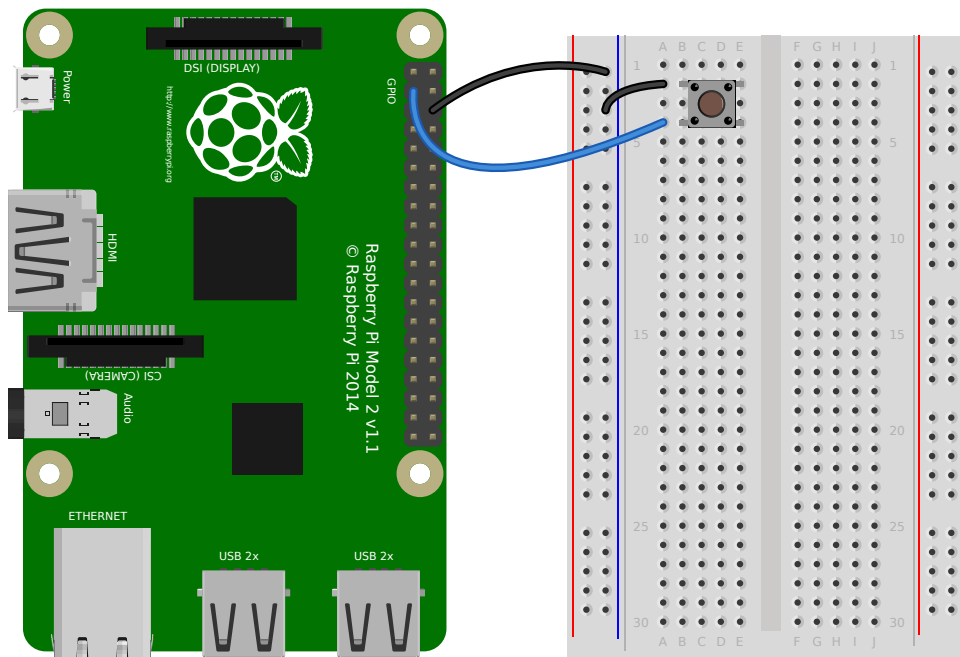

Check if a [Button](#) (page 105) is pressed:

```
from gpiozero import Button

button = Button(2)

while True:
    if button.is_pressed:
        print("Button is pressed")
    else:
        print("Button is not pressed")
```

Wait for a button to be pressed before continuing:

```
from gpiozero import Button

button = Button(2)

button.wait_for_press()
print("Button was pressed")
```

Run a function every time the button is pressed:

```
from gpiozero import Button
from signal import pause

def say_hello():
    print("Hello!")
```

(continues on next page)

(continued from previous page)

```
button = Button(2)

button.when_pressed = say_hello

pause()
```

Note: Note that the line `button.when_pressed = say_hello` does not run the function `say_hello`, rather it creates a reference to the function to be called when the button is pressed. Accidental use of `button.when_pressed = say_hello()` would set the `when_pressed` action to `None`¹⁴ (the return value of this function) which would mean nothing happens when the button is pressed.

Similarly, functions can be attached to button releases:

```
from gpiozero import Button
from signal import pause

def say_hello():
    print("Hello!")


def say_goodbye():
    print("Goodbye!")

button = Button(2)

button.when_pressed = say_hello
button.when_released = say_goodbye

pause()
```

2.6 Button controlled LED

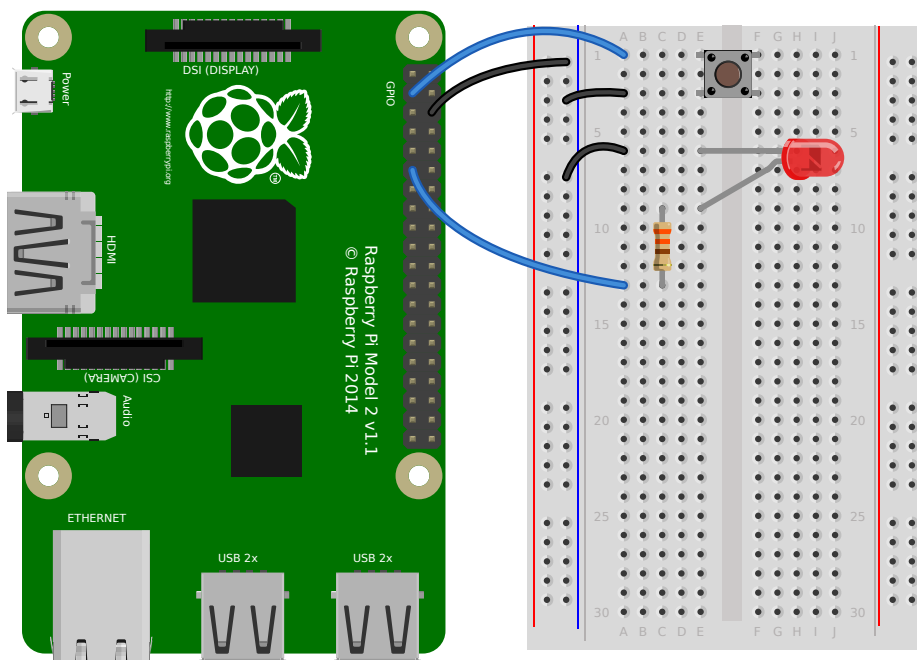

¹⁴ <https://docs.python.org/3.9/library/constants.html#None>

Turn on an *LED* (page 125) when a *Button* (page 105) is pressed:

```
from gpiozero import LED, Button
from signal import pause

led = LED(17)
button = Button(2)

button.when_pressed = led.on
button.when_released = led.off

pause()
```

Alternatively:

```
from gpiozero import LED, Button
from signal import pause

led = LED(17)
button = Button(2)

led.source = button

pause()
```

2.7 Button controlled camera

Using the button press to trigger PiCamera to take a picture using `button.when_pressed = camera.capture` would not work because the `capture()` method requires an output parameter. However, this can be achieved using a custom function which requires no parameters:

```
from gpiozero import Button
from picamera import PiCamera
from datetime import datetime
from signal import pause

button = Button(2)
camera = PiCamera()

def capture():
    camera.capture(f'/home/pi/{datetime.now():%Y-%m-%d-%H-%M-%S}.jpg')

button.when_pressed = capture

pause()
```

Another example could use one button to start and stop the camera preview, and another to capture:

```
from gpiozero import Button
from picamera import PiCamera
from datetime import datetime
from signal import pause

left_button = Button(2)
right_button = Button(3)
camera = PiCamera()

def capture():
    camera.capture(f'/home/pi/{datetime.now():%Y-%m-%d-%H-%M-%S}.jpg')
```

(continues on next page)

(continued from previous page)

```
left_button.when_pressed = camera.start_preview
left_button.when_released = camera.stop_preview
right_button.when_pressed = capture

pause()
```

2.8 Shutdown button

The *Button* (page 105) class also provides the ability to run a function when the button has been held for a given length of time. This example will shut down the Raspberry Pi when the button is held for 2 seconds:


```
from gpiozero import Button
from subprocess import check_call
from signal import pause

def shutdown():
    check_call(['sudo', 'poweroff'])

shutdown_btn = Button(17, hold_time=2)
shutdown_btn.when_held = shutdown

pause()
```

2.9 LEDBoard

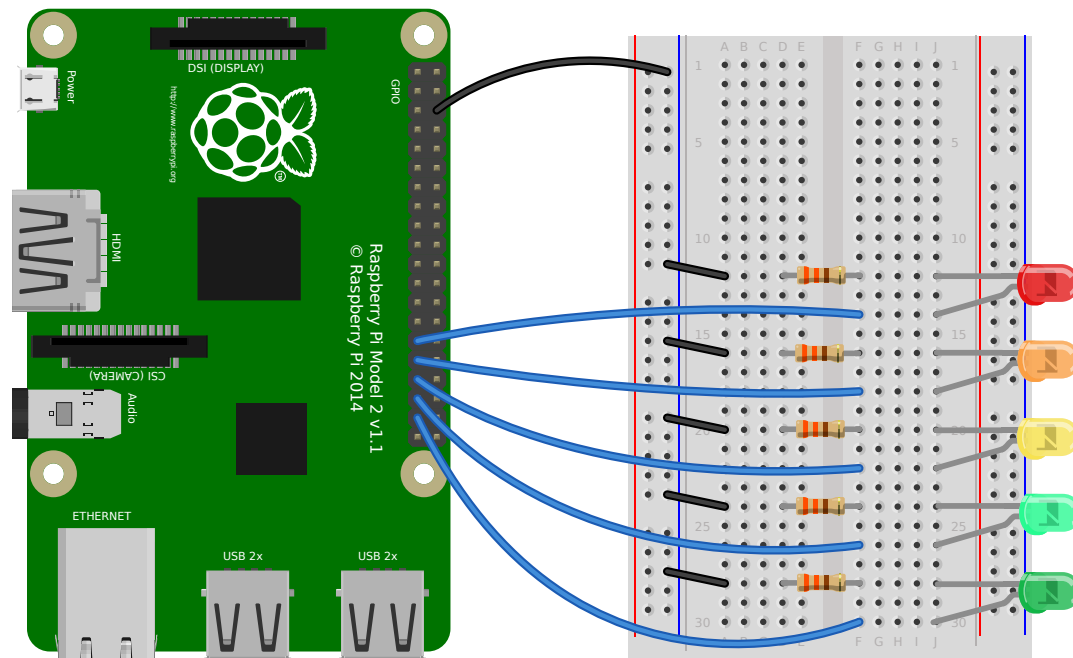

A collection of LEDs can be accessed using *LEDBoard* (page 157):

```
from gpiozero import LEDBoard
from time import sleep
from signal import pause

leds = LEDBoard(5, 6, 13, 19, 26)
```

(continues on next page)

(continued from previous page)

```
leds.on()
sleep(1)
leds.off()
sleep(1)
leds.value = (1, 0, 1, 0, 1)
sleep(1)
leds.blink()

pause()
```

Using [LEDBoard](#) (page 157) with `pwm=True` allows each LED's brightness to be controlled:

```
from gpiozero import LEDBoard
from signal import pause


leds = LEDBoard(5, 6, 13, 19, 26, pwm=True)

leds.value = (0.2, 0.4, 0.6, 0.8, 1.0)

pause()
```

See more [LEDBoard](#) (page 157) examples in the [advanced LEDBoard recipes](#) (page 37).

2.10 LEDBarGraph

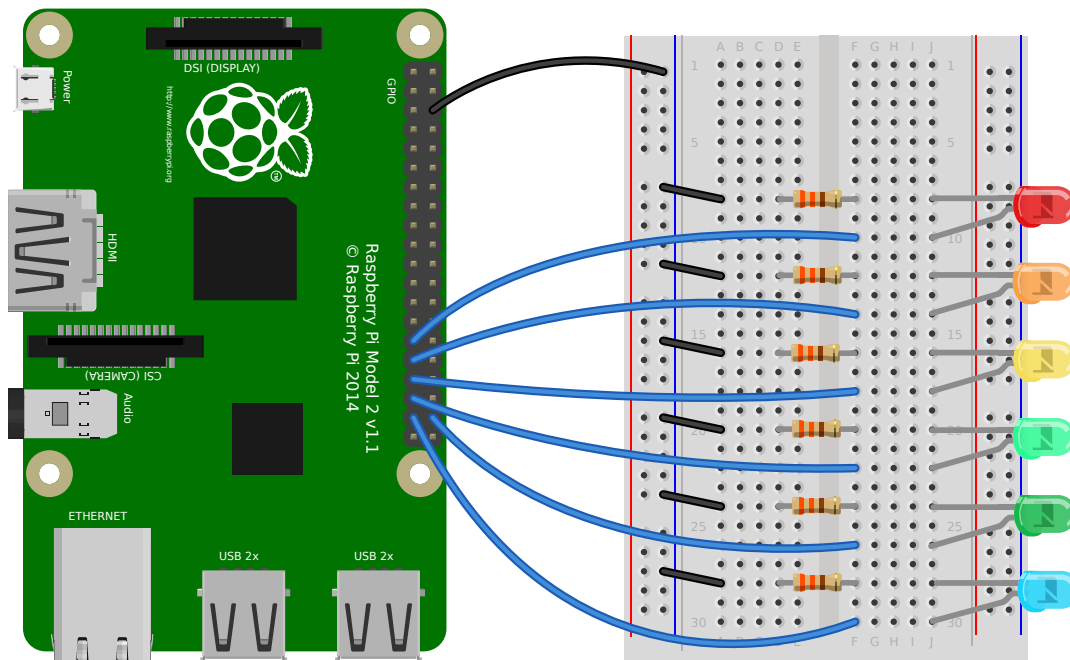

A collection of LEDs can be treated like a bar graph using [LEDBarGraph](#) (page 160):

```
from gpiozero import LEDBarGraph
from time import sleep

graph = LEDBarGraph(5, 6, 13, 19, 26, 20)

graph.value = 1 # (1, 1, 1, 1, 1, 1)
sleep(1)
```

(continues on next page)

(continued from previous page)

```
graph.value = 1/2 # (1, 1, 1, 0, 0, 0)
sleep(1)
graph.value = -1/2 # (0, 0, 0, 1, 1, 1)
sleep(1)
graph.value = 1/4 # (1, 0, 0, 0, 0, 0)
sleep(1)
graph.value = -1 # (1, 1, 1, 1, 1, 1)
sleep(1)
```

Note values are essentially rounded to account for the fact LEDs can only be on or off when `pwm=False` (the default).


However, using `LEDBarGraph` (page 160) with `pwm=True` allows more precise values using LED brightness:

```
from gpiozero import LEDBarGraph
from time import sleep

graph = LEDBarGraph(5, 6, 13, 19, 26, pwm=True)

graph.value = 1/10 # (0.5, 0, 0, 0, 0)
sleep(1)
graph.value = 3/10 # (1, 0.5, 0, 0, 0)
sleep(1)
graph.value = -3/10 # (0, 0, 0, 0.5, 1)
sleep(1)
graph.value = 9/10 # (1, 1, 1, 1, 0.5)
sleep(1)
graph.value = 95/100 # (1, 1, 1, 1, 0.75)
sleep(1)
```

2.11 LEDCharDisplay

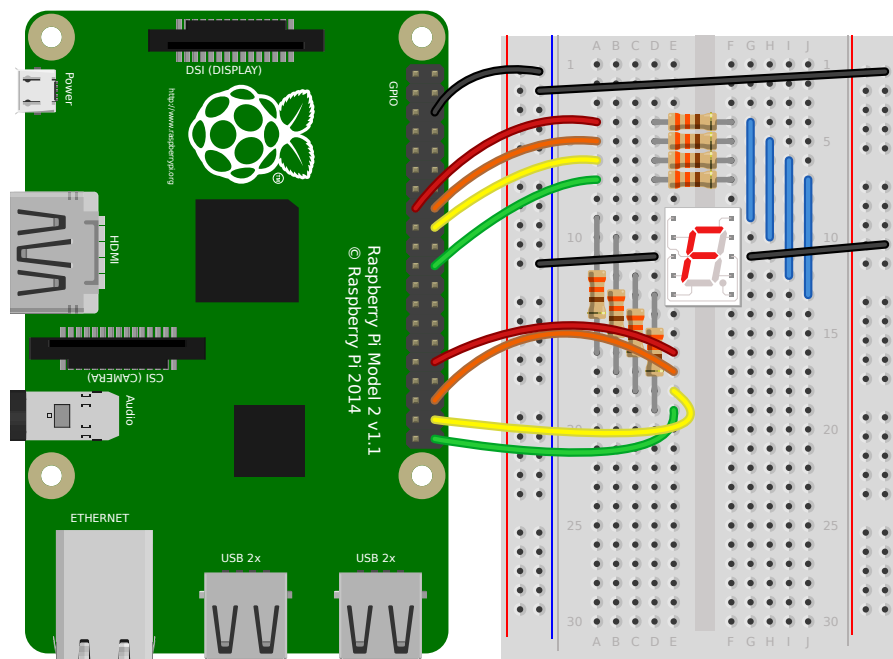

A common 7-segment display¹⁵ can be used to represent a variety of characters using `LEDCharDisplay` (page 162) (which actually supports an arbitrary number of segments):

¹⁵ https://en.wikipedia.org/wiki/Seven-segment_display


```

from gpiozero import LEDCharDisplay
from time import sleep

display = LEDCharDisplay(21, 20, 16, 22, 23, 24, 12, dp=25)

for char in '321GO':
    display.value = char
    sleep(1)

display.off()

```

Alternatively:

```

from gpiozero import LEDCharDisplay
from signal import pause


display = LEDCharDisplay(21, 20, 16, 22, 23, 24, 12, dp=25)
display.source_delay = 1
display.source = '321GO '

pause()

```

See a multi-character example in the *advanced recipes* (page 38) chapter.

2.12 Traffic Lights

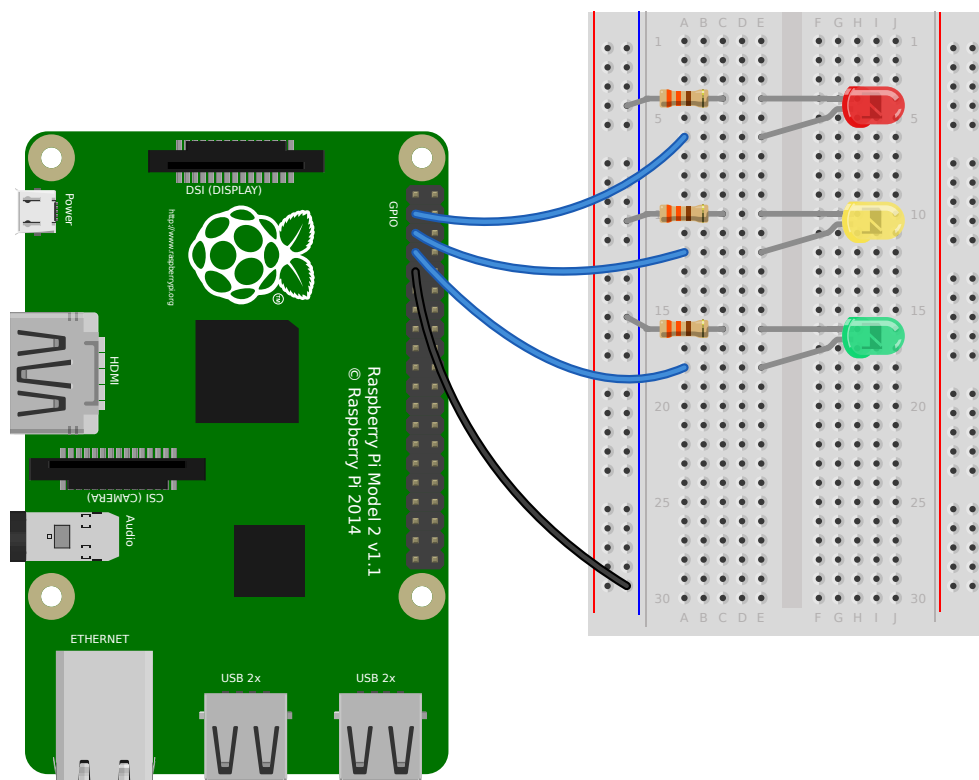

A full traffic lights system.

Using a *TrafficLights* (page 167) kit like Pi-Stop:

```

from gpiozero import TrafficLights
from time import sleep

```

(continues on next page)

(continued from previous page)

```
lights = TrafficLights(2, 3, 4)

lights.green.on()

while True:
    sleep(10)
    lights.green.off()
    lights.amber.on()
    sleep(1)
    lights.amber.off()
    lights.red.on()
    sleep(10)
    lights.amber.on()
    sleep(1)
    lights.green.on()
    lights.amber.off()
    lights.red.off()
```

Alternatively:

```
from gpiozero import TrafficLights
from time import sleep
from signal import pause

lights = TrafficLights(2, 3, 4)

def traffic_light_sequence():
    while True:
        yield (0, 0, 1) # green
        sleep(10)
        yield (0, 1, 0) # amber
        sleep(1)
        yield (1, 0, 0) # red
        sleep(10)
        yield (1, 1, 0) # red+amber
        sleep(1)

lights.source = traffic_light_sequence()

pause()
```

Using [LED](#) (page 125) components:

```
from gpiozero import LED
from time import sleep

red = LED(2)
amber = LED(3)
green = LED(4)

green.on()
amber.off()
red.off()

while True:
    sleep(10)
    green.off()
    amber.on()
    sleep(1)
    amber.off()
```

(continues on next page)

(continued from previous page)

```

red.on()
sleep(10)
amber.on()
sleep(1)
green.on()
amber.off()
red.off()

```

2.13 Push button stop motion

Capture a picture with the camera module every time a button is pressed:

```

from gpiozero import Button
from picamera import PiCamera


button = Button(2)
camera = PiCamera()

camera.start_preview()
frame = 1
while True:
    button.wait_for_press()
    camera.capture(f'/home/pi/frame{frame:03d}.jpg')
    frame += 1

```

See [Push Button Stop Motion](#)¹⁶ for a full resource.

2.14 Reaction Game

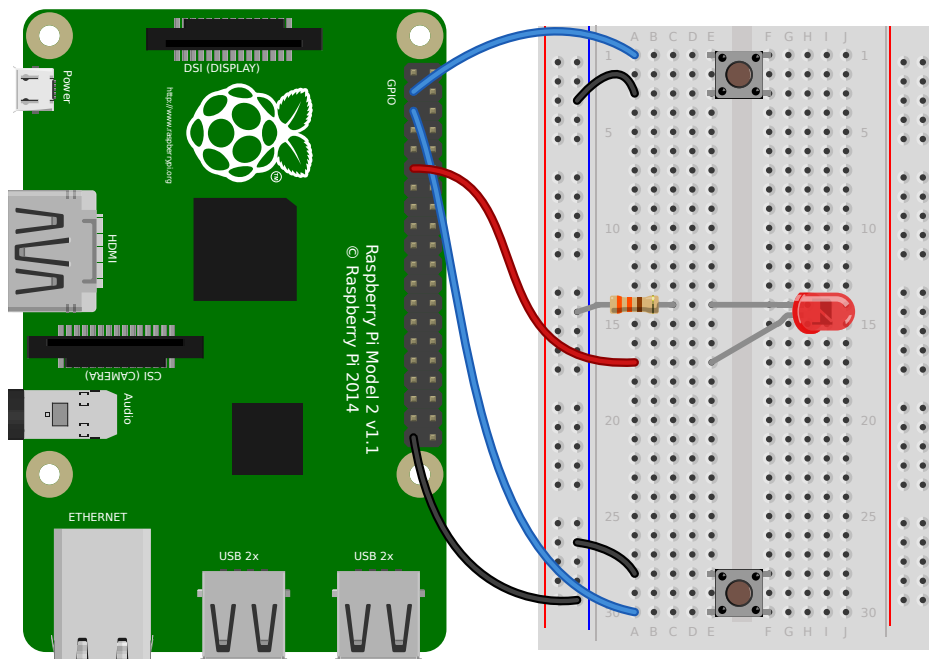

When you see the light come on, the first person to press their button wins!

¹⁶ <https://projects.raspberrypi.org/en/projects/push-button-stop-motion>

```
from gpiozero import Button, LED
from time import sleep
import random

led = LED(17)

player_1 = Button(2)
player_2 = Button(3)


time = random.uniform(5, 10)
sleep(time)
led.on()

while True:
    if player_1.is_pressed:
        print("Player 1 wins!")
        break
    if player_2.is_pressed:
        print("Player 2 wins!")
        break

led.off()
```

See [Quick Reaction Game](#)¹⁷ for a full resource.

2.15 GPIO Music Box

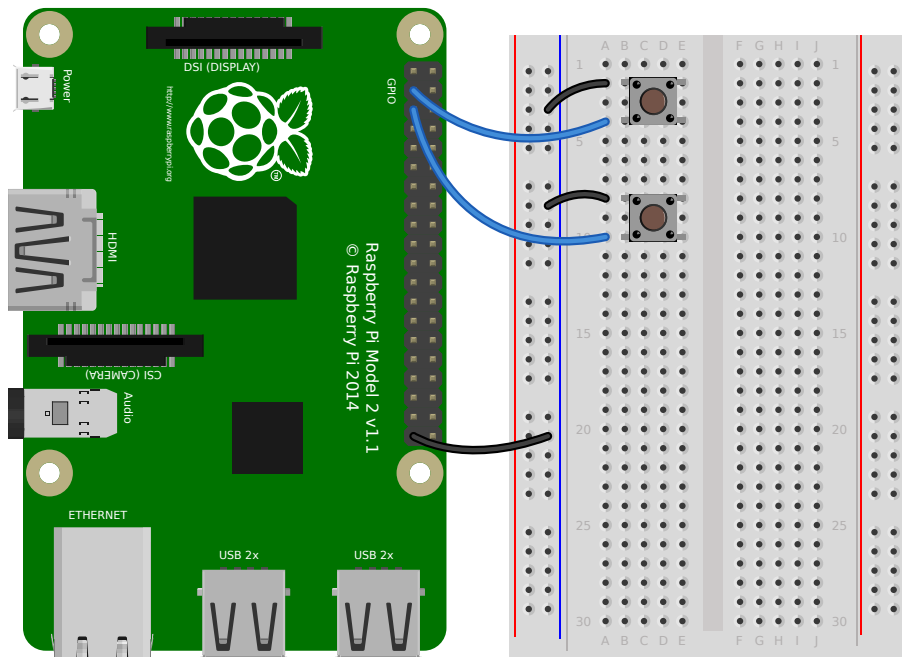

Each button plays a different sound!

```
from gpiozero import Button
import pygame.mixer
from pygame.mixer import Sound
from signal import pause
```

(continues on next page)

¹⁷ <https://projects.raspberrypi.org/en/projects/python-quick-reaction-game>

(continued from previous page)

```

pygame.mixer.init()

button_sounds = {
    Button(2): Sound("samples/drum_tom_mid_hard.wav"),
    Button(3): Sound("samples/drum_cymbal_open.wav"),
}

for button, sound in button_sounds.items():
    button.when_pressed = sound.play

pause()

```

See [GPIO Music Box](#)¹⁸ for a full resource.

2.16 All on when pressed

While the button is pressed down, the buzzer and all the lights come on.

FishDish (page 173):

```

from gpiozero import FishDish
from signal import pause

fish = FishDish()

fish.button.when_pressed = fish.on
fish.button.when_released = fish.off

pause()

```

Ryanteck *TrafficHat* (page 173):

```

from gpiozero import TrafficHat
from signal import pause

th = TrafficHat()

th.button.when_pressed = th.on
th.button.when_released = th.off

pause()

```

Using [LED](#) (page 125), [Buzzer](#) (page 131), and [Button](#) (page 105) components:

```

from gpiozero import LED, Buzzer, Button
from signal import pause

button = Button(2)
buzzer = Buzzer(3)
red = LED(4)
amber = LED(5)
green = LED(6)

things = [red, amber, green, buzzer]

def things_on():
    for thing in things:

```

(continues on next page)

¹⁸ <https://projects.raspberrypi.org/en/projects/gpio-music-box>

(continued from previous page)

```

thing.on()


def things_off():
    for thing in things:
        thing.off()

button.when_pressed = things_on
button.when_released = things_off

pause()

```

2.17 Full color LED

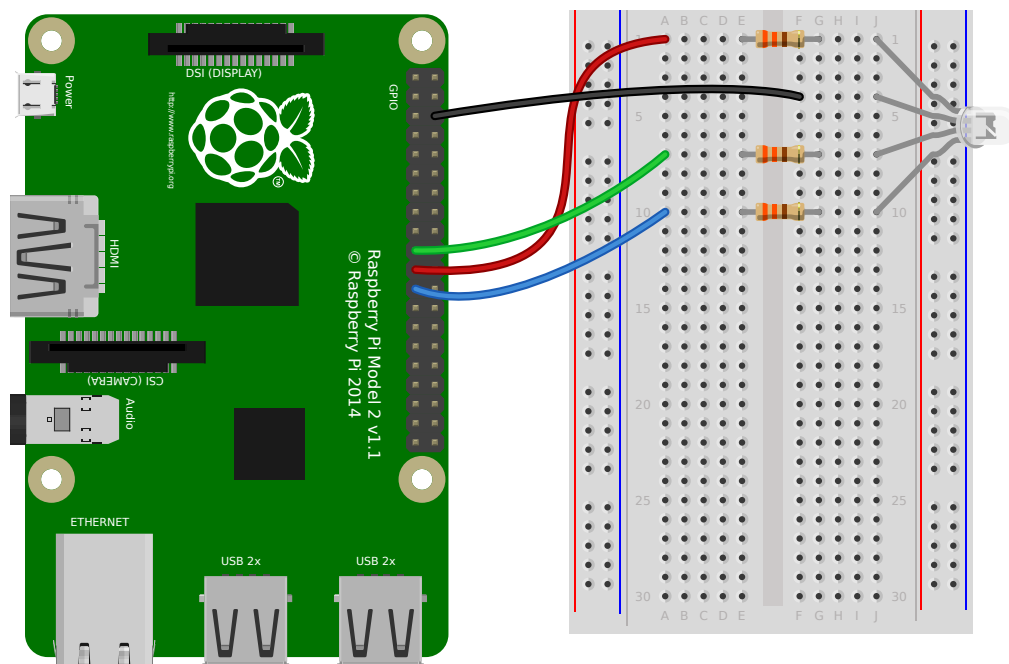

Making colours with an *RGBLED* (page 128):

```

from gpiozero import RGBLED
from time import sleep

led = RGBLED(red=9, green=10, blue=11)

led.red = 1 # full red
sleep(1)
led.red = 0.5 # half red
sleep(1)

led.color = (0, 1, 0) # full green
sleep(1)
led.color = (1, 0, 1) # magenta
sleep(1)
led.color = (1, 1, 0) # yellow
sleep(1)
led.color = (0, 1, 1) # cyan
sleep(1)
led.color = (1, 1, 1) # white
sleep(1)

```


(continues on next page)

(continued from previous page)

```
led.color = (0, 0, 0) # off
sleep(1)

# slowly increase intensity of blue
for n in range(100):
    led.blue = n/100
    sleep(0.1)
```

2.18 Motion sensor

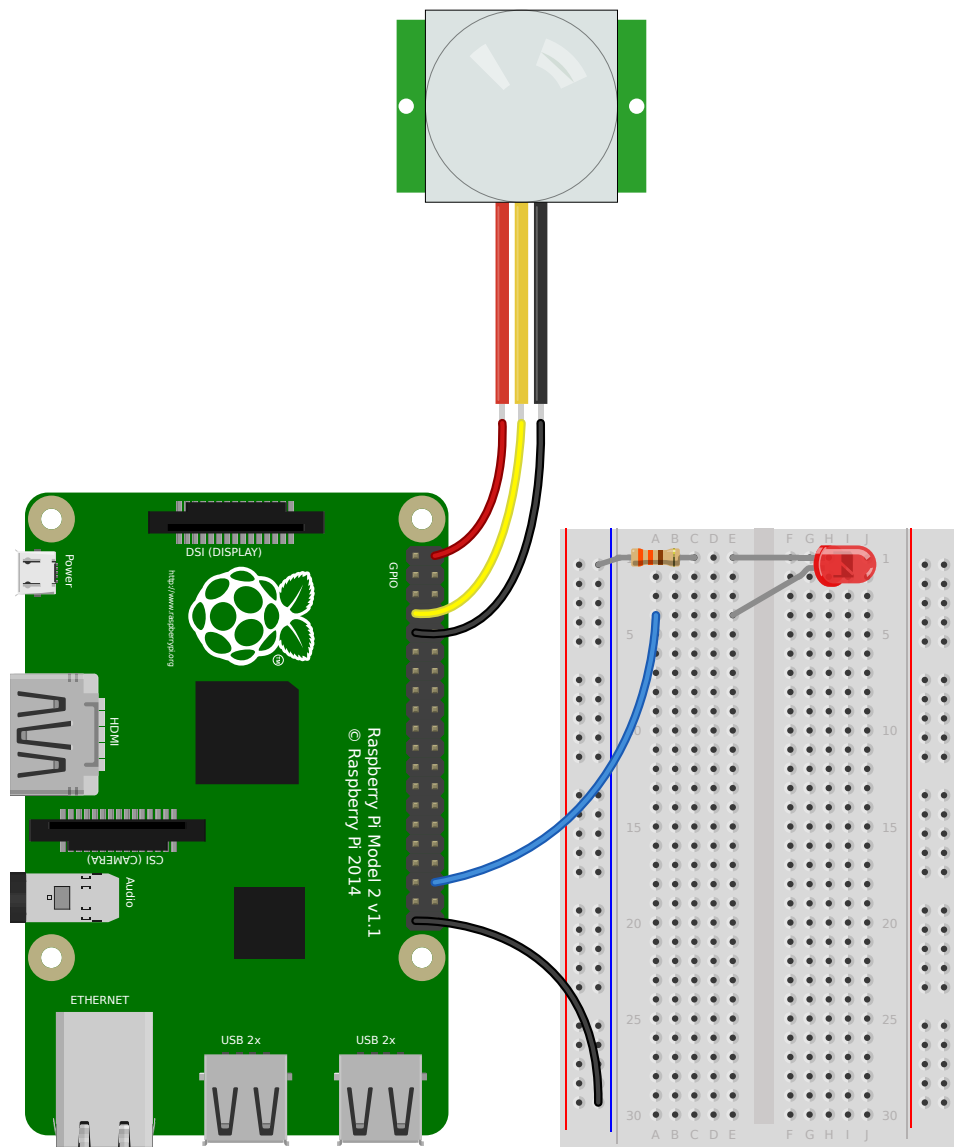

Light an *LED* (page 125) when a *MotionSensor* (page 109) detects motion:

```
from gpiozero import MotionSensor, LED
from signal import pause

pir = MotionSensor(4)
led = LED(16)
```


(continues on next page)

(continued from previous page)

```
pir.when_motion = led.on
pir.when_no_motion = led.off

pause()
```

2.19 Light sensor

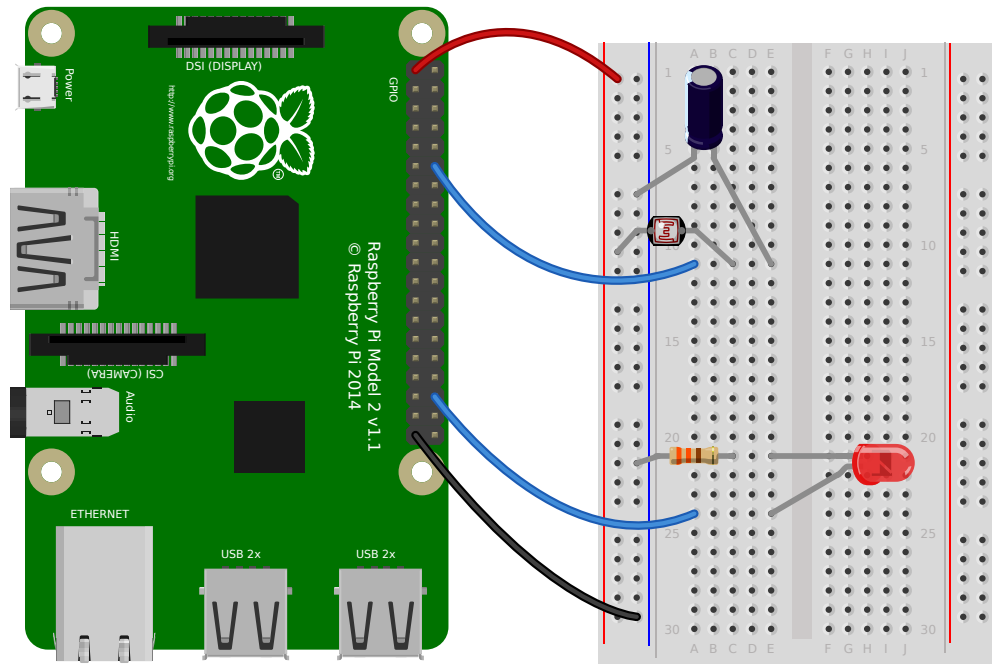

Have a *LightSensor* (page 111) detect light and dark:

```
from gpiozero import LightSensor

sensor = LightSensor(18)

while True:
    sensor.wait_for_light()
    print("It's light! :)")
    sensor.wait_for_dark()
    print("It's dark :(")
```

Run a function when the light changes:

```
from gpiozero import LightSensor, LED
from signal import pause

sensor = LightSensor(18)
led = LED(16)

sensor.when_dark = led.on
sensor.when_light = led.off

pause()
```

Or make a *PWMLED* (page 127) change brightness according to the detected light level:



```
from gpiozero import LightSensor, PWMLED
from signal import pause

sensor = LightSensor(18)
led = PWMLED(16)

led.source = sensor

pause()
```

2.20 Distance sensor

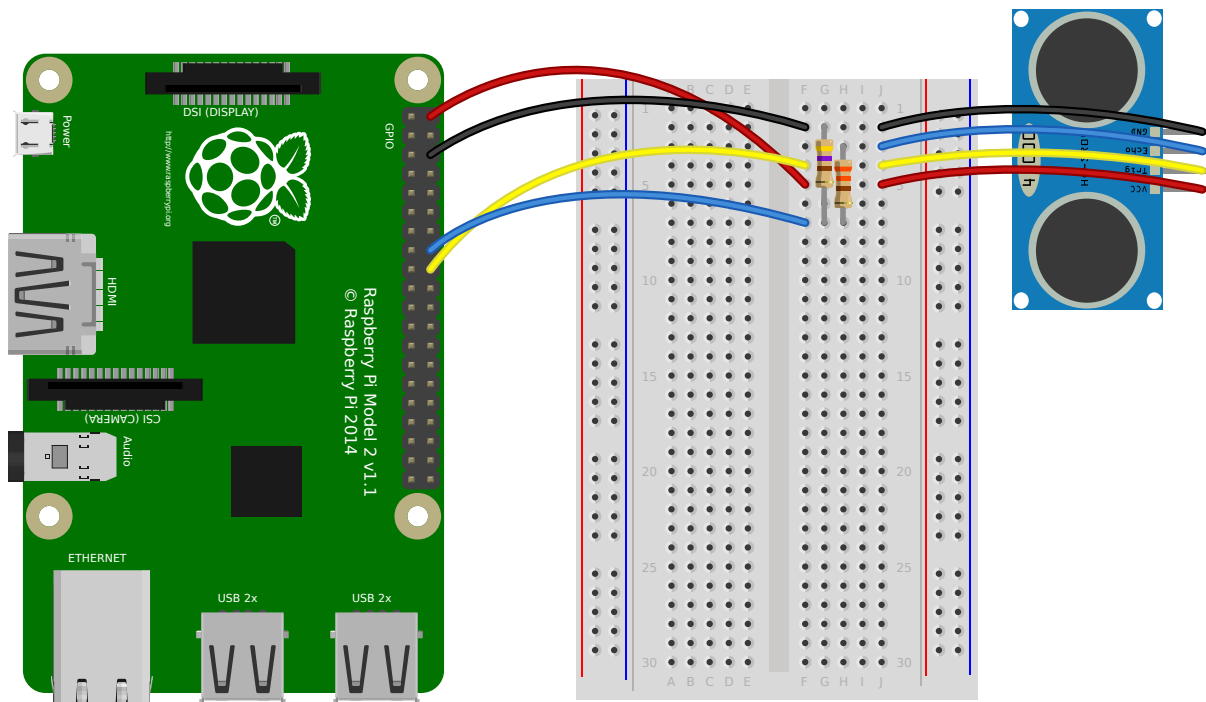

Note: In the diagram above, the wires leading from the sensor to the breadboard can be omitted; simply plug the sensor directly into the breadboard facing the edge (unfortunately this is difficult to illustrate in the diagram without the sensor's diagram obscuring most of the breadboard!)

Have a *DistanceSensor* (page 113) detect the distance to the nearest object:

```
from gpiozero import DistanceSensor
from time import sleep

sensor = DistanceSensor(23, 24)

while True:
    print('Distance to nearest object is', sensor.distance, 'm')
    sleep(1)
```

Run a function when something gets near the sensor:

```
from gpiozero import DistanceSensor, LED
from signal import pause
```

(continues on next page)


(continued from previous page)

```
sensor = DistanceSensor(23, 24, max_distance=1, threshold_distance=0.2)
led = LED(16)

sensor.when_in_range = led.on
sensor.when_out_of_range = led.off

pause()
```

2.21 Rotary encoder

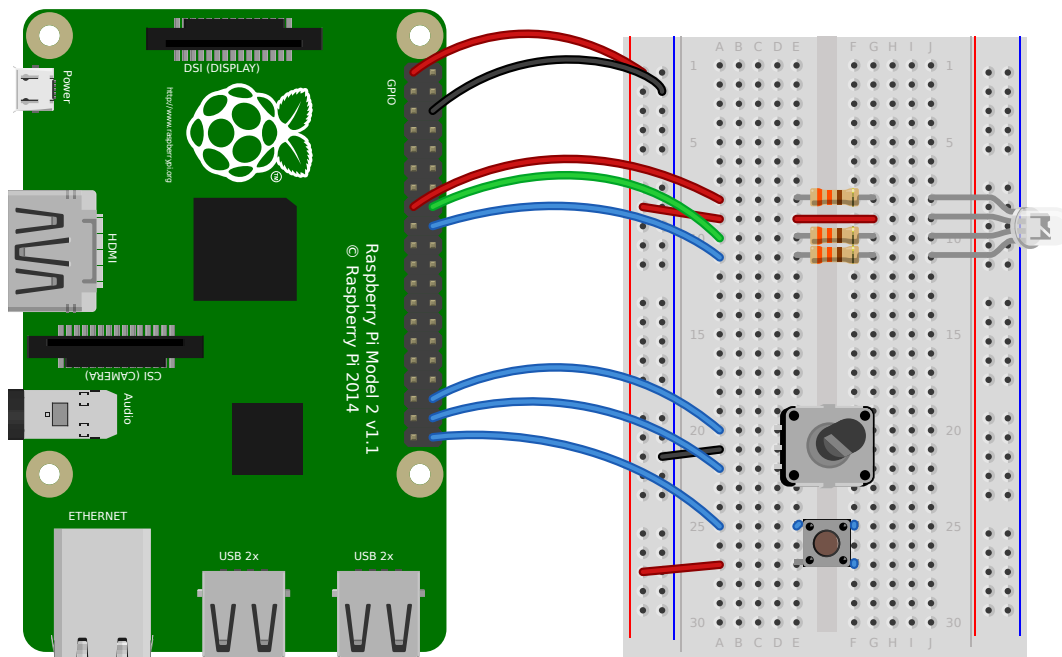

Note: In this recipe, I've used a common *anode* RGB LED. Often, Pi projects use common *cathode* RGB LEDs because they're slightly easier to think about electrically. However, in this case all three components can be found in an illuminated rotary encoder which incorporates a common anode RGB LED, and a momentary push button. This is also the reason for the button being wired active-low, contrary to most other examples in this documentation.

For the sake of clarity, the diagram shows the three separate components, but this same circuit will work equally well with this commonly available [illuminated rotary encoder](https://shop.pimoroni.com/products/rotary-encoder-illuminated-rgb)¹⁹ instead.

Have a [RotaryEncoder](#) (page 115), an [RGBLED](#) (page 128), and [Button](#) (page 105) act as a color picker:

```
from threading import Event
from colorzero import Color
from gpiozero import RotaryEncoder, RGBLED, Button

rotor = RotaryEncoder(16, 20, wrap=True, max_steps=180)
rotor.steps = -180
led = RGBLED(22, 23, 24, active_high=False)
btn = Button(21, pull_up=False)
led.color = Color('#f00')
done = Event()

def change_hue():
```

(continues on next page)

¹⁹ <https://shop.pimoroni.com/products/rotary-encoder-illuminated-rgb>

(continued from previous page)

```
# Scale the rotor steps (-180..180) to 0..1
hue = (rotor.steps + 180) / 360
led.color = Color(h=hue, s=1, v=1)

def show_color():
    print(f'Hue {led.color.hue.deg:.1f}° = {led.color.html}')

def stop_script():
    print('Exiting')
    done.set()

print('Select a color by turning the knob')
rotor.when_rotated = change_hue
print('Push the button to see the HTML code for the color')
btn.when_released = show_color
print('Hold the button to exit')
btn.when_held = stop_script
done.wait()
```

2.22 Servo

Control a [Servo](#) (page 137) between its minimum, mid-point and maximum positions in sequence:

```
from gpiozero import Servo
from time import sleep

servo = Servo(17)

while True:
    servo.min()
    sleep(2)
    servo.mid()
    sleep(2)
    servo.max()
    sleep(2)
```

Use a button to control the [Servo](#) (page 137) between its minimum and maximum positions:

```
from gpiozero import Servo, Button

servo = Servo(17)
btn = Button(14)

while True:
    servo.min()
    btn.wait_for_press()
    servo.max()
    btn.wait_for_press()
```

Automate the [Servo](#) (page 137) to continuously slowly sweep:

```
from gpiozero import Servo
from gpiozero.tools import sin_values
from signal import pause

servo = Servo(17)

servo.source = sin_values()
```

(continues on next page)

(continued from previous page)

```
servo.source_delay = 0.1

pause()
```


Use *AngularServo* (page 139) so you can specify an angle:

```
from gpiozero import AngularServo
from time import sleep

servo = AngularServo(17, min_angle=-90, max_angle=90)

while True:
    servo.angle = -90
    sleep(2)
    servo.angle = -45
    sleep(2)
    servo.angle = 0
    sleep(2)
    servo.angle = 45
    sleep(2)
    servo.angle = 90
    sleep(2)
```

2.23 Motors

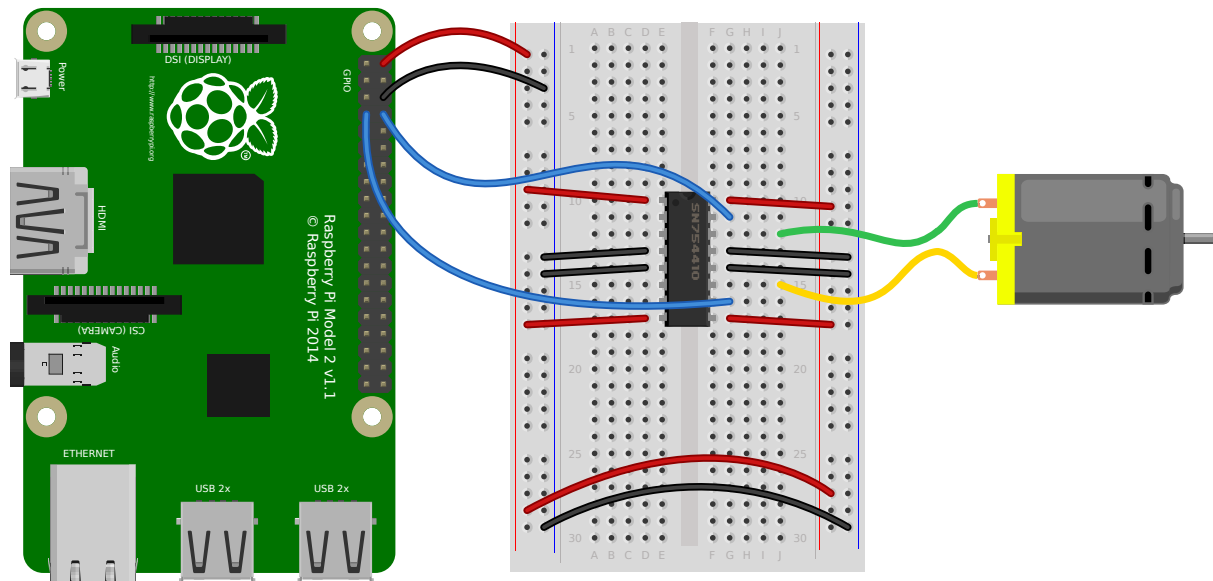


Spin a *Motor* (page 134) around forwards and backwards:

```
from gpiozero import Motor
from time import sleep

motor = Motor(forward=4, backward=14)

while True:
    motor.forward()
    sleep(5)
    motor.backward()
    sleep(5)
```

2.24 Robot

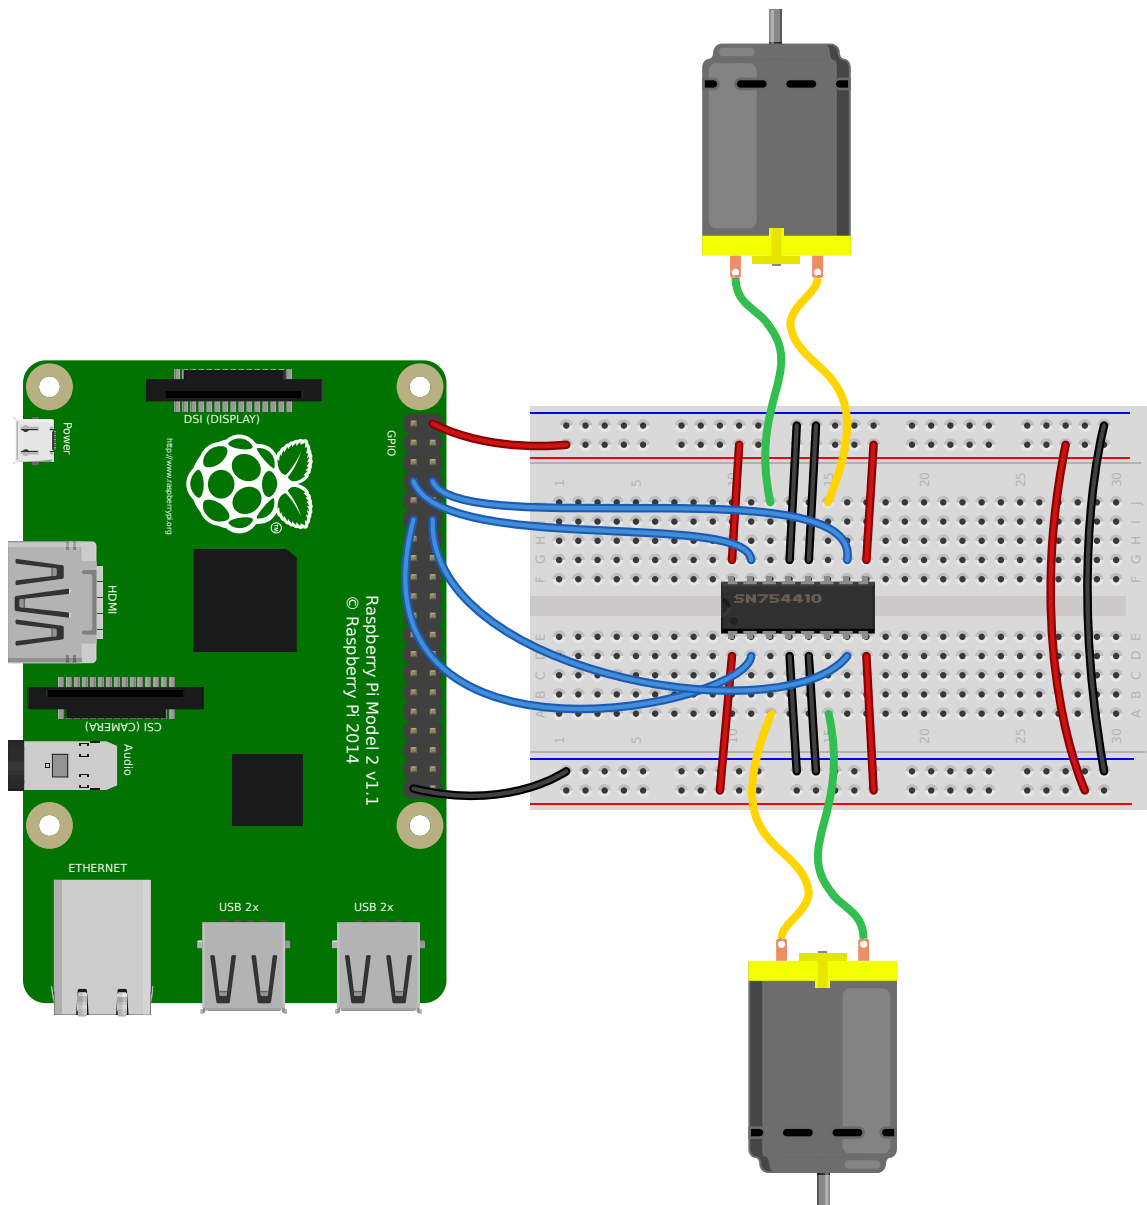

Make a [Robot](#) (page 176) drive around in (roughly) a square:

```
from gpiozero import Robot, Motor
from time import sleep

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))

for i in range(4):
    robot.forward()
    sleep(10)
    robot.right()
    sleep(1)
```

Make a [Robot](#) (page 176) with a [DistanceSensor](#) (page 113) that runs away when things get within 20cm of it:

```
from gpiozero import Robot, Motor, DistanceSensor
from signal import pause
```


(continues on next page)

(continued from previous page)

```
sensor = DistanceSensor(23, 24, max_distance=1, threshold_distance=0.2)
robot = Robot(left=Motor(4, 14), right=Motor(17, 18))

sensor.when_in_range = robot.backward
sensor.when_out_of_range = robot.stop
pause()
```

2.25 Button controlled robot

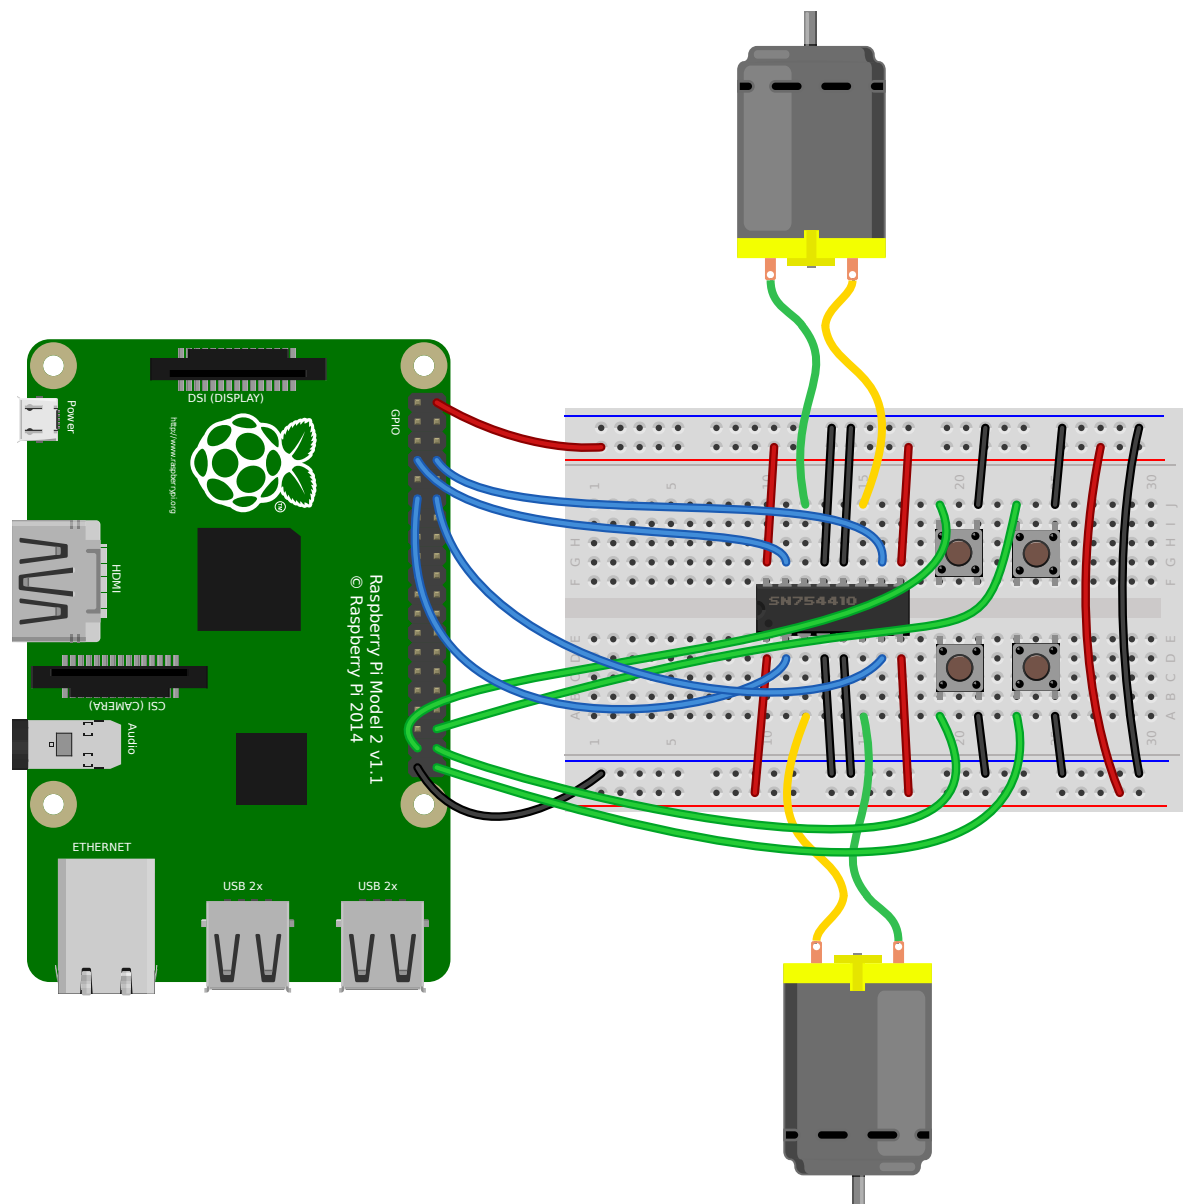

Use four GPIO buttons as forward/back/left/right controls for a *Robot* (page 176):

```
from gpiozero import Robot, Motor, Button
from signal import pause

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))
```

(continues on next page)

(continued from previous page)

```
left = Button(26)
right = Button(16)
fw = Button(21)
bw = Button(20)

fw.when_pressed = robot.forward
fw.when_released = robot.stop


left.when_pressed = robot.left
left.when_released = robot.stop

right.when_pressed = robot.right
right.when_released = robot.stop

bw.when_pressed = robot.backward
bw.when_released = robot.stop

pause()
```

2.26 Keyboard controlled robot

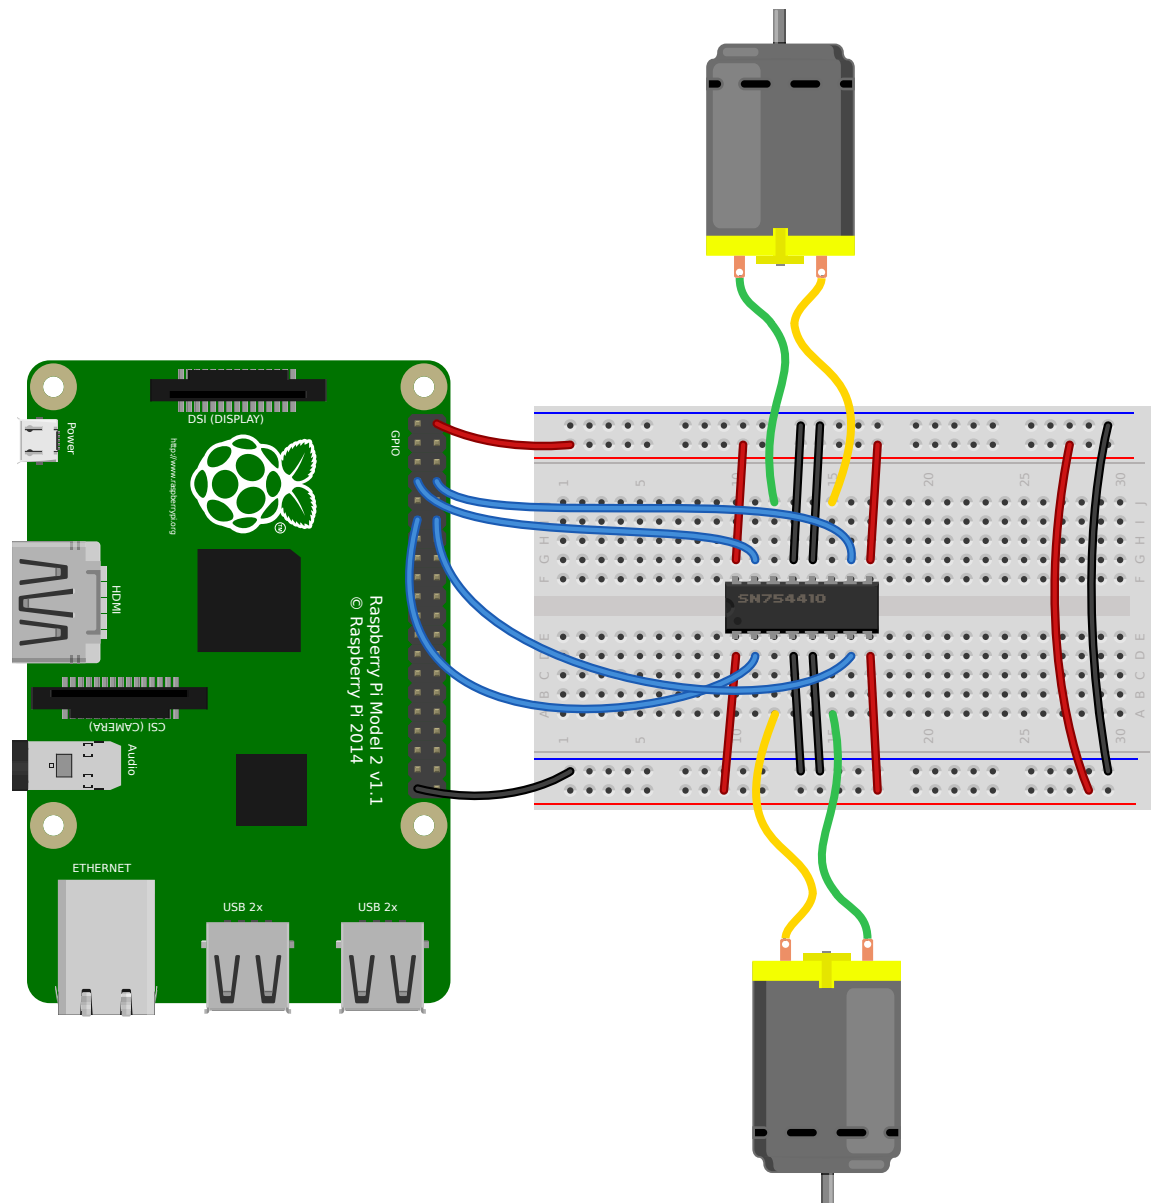

Use up/down/left/right keys to control a [Robot](#) (page 176):

```
import curses
from gpiozero import Robot, Motor

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))

actions = {
    curses.KEY_UP:    robot.forward,
    curses.KEY_DOWN:  robot.backward,
    curses.KEY_LEFT:  robot.left,
    curses.KEY_RIGHT: robot.right,
}

def main(window):
    next_key = None
    while True:
        curses.halfdelay(1)
```

(continues on next page)

(continued from previous page)

```

    if next_key is None:
        key = window.getch()
    else:
        key = next_key
        next_key = None
    if key != -1:
        # KEY_PRESSED
        curses.halfdelay(3)
        action = actions.get(key)
        if action is not None:
            action()
        next_key = key
        while next_key == key:
            next_key = window.getch()
        # KEY_RELEASED
        robot.stop()

curses.wrapper(main)

```

Note: This recipe uses the standard `curses`²⁰ module. This module requires that Python is running in a terminal in order to work correctly, hence this recipe will *not* work in environments like IDLE.

If you prefer a version that works under IDLE, the following recipe should suffice:

```

from gpiozero import Robot, Motor
from evdev import InputDevice, list_devices, ecodes

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))

# Get the list of available input devices
devices = [InputDevice(device) for device in list_devices()]
# Filter out everything that's not a keyboard. Keyboards are defined as any
# device which has keys, and which specifically has keys 1..31 (roughly Esc,
# the numeric keys, the first row of QWERTY plus a few more) and which does
# *not* have key 0 (reserved)
must_have = {i for i in range(1, 32)}
must_not_have = {0}
devices = [
    dev
    for dev in devices
    for keys in (set(dev.capabilities().get(ecodes.EV_KEY, [])),)
    if must_have.issubset(keys)
    and must_not_have.isdisjoint(keys)
]
# Pick the first keyboard
keyboard = devices[0]

keypress_actions = {
    ecodes.KEY_UP: robot.forward,
    ecodes.KEY_DOWN: robot.backward,
    ecodes.KEY_LEFT: robot.left,
    ecodes.KEY_RIGHT: robot.right,
}

for event in keyboard.read_loop():
    if event.type == ecodes.EV_KEY and event.code in keypress_actions:
        if event.value == 1: # key pressed
            keypress_actions[event.code]()

```

(continues on next page)


²⁰ <https://docs.python.org/3.9/library/curses.html#module-curses>

(continued from previous page)

```
if event.value == 0: # key released
    robot.stop()
```

Note: This recipe uses the third-party `evdev` module. Install this library with `sudo pip3 install evdev` first. Be aware that `evdev` will only work with local input devices; this recipe will *not* work over SSH.

2.27 Motion sensor robot

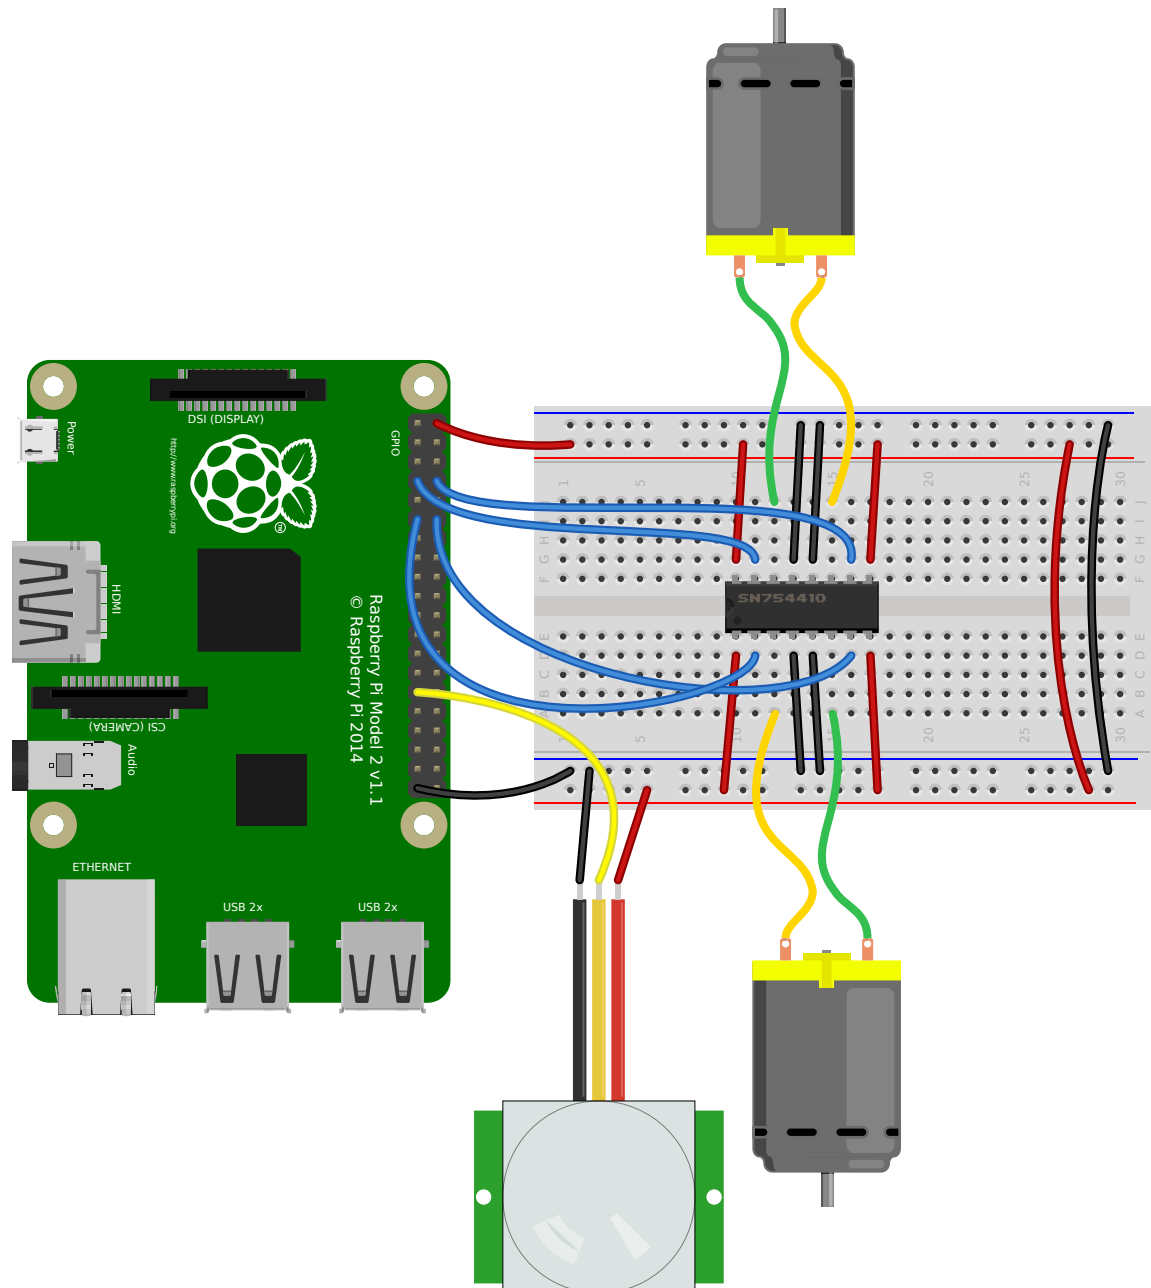

Make a robot drive forward when it detects motion:

```

from gpiozero import Robot, Motor, MotionSensor
from signal import pause

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))
pir = MotionSensor(5)

pir.when_motion = robot.forward
pir.when_no_motion = robot.stop

pause()

```

Alternatively:

```

from gpiozero import Robot, Motor, MotionSensor
from gpiozero.tools import zip_values
from signal import pause


robot = Robot(left=Motor(4, 14), right=Motor(17, 18))
pir = MotionSensor(5)

robot.source = zip_values(pir, pir)

pause()

```

2.28 Potentiometer

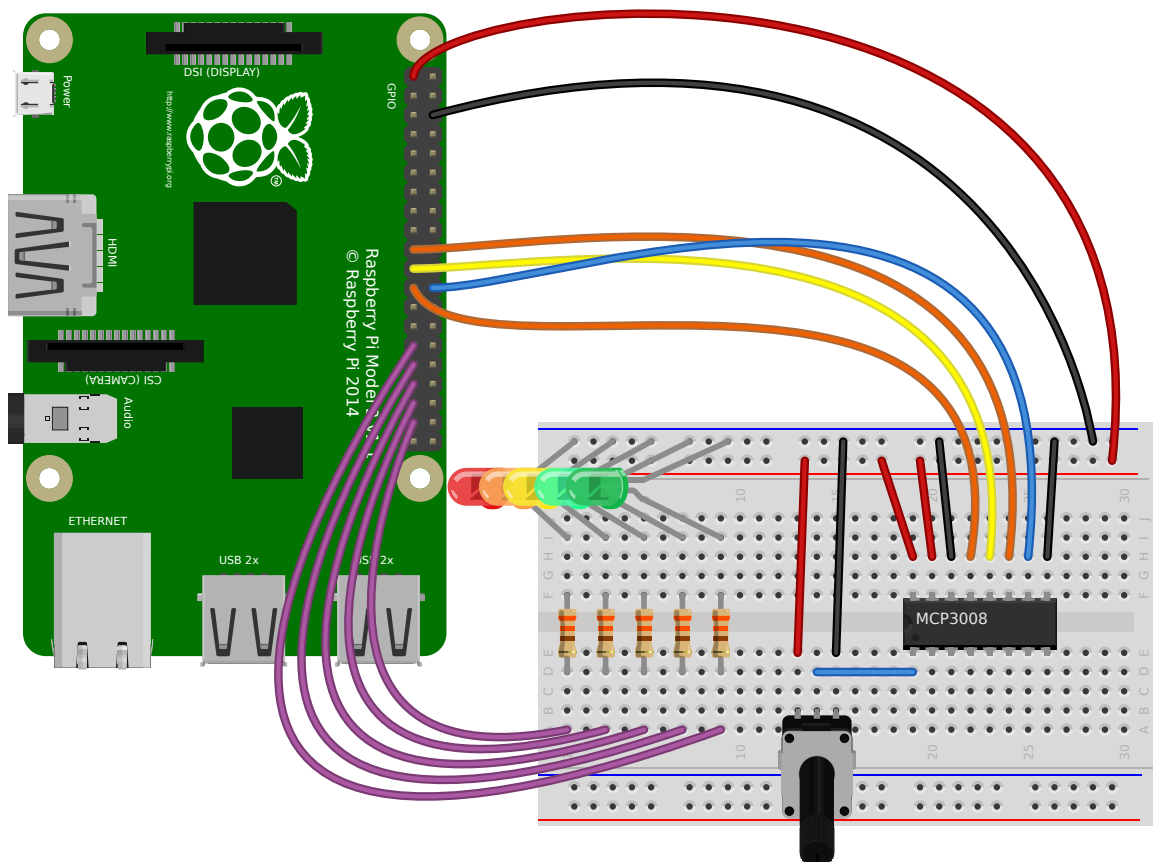

Continually print the value of a potentiometer (values between 0 and 1) connected to a [MCP3008](#) (page 149) analog to digital converter:

```
from gpiozero import MCP3008

pot = MCP3008(channel=0)

while True:
    print(pot.value)
```

Present the value of a potentiometer on an LED bar graph using PWM to represent states that won't "fill" an LED:

```
from gpiozero import LEDBarGraph, MCP3008
from signal import pause

graph = LEDBarGraph(5, 6, 13, 19, 26, pwm=True)
pot = MCP3008(channel=0)

graph.source = pot

pause()
```

2.29 Measure temperature with an ADC

Wire a TMP36 temperature sensor to the first channel of an *MCP3008* (page 149) analog to digital converter:


```
from gpiozero import MCP3008
from time import sleep

def convert_temp(gen):
    for value in gen:
        yield (value * 3.3 - 0.5) * 100

adc = MCP3008(channel=0)

for temp in convert_temp(adc.values):
    print('The temperature is', temp, 'C')
    sleep(1)
```

2.30 Full color LED controlled by 3 potentiometers

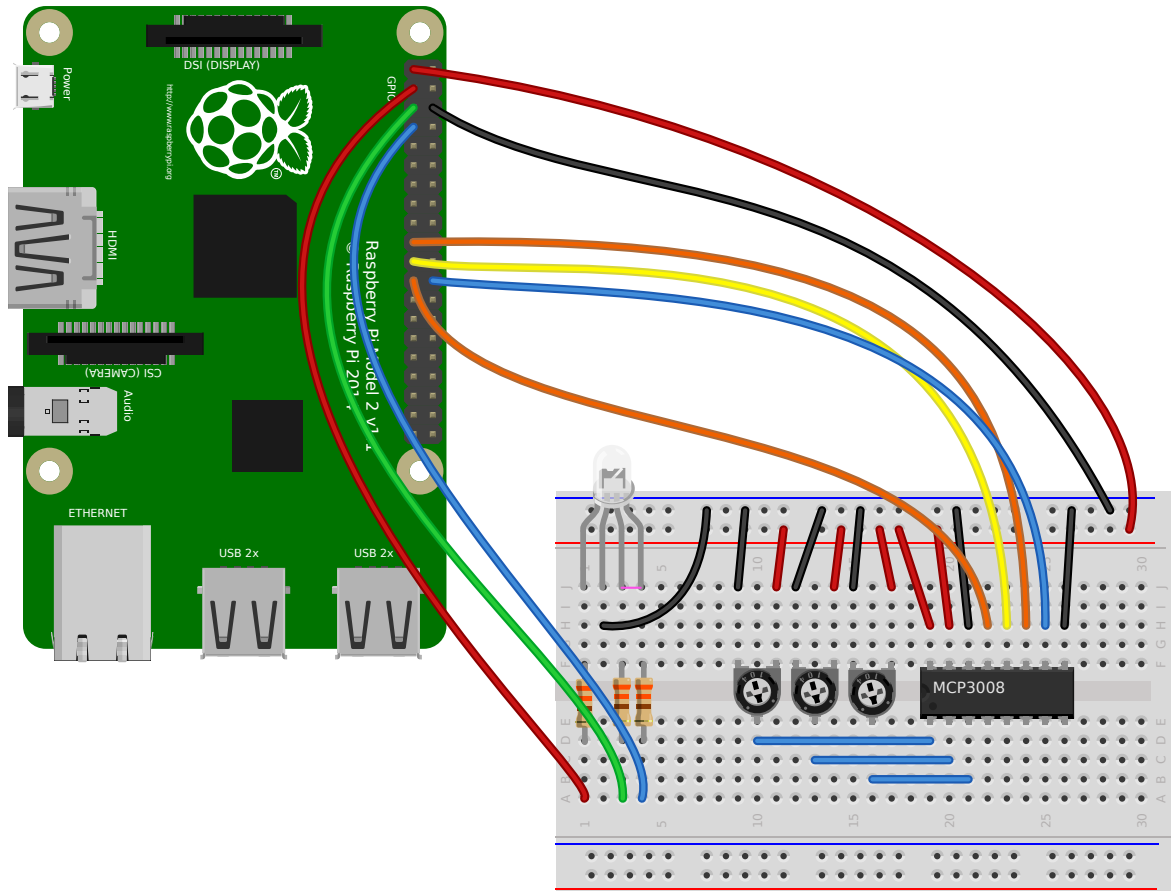

Wire up three potentiometers (for red, green and blue) and use each of their values to make up the colour of the LED:

```
from gpiozero import RGBLED, MCP3008

led = RGBLED(red=2, green=3, blue=4)
red_pot = MCP3008(channel=0)
green_pot = MCP3008(channel=1)
blue_pot = MCP3008(channel=2)

while True:
    led.red = red_pot.value
    led.green = green_pot.value
    led.blue = blue_pot.value
```

Alternatively, the following example is identical, but uses the `source` (page 200) property rather than a `while`²¹ loop:

```
from gpiozero import RGBLED, MCP3008
from gpiozero.tools import zip_values
from signal import pause

led = RGBLED(2, 3, 4)
red_pot = MCP3008(0)
green_pot = MCP3008(1)
blue_pot = MCP3008(2)
```

(continues on next page)

²¹ https://docs.python.org/3.9/reference/compound_stmts.html#while

(continued from previous page)

```
led.source = zip_values(red_pot, green_pot, blue_pot)

pause()
```

2.31 Timed heat lamp

If you have a pet (e.g. a tortoise) which requires a heat lamp to be switched on for a certain amount of time each day, you can use an [Energenie Pi-mote](#)²² to remotely control the lamp, and the `TimeOfDay` (page 190) class to control the timing:

```
from gpiozero import Energenie, TimeOfDay
from datetime import time
from signal import pause

lamp = Energenie(1)
daytime = TimeOfDay(time(8), time(20))

daytime.when_activated = lamp.on
daytime.when_deactivated = lamp.off

pause()
```

2.32 Internet connection status indicator

You can use a pair of green and red LEDs to indicate whether or not your internet connection is working. Simply use the `PingServer` (page 191) class to identify whether a ping to `google.com` is successful. If successful, the green LED is lit, and if not, the red LED is lit:

```
from gpiozero import LED, PingServer
from gpiozero.tools import negated
from signal import pause

green = LED(17)
red = LED(18)

google = PingServer('google.com')

google.when_activated = green.on
google.when_deactivated = green.off
red.source = negated(green)

pause()
```

²² <https://energenie4u.co.uk/catalogue/product/ENER002-2PI>

2.33 CPU Temperature Bar Graph

You can read the Raspberry Pi’s own CPU temperature using the built-in *CPUTemperature* (page 192) class, and display this on a “bar graph” of LEDs:

```
from gpiozero import LEDBarGraph, CPUTemperature
from signal import pause

cpu = CPUTemperature(min_temp=50, max_temp=90)
leds = LEDBarGraph(2, 3, 4, 5, 6, 7, 8, pwm=True)

leds.source = cpu

pause()
```

2.34 More recipes

Continue to:

- *Advanced Recipes* (page 37)
- *Remote GPIO Recipes* (page 53)

ADVANCED RECIPES

The following recipes demonstrate some of the capabilities of the GPIO Zero library. Please note that all recipes are written assuming Python 3. Recipes *may* work under Python 2, but no guarantees!

3.1 LEDBoard

You can iterate over the LEDs in a *LEDBoard* (page 157) object one-by-one:

```
from gpiozero import LEDBoard
from time import sleep

leds = LEDBoard(5, 6, 13, 19, 26)

for led in leds:
    led.on()
    sleep(1)
    led.off()
```

LEDBoard (page 157) also supports indexing. This means you can access the individual *LED* (page 125) objects using `leds[i]` where `i` is an integer from 0 up to (not including) the number of LEDs:

```
from gpiozero import LEDBoard
from time import sleep

leds = LEDBoard(2, 3, 4, 5, 6, 7, 8, 9)

leds[0].on() # first led on
sleep(1)
leds[7].on() # last led on
sleep(1)
leds[-1].off() # last led off
sleep(1)
```

This also means you can use slicing to access a subset of the LEDs:

```
from gpiozero import LEDBoard
from time import sleep

leds = LEDBoard(2, 3, 4, 5, 6, 7, 8, 9)

for led in leds[3:]: # leds 3 and onward
    led.on()
    sleep(1)
    led.off()

for led in leds[:2]: # leds 0 and 1
    led.on()
```

(continues on next page)

(continued from previous page)

```
sleep(1)
leds.off()

for led in leds[::2]: # even leds (0, 2, 4...)
    led.on()
sleep(1)
leds.off()

for led in leds[1::2]: # odd leds (1, 3, 5...)
    led.on()
sleep(1)
leds.off()
```

`LEDBoard` (page 157) objects can have their *LED* objects named upon construction. This means the individual LEDs can be accessed by their name:

```
from gpiozero import LEDBoard
from time import sleep

leds = LEDBoard(red=2, green=3, blue=4)

leds.red.on()
sleep(1)
leds.green.on()
sleep(1)
leds.blue.on()
sleep(1)
```

`LEDBoard` (page 157) objects can also be nested within other `LEDBoard` (page 157) objects:

```
from gpiozero import LEDBoard
from time import sleep


leds = LEDBoard(red=LEDBoard(top=2, bottom=3), green=LEDBoard(top=4, bottom=5))

leds.red.on() ## both reds on
sleep(1)
leds.green.on() # both greens on
sleep(1)
leds.off() # all off
sleep(1)
leds.red.top.on() # top red on
sleep(1)
leds.green.bottom.on() # bottom green on
sleep(1)
```

3.2 Multi-character 7-segment display


The 7-segment display demonstrated in the previous chapter is often available in multi-character variants (typically 4 characters long). Such displays are multiplexed meaning that the LED pins are typically the same as for the single character display but are shared across all characters. Each character in turn then has its own common line which can be tied to ground (in the case of a common cathode display) to enable that particular character. By activating each character in turn very quickly, the eye can be fooled into thinking four different characters are being displayed simultaneously.

In such circuits you should not attempt to sink all the current from a single character (which may have up to 8 LEDs, in the case of a decimal-point, active) into a single GPIO. Rather, use some appropriate transistor (or similar component, e.g. an opto-coupler) to tie the digit's cathode to ground, and control that component from a GPIO.

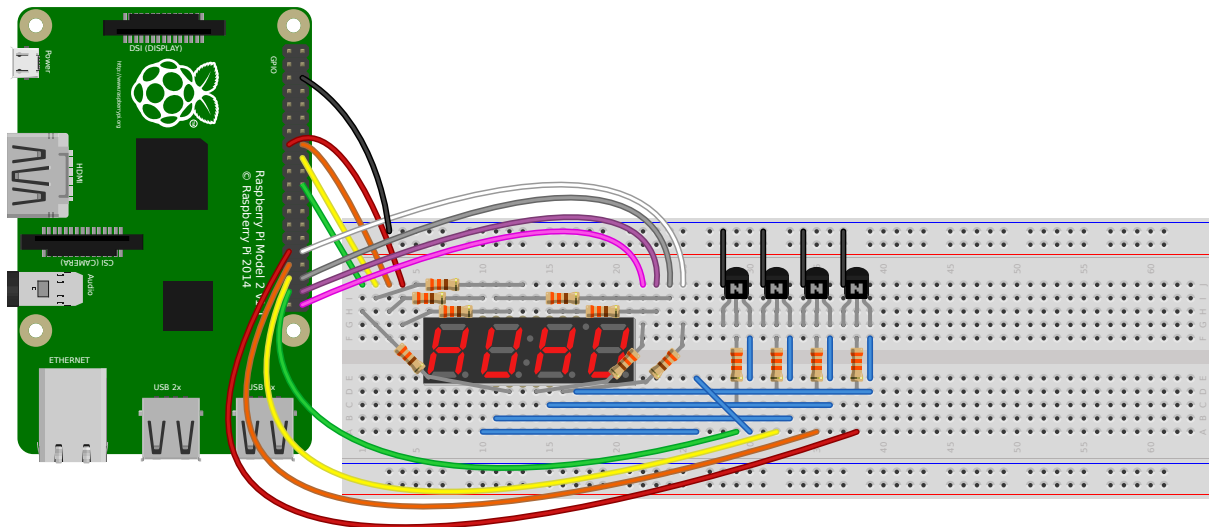

This circuit demonstrates a 4-character 7-segment (actually 8-segment, with decimal-point) display, controlled by the Pi's GPIOs with 4 2N-3904 NPN transistors to control the digits.

Warning: You are strongly advised to check the data-sheet for your particular multi-character 7-segment display. The pin-outs of these displays vary significantly and are very likely to be different to that shown on the breadboard above. For this reason, the schematic for this circuit is provided below; adapt it to your particular display.

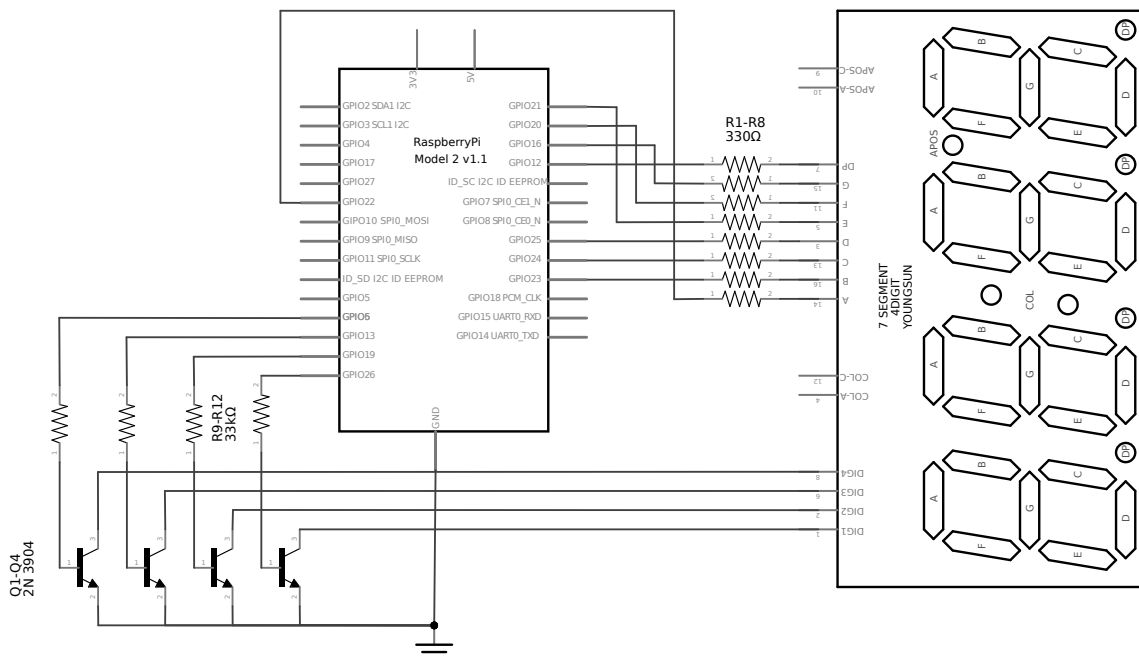

The following code can be used to scroll a message across the display:

```
from itertools import cycle
from collections import deque
from gpiozero import LEDMultiCharDisplay
from signal import pause

display = LEDMultiCharDisplay(
    LEDCharDisplay(22, 23, 24, 25, 21, 20, 16, dp=12), 26, 19, 13, 6)

def scroller(message, chars=4):
```

(continues on next page)

(continued from previous page)

```
d = deque(maxlen=chars)
for c in cycle(message):
    d.append(c)
    if len(d) == chars:
        yield ''.join(d)

display.source_delay = 0.2
display.source = scroller('GPIO ZERO')
pause()
```

3.3 Who's home indicator

Using a number of green-red LED pairs, you can show the status of who's home, according to which IP addresses you can ping successfully. Note that this assumes each person's mobile phone has a reserved IP address on the home router.

```
from gpiozero import PingServer, LEDBoard
from gpiozero.tools import negated
from signal import pause

status = LEDBoard(
    mum=LEDBoard(red=14, green=15),
    dad=LEDBoard(red=17, green=18),
    alice=LEDBoard(red=21, green=22)
)

statuses = {
    PingServer('192.168.1.5'): status.mum,
    PingServer('192.168.1.6'): status.dad,
    PingServer('192.168.1.7'): status.alice,
}

for server, leds in statuses.items():
    leds.green.source = server
    leds.green.source_delay = 60
    leds.red.source = negated(leds.green)

pause()
```

Alternatively, using the STATUS Zero²³ board:

```
from gpiozero import PingServer, StatusZero
from gpiozero.tools import negated
from signal import pause

status = StatusZero('mum', 'dad', 'alice')

statuses = {
    PingServer('192.168.1.5'): status.mum,
    PingServer('192.168.1.6'): status.dad,
    PingServer('192.168.1.7'): status.alice,
}

for server, leds in statuses.items():
    leds.green.source = server
    leds.green.source_delay = 60
    leds.red.source = negated(leds.green)
```

(continues on next page)

²³ <https://thepihut.com/status>

(continued from previous page)

```
pause()
```

3.4 Travis build LED indicator

Use LEDs to indicate the status of a Travis build. A green light means the tests are passing, a red light means the build is broken:

```
from travispy import TravisPy
from gpiozero import LED
from gpiozero.tools import negated
from time import sleep
from signal import pause

def build_passed(repo):
    t = TravisPy()
    r = t.repo(repo)
    while True:
        yield r.last_build_state == 'passed'

red = LED(12)
green = LED(16)

green.source = build_passed('gpiozero/gpiozero')
green.source_delay = 60 * 5 # check every 5 minutes
red.source = negated(green)

pause()
```

Note this recipe requires [travispy](https://travispy.readthedocs.io/)²⁴. Install with `sudo pip3 install travispy`.

3.5 Button controlled robot

Alternatively to the examples in the simple recipes, you can use four buttons to program the directions and add a fifth button to process them in turn, like a Bee-Bot or Turtle robot.

```
from gpiozero import Button, Robot, Motor
from time import sleep
from signal import pause

robot = Robot(Motor(17, 18), Motor(22, 23))

left = Button(2)
right = Button(3)
forward = Button(4)
backward = Button(5)
go = Button(6)

instructions = []

def add_instruction(btn):
    instructions.append({
        left: (-1, 1),
        right: (1, -1),
```

(continues on next page)

²⁴ <https://travispy.readthedocs.io/>

(continued from previous page)

```

        forward: (1, 1),
        backward: (-1, -1),
    }[btn])

def do_instructions():
    instructions.append((0, 0))
    robot.source_delay = 0.5
    robot.source = instructions
    sleep(robot.source_delay * len(instructions))
    del instructions[:]

go.when_pressed = do_instructions
for button in (left, right, forward, backward):
    button.when_pressed = add_instruction

pause()
```

3.6 Robot controlled by 2 potentiometers

Use two potentiometers to control the left and right motor speed of a robot:

```

from gpiozero import Robot, Motor, MCP3008
from gpiozero.tools import zip_values
from signal import pause

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))

left_pot = MCP3008(0)
right_pot = MCP3008(1)

robot.source = zip_values(left_pot, right_pot)

pause()
```

To include reverse direction, scale the potentiometer values from 0->1 to -1->1:

```

from gpiozero import Robot, Motor, MCP3008
from gpiozero.tools import scaled
from signal import pause

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))

left_pot = MCP3008(0)
right_pot = MCP3008(1)

robot.source = zip(scaled(left_pot, -1, 1), scaled(right_pot, -1, 1))

pause()
```

Note: Please note the example above requires Python 3. In Python 2, `zip()`²⁵ doesn't support lazy evaluation so the script will simply hang.

²⁵ <https://docs.python.org/3.9/library/functions.html#zip>

3.7 BlueDot LED

BlueDot is a Python library and an Android app which allows you to easily add Bluetooth control to your Raspberry Pi project. A simple example to control a LED using the BlueDot app:

```
from bluebot import BlueDot
from gpiozero import LED

bd = BlueDot()
led = LED(17)

while True:
    bd.wait_for_press()
    led.on()
    bd.wait_for_release()
    led.off()
```

Note this recipe requires `bluebot` and the associated Android app. See the [BlueDot documentation](#)²⁶ for installation instructions.

3.8 BlueDot robot

You can create a Bluetooth controlled robot which moves forward when the dot is pressed and stops when it is released:

```
from bluebot import BlueDot
from gpiozero import Robot, Motor
from signal import pause

bd = BlueDot()
robot = Robot(left=Motor(4, 14), right=Motor(17, 18))

def move(pos):
    if pos.top:
        robot.forward(pos.distance)
    elif pos.bottom:
        robot.backward(pos.distance)
    elif pos.left:
        robot.left(pos.distance)
    elif pos.right:
        robot.right(pos.distance)

bd.when_pressed = move
bd.when_moved = move
bd.when_released = robot.stop

pause()
```

Or a more advanced example including controlling the robot's speed and precise direction:

```
from gpiozero import Robot, Motor
from bluebot import BlueDot
from signal import pause

def pos_to_values(x, y):
    left = y if x > 0 else y + x
    right = y if x < 0 else y - x
    return (clamped(left), clamped(right))
```

(continues on next page)

²⁶ <https://bluebot.readthedocs.io/en/latest/index.html>

(continued from previous page)

```
def clamped(v):
    return max(-1, min(1, v))

def drive():
    while True:
        if bd.is_pressed:
            x, y = bd.position.x, bd.position.y
            yield pos_to_values(x, y)
        else:
            yield (0, 0)

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))
bd = BlueDot()

robot.source = drive()

pause()
```

3.9 Controlling the Pi's own LEDs

On certain models of Pi (specifically the model A+, B+, and 2B) it's possible to control the power and activity LEDs. This can be useful for testing GPIO functionality without the need to wire up your own LEDs (also useful because the power and activity LEDs are “known good”).

Firstly you need to disable the usual triggers for the built-in LEDs. This can be done from the terminal with the following commands:

```
$ echo none | sudo tee /sys/class/leds/led0/trigger
$ echo gpio | sudo tee /sys/class/leds/led1/trigger
```

Now you can control the LEDs with gpiozero like so:

```
from gpiozero import LED
from signal import pause

power = LED(35) # /sys/class/leds/led1
activity = LED(47) # /sys/class/leds/led0

activity.blink()
power.blink()
pause()
```

To revert the LEDs to their usual purpose you can either reboot your Pi or run the following commands:

```
$ echo mmc0 | sudo tee /sys/class/leds/led0/trigger
$ echo input | sudo tee /sys/class/leds/led1/trigger
```

Note: On the Pi Zero you can control the activity LED with this recipe, but there's no separate power LED to control (it's also worth noting the activity LED is active low, so set `active_high=False` when constructing your LED component).

On the original Pi 1 (model A or B), the activity LED can be controlled with GPIO16 (after disabling its trigger as above) but the power LED is hard-wired on.

On the Pi 3 the LEDs are controlled by a GPIO expander which is not accessible from gpiozero (yet).

CONFIGURING REMOTE GPIO

GPIO Zero supports a number of different pin implementations (low-level pin libraries which deal with the GPIO pins directly). By default, the [RPi.GPIO](#)²⁷ library is used (assuming it is installed on your system), but you can optionally specify one to use. For more information, see the [API - Pins](#) (page 221) documentation page.

One of the pin libraries supported, [pigpio](#)²⁸, provides the ability to control GPIO pins remotely over the network, which means you can use GPIO Zero to control devices connected to a Raspberry Pi on the network. You can do this from another Raspberry Pi, or even from a PC.

See the [Remote GPIO Recipes](#) (page 53) page for examples on how remote pins can be used.

4.1 Preparing the Raspberry Pi

If you're using Raspberry Pi OS (desktop - not Lite) then you have everything you need to use the remote GPIO feature. If you're using Raspberry Pi OS Lite, or another distribution, you'll need to install pigpio:

```
$ sudo apt install pigpio
```

Alternatively, pigpio is available from [abyz.me.uk](#)²⁹.

You'll need to enable remote connections, and launch the pigpio daemon on the Raspberry Pi.


²⁷ <https://pypi.python.org/pypi/RPi.GPIO>

²⁸ <http://abyz.me.uk/rpi/pigpio/python.html>

²⁹ <http://abyz.me.uk/rpi/pigpio/download.html>

4.1.1 Enable remote connections

On the Raspberry Pi OS desktop image, you can enable *Remote GPIO* in the Raspberry Pi configuration tool:

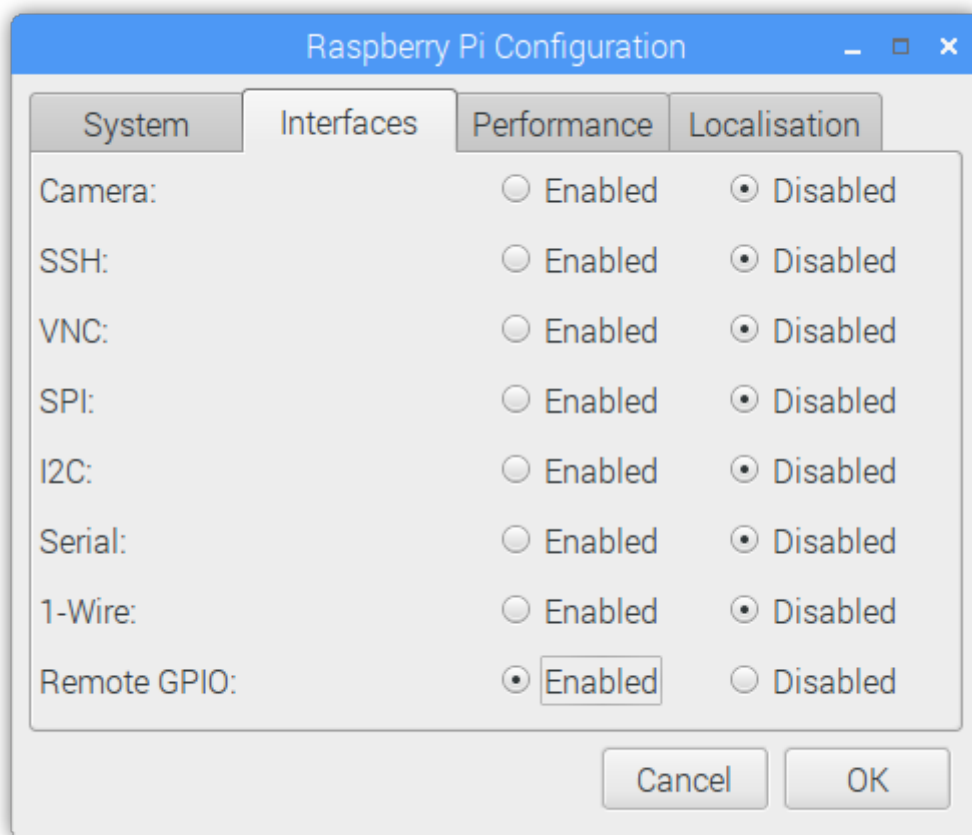

Alternatively, enter `sudo raspi-config` on the command line, and enable Remote GPIO. This is functionally equivalent to the desktop method.

This will allow remote connections (until disabled) when the pigpio daemon is launched using **systemctl** (see below). It will also launch the pigpio daemon for the current session. Therefore, nothing further is required for the current session, but after a reboot, a **systemctl** command will be required.

4.1.2 Command-line: systemctl

To automate running the daemon at boot time, run:

```
$ sudo systemctl enable pigpiod
```

To run the daemon once using **systemctl**, run:

```
$ sudo systemctl start pigpiod
```

4.1.3 Command-line: pigpiod

Another option is to launch the pigpio daemon manually:

```
$ sudo pigpiod
```

This is for single-session-use and will not persist after a reboot. However, this method can be used to allow connections from a specific IP address, using the `-n` flag. For example:

```
$ sudo pigpiod -n localhost # allow localhost only
$ sudo pigpiod -n 192.168.1.65 # allow 192.168.1.65 only
$ sudo pigpiod -n localhost -n 192.168.1.65 # allow localhost and 192.168.1.65 only
```

Note: Note that running `sudo pigpiod` will not honour the Remote GPIO configuration setting (i.e. without the `-n` flag it will allow remote connections even if the remote setting is disabled), but `sudo systemctl enable pigpiod` or `sudo systemctl start pigpiod` will not allow remote connections unless configured accordingly.

4.2 Preparing the control computer

If the control computer (the computer you're running your Python code from) is a Raspberry Pi running Raspberry Pi OS (or a PC running [Raspberry Pi Desktop x86³⁰](https://www.raspberrypi.org/downloads/raspberry-pi-desktop/)), then you have everything you need. If you're using another Linux distribution, Mac OS or Windows then you'll need to install the [pigpio³¹](http://abyz.me.uk/rpi/pigpio/python.html) Python library on the PC.

4.2.1 Raspberry Pi

First, update your repositories list:

```
$ sudo apt update
```

Then install GPIO Zero and the pigpio library for Python 3:

```
$ sudo apt install python3-gpiozero python3-pigpio
```

or Python 2:

```
$ sudo apt install python-gpiozero python-pigpio
```

Alternatively, install with pip:

```
$ sudo pip3 install gpiozero pigpio
```

or for Python 2:

```
$ sudo pip install gpiozero pigpio
```

³⁰ <https://www.raspberrypi.org/downloads/raspberry-pi-desktop/>

³¹ <http://abyz.me.uk/rpi/pigpio/python.html>

4.2.2 Linux

First, update your distribution's repositories list. For example:

```
$ sudo apt update
```

Then install pip for Python 3:

```
$ sudo apt install python3-pip
```

or Python 2:

```
$ sudo apt install python-pip
```

(Alternatively, install pip with [get-pip](#)³².)

Next, install GPIO Zero and pigpio for Python 3:

```
$ sudo pip3 install gpiozero pigpio
```

or Python 2:

```
$ sudo pip install gpiozero pigpio
```

4.2.3 Mac OS

First, install pip. If you installed Python 3 using brew, you will already have pip. If not, install pip with [get-pip](#)³³.

Next, install GPIO Zero and pigpio with pip:

```
$ pip3 install gpiozero pigpio
```

Or for Python 2:

```
$ pip install gpiozero pigpio
```

4.2.4 Windows

Modern Python installers for Windows bundle pip with Python. If pip is not installed, you can [follow this guide](#)³⁴.

Next, install GPIO Zero and pigpio with pip:

```
C:\Users\user1> pip install gpiozero pigpio
```

4.3 Environment variables

The simplest way to use devices with remote pins is to set the `PIGPIO_ADDR` (page 77) environment variable to the IP address of the desired Raspberry Pi. You must run your Python script or launch your development environment with the environment variable set using the command line. For example, one of the following:

```
$ PIGPIO_ADDR=192.168.1.3 python3 hello.py
$ PIGPIO_ADDR=192.168.1.3 python3
$ PIGPIO_ADDR=192.168.1.3 ipython3
$ PIGPIO_ADDR=192.168.1.3 idle3 &
```

³² <https://pip.pypa.io/en/stable/installing/>

³³ <https://pip.pypa.io/en/stable/installing/>

³⁴ <https://projects.raspberrypi.org/en/projects/using-pip-on-windows>

If you are running this from a PC (not a Raspberry Pi) with gpiozero and the [pigpio](#)³⁵ Python library installed, this will work with no further configuration. However, if you are running this from a Raspberry Pi, you will also need to ensure the default pin factory is set to [PiGPIOFactory](#) (page 236). If [RPi.GPIO](#)³⁶ is installed, this will be selected as the default pin factory, so either uninstall it, or use the [GPIOZERO_PIN_FACTORY](#) (page 77) environment variable to override it:

```
$ GPIOZERO_PIN_FACTORY=pigpio PIGPIO_ADDR=192.168.1.3 python3 hello.py
```

This usage will set the pin factory to [PiGPIOFactory](#) (page 236) with a default host of 192.168.1.3. The pin factory can be changed inline in the code, as seen in the following sections.

With this usage, you can write gpiozero code like you would on a Raspberry Pi, with no modifications needed. For example:

```
from gpiozero import LED
from time import sleep

red = LED(17)

while True:
    red.on()
    sleep(1)
    red.off()
    sleep(1)
```

When run with:

```
$ PIGPIO_ADDR=192.168.1.3 python3 led.py
```

will flash the LED connected to pin 17 of the Raspberry Pi with the IP address 192.168.1.3. And:

```
$ PIGPIO_ADDR=192.168.1.4 python3 led.py
```

will flash the LED connected to pin 17 of the Raspberry Pi with the IP address 192.168.1.4, without any code changes, as long as the Raspberry Pi has the pigpio daemon running.

Note: When running code directly on a Raspberry Pi, any pin factory can be used (assuming the relevant library is installed), but when a device is used remotely, only [PiGPIOFactory](#) (page 236) can be used, as [pigpio](#)³⁷ is the only pin library which supports remote GPIO.

4.4 Pin factories

An alternative (or additional) method of configuring gpiozero objects to use remote pins is to create instances of [PiGPIOFactory](#) (page 236) objects, and use them when instantiating device objects. For example, with no environment variables set:

```
from gpiozero import LED
from gpiozero.pins.pigpio import PiGPIOFactory
from time import sleep

factory = PiGPIOFactory(host='192.168.1.3')
led = LED(17, pin_factory=factory)

while True:
```

(continues on next page)

³⁵ <http://abyz.me.uk/rpi/pigpio/python.html>

³⁶ <https://pypi.python.org/pypi/RPi.GPIO>

³⁷ <http://abyz.me.uk/rpi/pigpio/python.html>

(continued from previous page)

```
led.on()
sleep(1)
led.off()
sleep(1)
```

This allows devices on multiple Raspberry Pis to be used in the same script:

```
from gpiozero import LED
from gpiozero.pins.pigpio import PiGPIOFactory
from time import sleep

factory3 = PiGPIOFactory(host='192.168.1.3')
factory4 = PiGPIOFactory(host='192.168.1.4')
led_1 = LED(17, pin_factory=factory3)
led_2 = LED(17, pin_factory=factory4)

while True:
    led_1.on()
    led_2.off()
    sleep(1)
    led_1.off()
    led_2.on()
    sleep(1)
```

You can, of course, continue to create gpiozero device objects as normal, and create others using remote pins. For example, if run on a Raspberry Pi, the following script will flash an LED on the controller Pi, and also on another Pi on the network:

```
from gpiozero import LED
from gpiozero.pins.pigpio import PiGPIOFactory
from time import sleep

remote_factory = PiGPIOFactory(host='192.168.1.3')
led_1 = LED(17) # local pin
led_2 = LED(17, pin_factory=remote_factory) # remote pin

while True:
    led_1.on()
    led_2.off()
    sleep(1)
    led_1.off()
    led_2.on()
    sleep(1)
```

Alternatively, when run with the environment variables `GPIOWERO_PIN_FACTORY=pigpio` and `PiGPIO_ADDR=192.168.1.3` set, the following script will behave exactly the same as the previous one:

```
from gpiozero import LED
from gpiozero.pins.rpigpio import RPiGPIOFactory
from time import sleep

local_factory = RPiGPIOFactory()
led_1 = LED(17, pin_factory=local_factory) # local pin
led_2 = LED(17) # remote pin

while True:
    led_1.on()
    led_2.off()
    sleep(1)
    led_1.off()
    led_2.on()
```

(continues on next page)

(continued from previous page)

```
sleep(1)
```

Of course, multiple IP addresses can be used:

```
from gpiozero import LED
from gpiozero.pins.pigpio import PiGPIOFactory
from time import sleep

factory3 = PiGPIOFactory(host='192.168.1.3')
factory4 = PiGPIOFactory(host='192.168.1.4')

led_1 = LED(17) # local pin
led_2 = LED(17, pin_factory=factory3) # remote pin on one pi
led_3 = LED(17, pin_factory=factory4) # remote pin on another pi

while True:
    led_1.on()
    led_2.off()
    led_3.on()
    sleep(1)
    led_1.off()
    led_2.on()
    led_3.off()
    sleep(1)
```

Note that these examples use the `LED` (page 125) class, which takes a *pin* argument to initialise. Some classes, particularly those representing HATs and other add-on boards, do not require their pin numbers to be specified. However, it is still possible to use remote pins with these devices, either using environment variables, or the *pin_factory* keyword argument:

```
import gpiozero
from gpiozero import TrafficHat
from gpiozero.pins.pigpio import PiGPIOFactory
from time import sleep

gpiozero.Device.pin_factory = PiGPIOFactory(host='192.168.1.3')
th = TrafficHat() # traffic hat on 192.168.1.3 using remote pins
```

This also allows you to swap between two IP addresses and create instances of multiple HATs connected to different Pis:

```
import gpiozero
from gpiozero import TrafficHat
from gpiozero.pins.pigpio import PiGPIOFactory
from time import sleep

remote_factory = PiGPIOFactory(host='192.168.1.3')

th_1 = TrafficHat() # traffic hat using local pins
th_2 = TrafficHat(pin_factory=remote_factory) # traffic hat on 192.168.1.3 using
↳ remote pins
```

You could even use a HAT which is not supported by GPIO Zero (such as the [Sense HAT](https://www.raspberrypi.org/products/sense-hat/)³⁸) on one Pi, and use remote pins to control another over the network:

```
from gpiozero import MotionSensor
from gpiozero.pins.pigpio import PiGPIOFactory
from sense_hat import SenseHat
```

(continues on next page)

³⁸ <https://www.raspberrypi.org/products/sense-hat/>

(continued from previous page)

```
remote_factory = PiGPIOFactory(host='192.198.1.4')
pir = MotionSensor(4, pin_factory=remote_factory)  # remote motion sensor
sense = SenseHat()  # local sense hat

while True:
    pir.wait_for_motion()
    sense.show_message(sense.temperature)
```

Note that in this case, the Sense HAT code must be run locally, and the GPIO remotely.

4.5 Remote GPIO usage

Continue to:

- [Remote GPIO Recipes](#) (page 53)
- [Pi Zero USB OTG](#) (page 57)

REMOTE GPIO RECIPES

The following recipes demonstrate some of the capabilities of the remote GPIO feature of the GPIO Zero library. Before you start following these examples, please read up on preparing your Pi and your host PC to work with *Configuring Remote GPIO* (page 45).

Please note that all recipes are written assuming Python 3. Recipes *may* work under Python 2, but no guarantees!

5.1 LED + Button

Let a *Button* (page 105) on one Raspberry Pi control the *LED* (page 125) of another:

```
from gpiozero import Button, LED
from gpiozero.pins.pigpio import PiGPIOFactory
from signal import pause

factory = PiGPIOFactory(host='192.168.1.3')

button = Button(2)
led = LED(17, pin_factory=factory)

led.source = button

pause()
```

5.2 LED + 2 Buttons

The *LED* (page 125) will come on when both buttons are pressed:

```
from gpiozero import Button, LED
from gpiozero.pins.pigpio import PiGPIOFactory
from gpiozero.tools import all_values
from signal import pause

factory3 = PiGPIOFactory(host='192.168.1.3')
factory4 = PiGPIOFactory(host='192.168.1.4')

led = LED(17)
button_1 = Button(17, pin_factory=factory3)
button_2 = Button(17, pin_factory=factory4)

led.source = all_values(button_1, button_2)

pause()
```

5.3 Multi-room motion alert

Install a Raspberry Pi with a *MotionSensor* (page 109) in each room of your house, and have an class:*LED* indicator showing when there's motion in each room:

```
from gpiozero import LEDBoard, MotionSensor
from gpiozero.pins.pigpio import PiGPIOFactory
from gpiozero.tools import zip_values
from signal import pause

ips = ['192.168.1.3', '192.168.1.4', '192.168.1.5', '192.168.1.6']
remotes = [PiGPIOFactory(host=ip) for ip in ips]

leds = LEDBoard(2, 3, 4, 5) # leds on this pi
sensors = [MotionSensor(17, pin_factory=r) for r in remotes] # remote sensors

leds.source = zip_values(*sensors)

pause()
```

5.4 Multi-room doorbell

Install a Raspberry Pi with a *Buzzer* (page 131) attached in each room you want to hear the doorbell, and use a push *Button* (page 105) as the doorbell:

```
from gpiozero import LEDBoard, MotionSensor
from gpiozero.pins.pigpio import PiGPIOFactory
from signal import pause

ips = ['192.168.1.3', '192.168.1.4', '192.168.1.5', '192.168.1.6']
remotes = [PiGPIOFactory(host=ip) for ip in ips]

button = Button(17) # button on this pi
buzzers = [Buzzer(pin, pin_factory=r) for r in remotes] # buzzers on remote pins

for buzzer in buzzers:
    buzzer.source = button

pause()
```

This could also be used as an internal doorbell (tell people it's time for dinner from the kitchen).

5.5 Remote button robot

Similarly to the simple recipe for the button controlled *Robot* (page 176), this example uses four buttons to control the direction of a robot. However, using remote pins for the robot means the control buttons can be separate from the robot:

```
from gpiozero import Button, Robot, Motor
from gpiozero.pins.pigpio import PiGPIOFactory
from signal import pause

factory = PiGPIOFactory(host='192.168.1.17')
robot = Robot(left=Motor(4, 14), right=Motor(17, 18),
              pin_factory=factory) # remote pins
```

(continues on next page)

(continued from previous page)

```
# local buttons
left = Button(26)
right = Button(16)
fw = Button(21)
bw = Button(20)

fw.when_pressed = robot.forward
fw.when_released = robot.stop

left.when_pressed = robot.left
left.when_released = robot.stop

right.when_pressed = robot.right
right.when_released = robot.stop

bw.when_pressed = robot.backward
bw.when_released = robot.stop

pause()
```

5.6 Light sensor + Sense HAT

The [Sense HAT](#)³⁹ (not supported by GPIO Zero) includes temperature, humidity and pressure sensors, but no light sensor. Remote GPIO allows an external [LightSensor](#) (page 111) to be used as well. The Sense HAT LED display can be used to show different colours according to the light levels:

```
from gpiozero import LightSensor
from gpiozero.pins.pigpio import PiGPIOFactory
from sense_hat import SenseHat

remote_factory = PiGPIOFactory(host='192.168.1.4')
light = LightSensor(4, pin_factory=remote_factory) # remote motion sensor
sense = SenseHat() # local sense hat

blue = (0, 0, 255)
yellow = (255, 255, 0)

while True:
    if light.value > 0.5:
        sense.clear(yellow)
    else:
        sense.clear(blue)
```

Note that in this case, the Sense HAT code must be run locally, and the GPIO remotely.

³⁹ <https://www.raspberrypi.org/products/sense-hat/>

PI ZERO USB OTG

The [Raspberry Pi Zero](#)⁴⁰ and [Pi Zero W](#)⁴¹ feature a USB OTG port, allowing users to configure the device as (amongst other things) an Ethernet device. In this mode, it is possible to control the Pi Zero's GPIO pins over USB from another computer using the *remote GPIO* (page 45) feature.

6.1 GPIO expander method - no SD card required

The GPIO expander method allows you to boot the Pi Zero over USB from the PC, without an SD card. Your PC sends the required boot firmware to the Pi over the USB cable, launching a mini version of Raspberry Pi OS and booting it in RAM. The OS then starts the pigpio daemon, allowing “remote” access over the USB cable.

At the time of writing, this is only possible using either the Raspberry Pi Desktop x86 OS, or Ubuntu (or a derivative), or from another Raspberry Pi. Usage from Windows and Mac OS is not supported at present.

6.1.1 Raspberry Pi Desktop x86 setup

1. Download an ISO of the [Raspberry Pi Desktop OS](#)⁴² from raspberrypi.org
2. Write the image to a USB stick or burn to a DVD.
3. Live boot your PC or Mac into the OS (select “Run with persistence” and your computer will be back to normal afterwards).

6.1.2 Raspberry Pi setup (using Raspberry Pi OS)

1. Update your package list and install the `usbbootgui` package:

```
$ sudo apt update
$ sudo apt install usbbootgui
```

⁴⁰ <https://www.raspberrypi.org/products/raspberry-pi-zero/>

⁴¹ <https://www.raspberrypi.org/products/raspberry-pi-zero-w/>

⁴² <https://www.raspberrypi.org/downloads/raspberry-pi-desktop/>

6.1.3 Ubuntu setup

1. Add the Raspberry Pi PPA to your system:

```
$ sudo add-apt-repository ppa:rpi-distro/ppa
```

2. If you have previously installed gpiozero or pigpio with pip, uninstall these first:


```
$ sudo pip3 uninstall gpiozero pigpio
```

3. Install the required packages from the PPA:

```
$ sudo apt install usbbootgui pigpio python3-gpiozero python3-pigpio
```

6.1.4 Access the GPIOs

Once your PC or Pi has the USB Boot GUI tool installed, connecting a Pi Zero will automatically launch a prompt to select a role for the device. Select “GPIO expansion board” and continue:

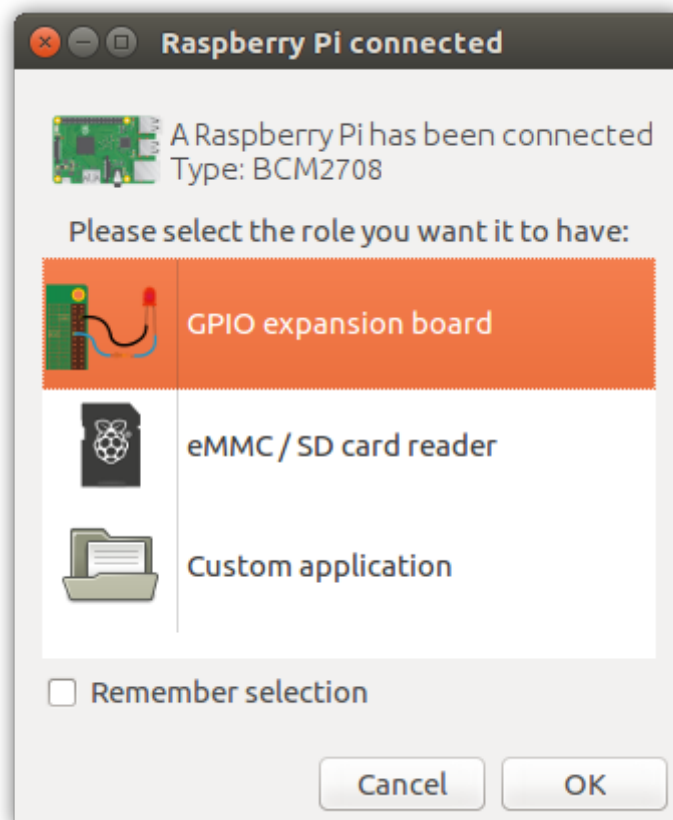


It will take 30 seconds or so to flash it, then the dialogue will disappear.

Raspberry Pi OS will name your Pi Zero connection `usb0`. On Ubuntu, this will likely be something else. You can ping it using the address `fe80::1%` followed by the connection string. You can look this up using `ifconfig`.

Set the `GPIOZERO_PIN_FACTORY` (page 77) and `PIGPIO_ADDR` (page 77) environment variables on your PC so GPIO Zero connects to the “remote” Pi Zero:

```
$ export GPIOZERO_PIN_FACTORY=pigpio
$ export PIGPIO_ADDR=fe80::1%usb0
```

Now any GPIO Zero code you run on the PC will use the GPIOs of the attached Pi Zero:

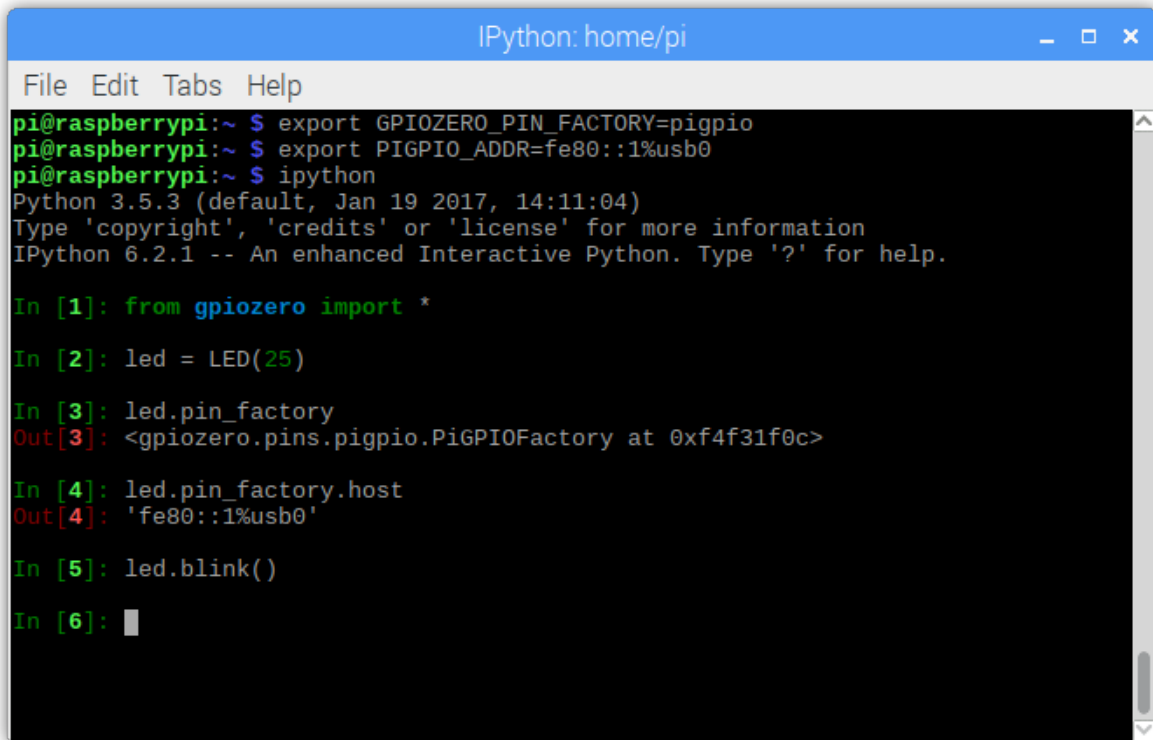

```

IPython: home/pi
File Edit Tabs Help
pi@raspberrypi:~ $ export GPIOZERO_PIN_FACTORY=pigpio
pi@raspberrypi:~ $ export PIGPIO_ADDR=fe80::1%usb0
pi@raspberrypi:~ $ ipython
Python 3.5.3 (default, Jan 19 2017, 14:11:04)
Type 'copyright', 'credits' or 'license' for more information
IPython 6.2.1 -- An enhanced Interactive Python. Type '?' for help.

In [1]: from gpiozero import *
In [2]: led = LED(25)
In [3]: led.pin_factory
Out[3]: <gpiozero.pins.pigpio.PiGPIOFactory at 0xf4f31f0c>
In [4]: led.pin_factory.host
Out[4]: 'fe80::1%usb0'
In [5]: led.blink()
In [6]:

```

Alternatively, you can set the pin factory in-line, as explained in [Configuring Remote GPIO](#) (page 45).

Read more on the GPIO expander in blog posts on [raspberrypi.org](#)⁴³ and [bennuttall.com](#)⁴⁴.

6.2 Legacy method - SD card required

The legacy method requires the Pi Zero to have an SD card with Raspberry Pi OS inserted.

Start by creating a Raspberry Pi OS (desktop or lite) SD card, and then configure the boot partition like so:

1. Edit `config.txt` and add `dtoverlay=dwc2` on a new line, then save the file.
2. Create an empty file called `ssh` (no file extension) and save it in the boot partition.
3. Edit `cmdline.txt` and insert `modules-load=dwc2,g_ether` after `rootwait`.

(See guides on [blog.gbaman.info](#)⁴⁵ and [learn.adafruit.com](#)⁴⁶ for more detailed instructions)

Then connect the Pi Zero to your computer using a micro USB cable (connecting it to the USB port, not the power port). You'll see the indicator LED flashing as the Pi Zero boots. When it's ready, you will be able to ping and SSH into it using the hostname `raspberrypi.local`. SSH into the Pi Zero, install `pigpio` and run the `pigpio` daemon.

Then, drop out of the SSH session and you can run Python code on your computer to control devices attached to the Pi Zero, referencing it by its hostname (or IP address if you know it), for example:

```
$ GPIOZERO_PIN_FACTORY=pigpio PIGPIO_ADDR=raspberrypi.local python3 led.py
```

⁴³ <https://www.raspberrypi.org/blog/gpio-expander/>

 
⁴⁴ <http://bennuttall.com/raspberry-pi-zero-gpio-expander/>

⁴⁵ <http://blog.gbaman.info/?p=791>

⁴⁶ <https://learn.adafruit.com/turning-your-raspberry-pi-zero-into-a-usb-gadget/ethernet-gadget>

SOURCE/VALUES

GPIO Zero provides a method of using the declarative programming paradigm to connect devices together: feeding the values of one device into another, for example the values of a button into an LED:



```
from gpiozero import LED, Button
from signal import pause

led = LED(17)
button = Button(2)

led.source = button

pause()
```

which is equivalent to:

```
from gpiozero import LED, Button
from time import sleep

led = LED(17)
button = Button(2)

while True:
    led.value = button.value
    sleep(0.01)
```

except that the former is updated in a background thread, which enables you to do other things at the same time.

 
Every device has a *value* (page 199) property (the device's current value). Input devices (like buttons) can only have their values read, but output devices (like LEDs) can also have their value set to alter the state of the device:

```
>>> led = PWMLED(17)
>>> led.value # LED is initially off
0.0
>>> led.on() # LED is now on
>>> led.value
1.0
>>> led.value = 0 # LED is now off
```


Every device also has a *values* (page 200) property (a *generator*⁴⁷ continuously yielding the device's current value). All output devices have a *source* (page 200) property which can be set to any *iterator*⁴⁸. The device will iterate over the values of the device provided, setting the device's value to each element at a rate specified in the *source_delay* (page 200) property (the default is 0.01 seconds).

⁴⁷ <https://wiki.python.org/moin/Generators>

⁴⁸ <https://wiki.python.org/moin/Iterator>



 The most common use case for this is to set the source of an output device to match the values of an input device, like the example above. A more interesting example would be a potentiometer controlling the brightness of an LED:



```

from gpiozero import PWMLED, MCP3008
from signal import pause

led = PWMLED(17)
pot = MCP3008()

led.source = pot

pause()
  
```

The way this works is that the input device's *values* (page 200) property is used to feed values into the output device. Prior to v1.5, the *source* (page 200) had to be set directly to a device's *values* (page 200) property:

```

from gpiozero import PWMLED, MCP3008
from signal import pause

led = PWMLED(17)
pot = MCP3008()

led.source = pot.values

pause()
  
```

Note: Although this method is still supported, the recommended way is now to set the *source* (page 200) to a device object.

It is also possible to set an output device's *source* (page 200) to another output device, to keep them matching. In this example, the red LED is set to match the button, and the green LED is set to match the red LED, so both LEDs will be on when the button is pressed:



```

from gpiozero import LED, Button
from signal import pause

red = LED(14)
green = LED(15)
button = Button(17)

red.source = button
green.source = red

pause()
  
```

7.1 Processing values

The device's values can also be processed before they are passed to the *source* (page 200):



For example, writing a generator function to pass the opposite of the Button value into the LED:



```

from gpiozero import Button, LED
from signal import pause

 
def opposite(device):
    for value in device.values:
        yield not value

led = LED(4)
btn = Button(17)


led.source = opposite(btn)

pause()
    
```

Alternatively, a custom generator can be used to provide values from an artificial source:



 For example, writing a generator function to randomly yield 0 or 1:



```

from gpiozero import LED
from random import randint
from signal import pause

def rand():
    while True:
        yield randint(0, 1)

led = LED(17)
led.source = rand()

pause()
    
```

If the iterator is infinite (i.e. an infinite generator), the elements will be processed until the *source* (page 200) is changed or set to `None`⁴⁹.

If the iterator is finite (e.g. a list), this will terminate once all elements are processed (leaving the device's value at the final element):

⁴⁹ <https://docs.python.org/3.9/library/constants.html#None>

```
from gpiozero import LED
from signal import pause

 
led = LED(17)
led.source_delay = 1
led.source = [1, 0, 1, 1, 1, 0, 0, 1, 0, 1]

pause()
```


7.2 Source Tools

GPIO Zero provides a set of ready-made functions for dealing with source/values, called source tools. These are available by importing from `gpiozero.tools` (page 203).

Some of these source tools are artificial sources which require no input:



 In this example, random values between 0 and 1 are passed to the LED, giving it a flickering candle effect:



```
from gpiozero import PWMLED
from gpiozero.tools import random_values
from signal import pause

led = PWMLED(4)
led.source = random_values()
led.source_delay = 0.1

pause()
```

Note that in the above example, `source_delay` (page 200) is used to make the LED iterate over the random values slightly slower. `source_delay` (page 200) can be set to a larger number (e.g. 1 for a one second delay) or set to 0 to disable any delay.

Some tools take a single source and process its values:



In this example, the LED is lit only when the button is not pressed:



```
from gpiozero import Button, LED
from gpiozero.tools import negated
from signal import pause

led = LED(4)
```

(continues on next page)

(continued from previous page)


```
btn = Button(17)

led.source = negated(btn)


pause()
```

Note: Note that source tools which take one or more value parameters support passing either *ValuesMixin* (page 200) derivatives, or iterators, including a device's *values* (page 200) property.

Some tools combine the values of multiple sources:

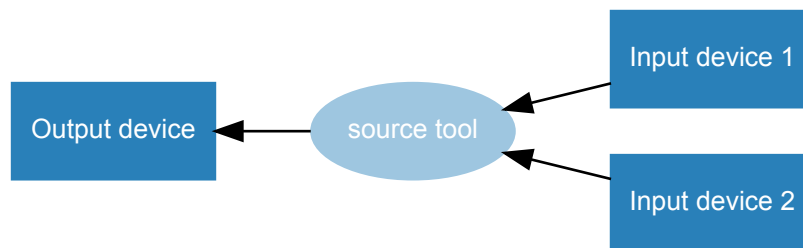

In this example, the LED is lit only if both buttons are pressed (like an **AND**⁵⁰ gate):

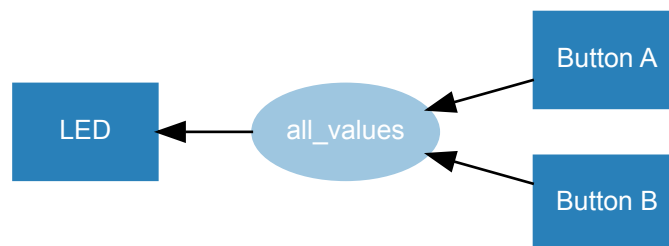

```
from gpiozero import Button, LED
from gpiozero.tools import all_values
from signal import pause

button_a = Button(2)
button_b = Button(3)
led = LED(17)

led.source = all_values(button_a, button_b)


pause()
```

Similarly, *any_values()* (page 207) with two buttons would simulate an **OR**⁵¹ gate.

While most devices have a *value* (page 199) range between 0 and 1, some have a range between -1 and 1 (e.g. *Motor* (page 134), *Servo* (page 137) and *TonalBuzzer* (page 133)). Some source tools output values between -1 and 1, which are ideal for these devices, for example passing *sin_values()* (page 209) in:

⁵⁰ https://en.wikipedia.org/wiki/AND_gate

⁵¹ https://en.wikipedia.org/wiki/OR_gate

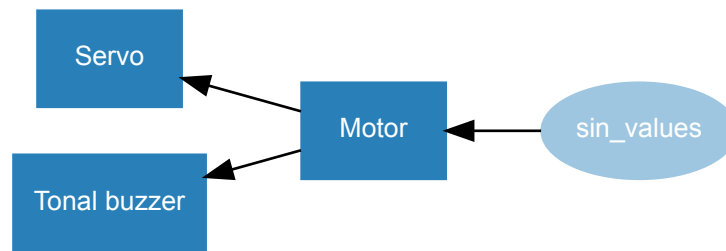

```

from gpiozero import Motor, Servo, TonalBuzzer
from gpiozero.tools import sin_values
from signal import pause

motor = Motor(2, 3)
servo = Servo(4)
buzzer = TonalBuzzer(5)

motor.source = sin_values()
servo.source = motor
buzzer.source = motor

 
pause()

```

In this example, all three devices are following the [sine wave](#)⁵². The motor value ramps up from 0 (stopped) to 1 (full speed forwards), then back down to 0 and on to -1 (full speed backwards) in a cycle. Similarly, the servo moves from its mid point to the right, then towards the left; and the buzzer starts with its mid tone, gradually raises its frequency, to its highest tone, then down towards its lowest tone. Note that setting [source_delay](#) (page 200) will alter the speed at which the device iterates through the values. Alternatively, the tool [cos_values\(\)](#) (page 208) could be used to start from -1 and go up to 1, and so on.

7.3 Internal devices

GPIO Zero also provides several [internal devices](#) (page 189) which represent facilities provided by the operating system itself. These can be used to react to things like the time of day, or whether a server is available on the network. These classes include a [values](#) (page 200) property which can be used to feed values into a device's [source](#) (page 200). For example, a lamp connected to an [Energenie](#) (page 180) socket can be controlled by a [TimeOfDay](#) (page 190) object so that it is on between the hours of 8am and 8pm:



```

from gpiozero import Energenie, TimeOfDay
from datetime import time
from signal import pause

lamp = Energenie(1)
daytime = TimeOfDay(time(8), time(20))

 
daytime.when_activated = lamp.on
daytime.when_deactivated = lamp.off

pause()

```

Using the [DiskUsage](#) (page 195) class with [LEDBarGraph](#) (page 160) can show your Pi's disk usage percentage on a bar graph:

⁵² https://en.wikipedia.org/wiki/Sine_wave



```


from gpiozero import DiskUsage, LEDBarGraph
from signal import pause

disk = DiskUsage()
graph = LEDBarGraph(2, 3, 4, 5, 6, 7, 8)

graph.source = disk

pause()
  
```

Demonstrating a garden light system whereby the light comes on if it's dark and there's motion is simple enough, but it requires using the `booleanized()` (page 203) source tool to convert the light sensor from a float value into a boolean:

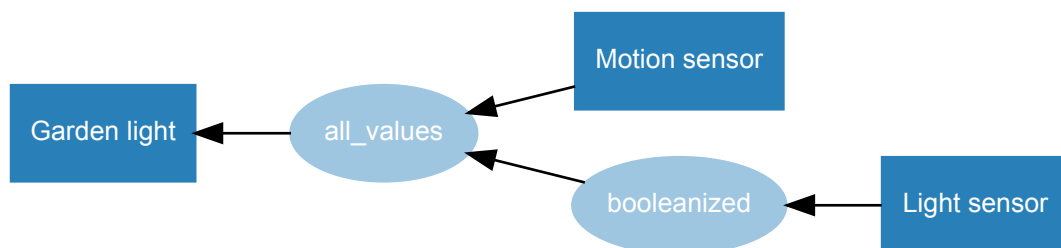

```

from gpiozero import LED, MotionSensor, LightSensor
from gpiozero.tools import booleanized, all_values
from signal import pause

garden = LED(2)
motion = MotionSensor(4)
light = LightSensor(5)

garden.source = all_values(booleanized(light, 0, 0.1), motion)

pause()
  
```


7.4 Composite devices

The `value` (page 199) of a composite device made up of the nested values of its devices. For example, the value of a `Robot` (page 176) object is a 2-tuple containing its left and right motor values:

```

>>> from gpiozero import Robot
>>> robot = Robot(left=(14, 15), right=(17, 18))
>>> robot.value
RobotValue(left_motor=0.0, right_motor=0.0)
>>> tuple(robot.value)
(0.0, 0.0)
>>> robot.forward()
>>> tuple(robot.value)
(1.0, 1.0)
>>> robot.backward()
>>> tuple(robot.value)
(-1.0, -1.0)
>>> robot.value = (1, 1) # robot is now driven forwards
  
```

Use two potentiometers to control the left and right motor speed of a robot:

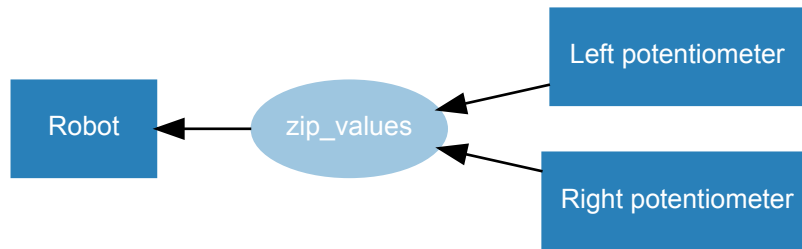

```

from gpiozero import Robot, Motor, MCP3008
from gpiozero.tools import zip_values
from signal import pause

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))


left_pot = MCP3008(0)
right_pot = MCP3008(1)

robot.source = zip_values(left_pot, right_pot)

pause()

```

To include reverse direction, scale the potentiometer values from 0->1 to -1->1:

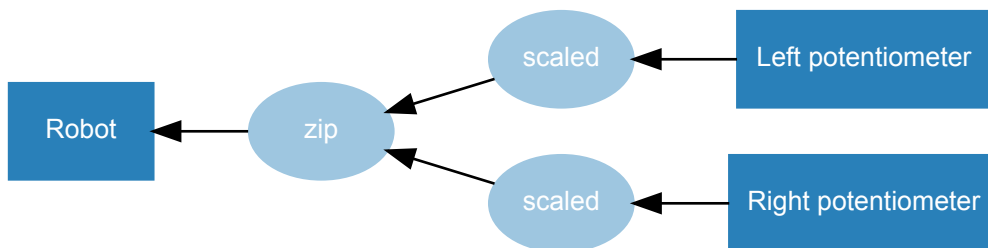

```

from gpiozero import Robot, Motor, MCP3008
from gpiozero.tools import scaled
from signal import pause

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))

left_pot = MCP3008(0)
right_pot = MCP3008(1)

robot.source = zip(scaled(left_pot, -1, 1), scaled(right_pot, -1, 1))

pause()

```

Note that this example uses the built-in `zip()`⁵³ rather than the tool `zip_values()` (page 208) as the `scaled()` (page 206) tool yields values which do not need converting, just zipping. Also note that this use of `zip()`⁵⁴ will not work in Python 2, instead use `izip`⁵⁵.

⁵³ <https://docs.python.org/3.9/library/functions.html#zip>

⁵⁴ <https://docs.python.org/3.9/library/functions.html#zip>

⁵⁵ <https://docs.python.org/2/library/itertools.html#itertools.izip>

COMMAND-LINE TOOLS

The `gpiozero` package contains a database of information about the various revisions of Raspberry Pi. This is queried by the **pinout** command-line tool to output details of the GPIO pins available. The **pintest** tool is also provided to test the operation of GPIO pins on the board.

8.1 pinout

A utility for querying GPIO pin-out information.

```
dave@amaterasu: ~$ pinout
Description      : Raspberry Pi 3B rev 1.2
Revision        : a02082
SoC             : BCM2837
RAM            : 1GB
Storage        : MicroSD
USB ports      : 4 (of which 0 USB3)
Ethernet ports : 1 (100Mbps max. speed)
Wi-fi         : True
Bluetooth     : True
Camera ports (CSI) : 1
Display ports (DSI): 1
```



```
J8:
 3V3 (1) (2) 5V
GPIO2 (3) (4) 5V
GPIO3 (5) (6) GND
GPIO4 (7) (8) GPIO14
  GND (9) (10) GPIO15
GPIO17 (11) (12) GPIO18
GPIO27 (13) (14) GND
GPIO22 (15) (16) GPIO23
 3V3 (17) (18) GPIO24
GPIO10 (19) (20) GND
  GPIO9 (21) (22) GPIO25
GPIO11 (23) (24) GPIO8
  GND (25) (26) GPIO7
  GPIO0 (27) (28) GPIO1
  GPIO5 (29) (30) GND
  GPIO6 (31) (32) GPIO12
GPIO13 (33) (34) GND
GPIO19 (35) (36) GPIO16
GPIO26 (37) (38) GPIO20
  GND (39) (40) GPIO21
```

For further information, please refer to <https://pinout.xyz/>

```
dave@amaterasu:~$
```

8.1.1 Synopsis

```
pinout [-h] [-r REVISION] [-c] [-m] [-x]
```

8.1.2 Description

A utility for querying Raspberry Pi GPIO pin-out information. Running **pinout** on its own will output a board diagram, and GPIO header diagram for the current Raspberry Pi. It is also possible to manually specify a revision of Pi, or (by *Configuring Remote GPIO* (page 45)) to output information about a remote Pi.

8.1.3 Options

-h, --help

Show a help message and exit

-r REVISION, --revision REVISION

Specifies a particular Raspberry Pi board revision code. The default is to autodetect revision of current device by reading `/proc/cpuinfo`

-c, --color

Force colored output (by default, the output will include ANSI color codes if run in a color-capable terminal). See also *pinout --monochrome* (page 71)

-m, --monochrome

Force monochrome output. See also *pinout --color* (page 71)

-x, --xyz

Open pinout.xyz⁵⁶ in the default web browser

8.1.4 Examples

To output information about the current Raspberry Pi:

```
$ pinout
```

For a Raspberry Pi model 3B, this will output something like the following:

```
Description      : Raspberry Pi 3B rev 1.2
Revision         : a02082
SoC              : BCM2837
RAM              : 1GB
Storage          : MicroSD
USB ports        : 4 (of which 0 USB3)
Ethernet ports   : 1 (100Mbps max. speed)
Wi-fi            : True
Bluetooth        : True
Camera ports (CSI) : 1
Display ports (DSI) : 1
```

```
,-----,
| oooooooooooooooooooooo J8      +====
| 1ooooooooooooooooooooo        | USB
|                                +====
|      Pi Model 3B  V1.2          |
| |D      +---+                  +====
```

(continues on next page)

⁵⁶ <https://pinout.xyz/>

(continued from previous page)

```
| |S      |SoC|          | USB
| |I      +----+          +=====
| |0          C|          |
|          S|          +=====
|          I| |A|          | Net
| pwr      |HDMI| 0| |u|          +=====
`-| |-----|          |-----|x|-----|
```

J8:

```
3V3   (1) (2) 5V
GPIO2 (3) (4) 5V
GPIO3 (5) (6) GND
GPIO4 (7) (8) GPIO14
GND   (9) (10) GPIO15
GPIO17 (11) (12) GPIO18
GPIO27 (13) (14) GND
GPIO22 (15) (16) GPIO23
3V3   (17) (18) GPIO24
GPIO10 (19) (20) GND
GPIO9  (21) (22) GPIO25
GPIO11 (23) (24) GPIO8
GND    (25) (26) GPIO7
GPIO0  (27) (28) GPIO1
GPIO5  (29) (30) GND
GPIO6  (31) (32) GPIO12
GPIO13 (33) (34) GND
GPIO19 (35) (36) GPIO16
GPIO26 (37) (38) GPIO20
GND    (39) (40) GPIO21
```

For further information, please refer to <https://pinout.xyz/>

By default, if stdout is a console that supports color, ANSI codes will be used to produce color output. Output can be forced to be `--monochrome` (page 71):

```
$ pinout --monochrome
```

Or forced to be `--color` (page 71), in case you are redirecting to something capable of supporting ANSI codes:

```
$ pinout --color | less -SR
```

To manually specify the revision of Pi you want to query, use `--revision` (page 71). The tool understands both old-style [revision codes](#)⁵⁷ (such as for the model B):

```
$ pinout -r 000d
```

Or new-style [revision codes](#)⁵⁸ (such as for the Pi Zero W):

```
$ pinout -r 9000c1
```

⁵⁷ <https://www.raspberrypi.com/documentation/computers/raspberry-pi.html#raspberrypi-revision-codes>

⁵⁸ <https://www.raspberrypi.com/documentation/computers/raspberry-pi.html#raspberrypi-revision-codes>

```
dave@amaterasu: ~  
dave@amaterasu:~$ pinout -r 9000c1  
Description      : Raspberry Pi Zero W rev 1.1  
Revision        : 9000c1  
SoC             : BCM2835  
RAM            : 512MB  
Storage         : MicroSD  
USB ports       : 1 (of which 0 USB3)  
Ethernet ports  : 0 (0Mbps max. speed)  
Wi-fi          : True  
Bluetooth       : True  
Camera ports (CSI) : 1  
Display ports (DSI): 0
```

J8:

	3V3	(1)	(2)	5V
GPI02	(3)	(4)	5V	
GPI03	(5)	(6)	GND	
GPI04	(7)	(8)	GPI014	
GND	(9)	(10)	GPI015	
GPI017	(11)	(12)	GPI018	
GPI027	(13)	(14)	GND	
GPI022	(15)	(16)	GPI023	
3V3	(17)	(18)	GPI024	
GPI010	(19)	(20)	GND	
GPI09	(21)	(22)	GPI025	
GPI011	(23)	(24)	GPI08	
GND	(25)	(26)	GPI07	
GPI00	(27)	(28)	GPI01	
GPI05	(29)	(30)	GND	
GPI06	(31)	(32)	GPI012	
GPI013	(33)	(34)	GND	
GPI019	(35)	(36)	GPI016	
GPI026	(37)	(38)	GPI020	
GND	(39)	(40)	GPI021	

RUN:
RUN (1)
GND (2)

TV:
COMPOSITE (1)
GND (2)

For further information, please refer to https://pinout.xyz/
dave@amaterasu:~\$ █

You can also use the tool with *Configuring Remote GPIO* (page 45) to query remote Raspberry Pi's:

```
$ GPIOZERO_PIN_FACTORY=pigpio PIGPIO_ADDR=other_pi pinout
```


Or run the tool directly on a PC using the mock pin implementation (although in this case you'll almost certainly want to specify the Pi revision manually):

```
$ GPIOZERO_PIN_FACTORY=mock pinout -r a22042
```

8.2 pintest

A utility for testing the GPIO pins on a Raspberry Pi, inspired by pigpio's gpiotest example script, and wiringPi's pintest utility.

New in version 2.0: The **pintest** utility.

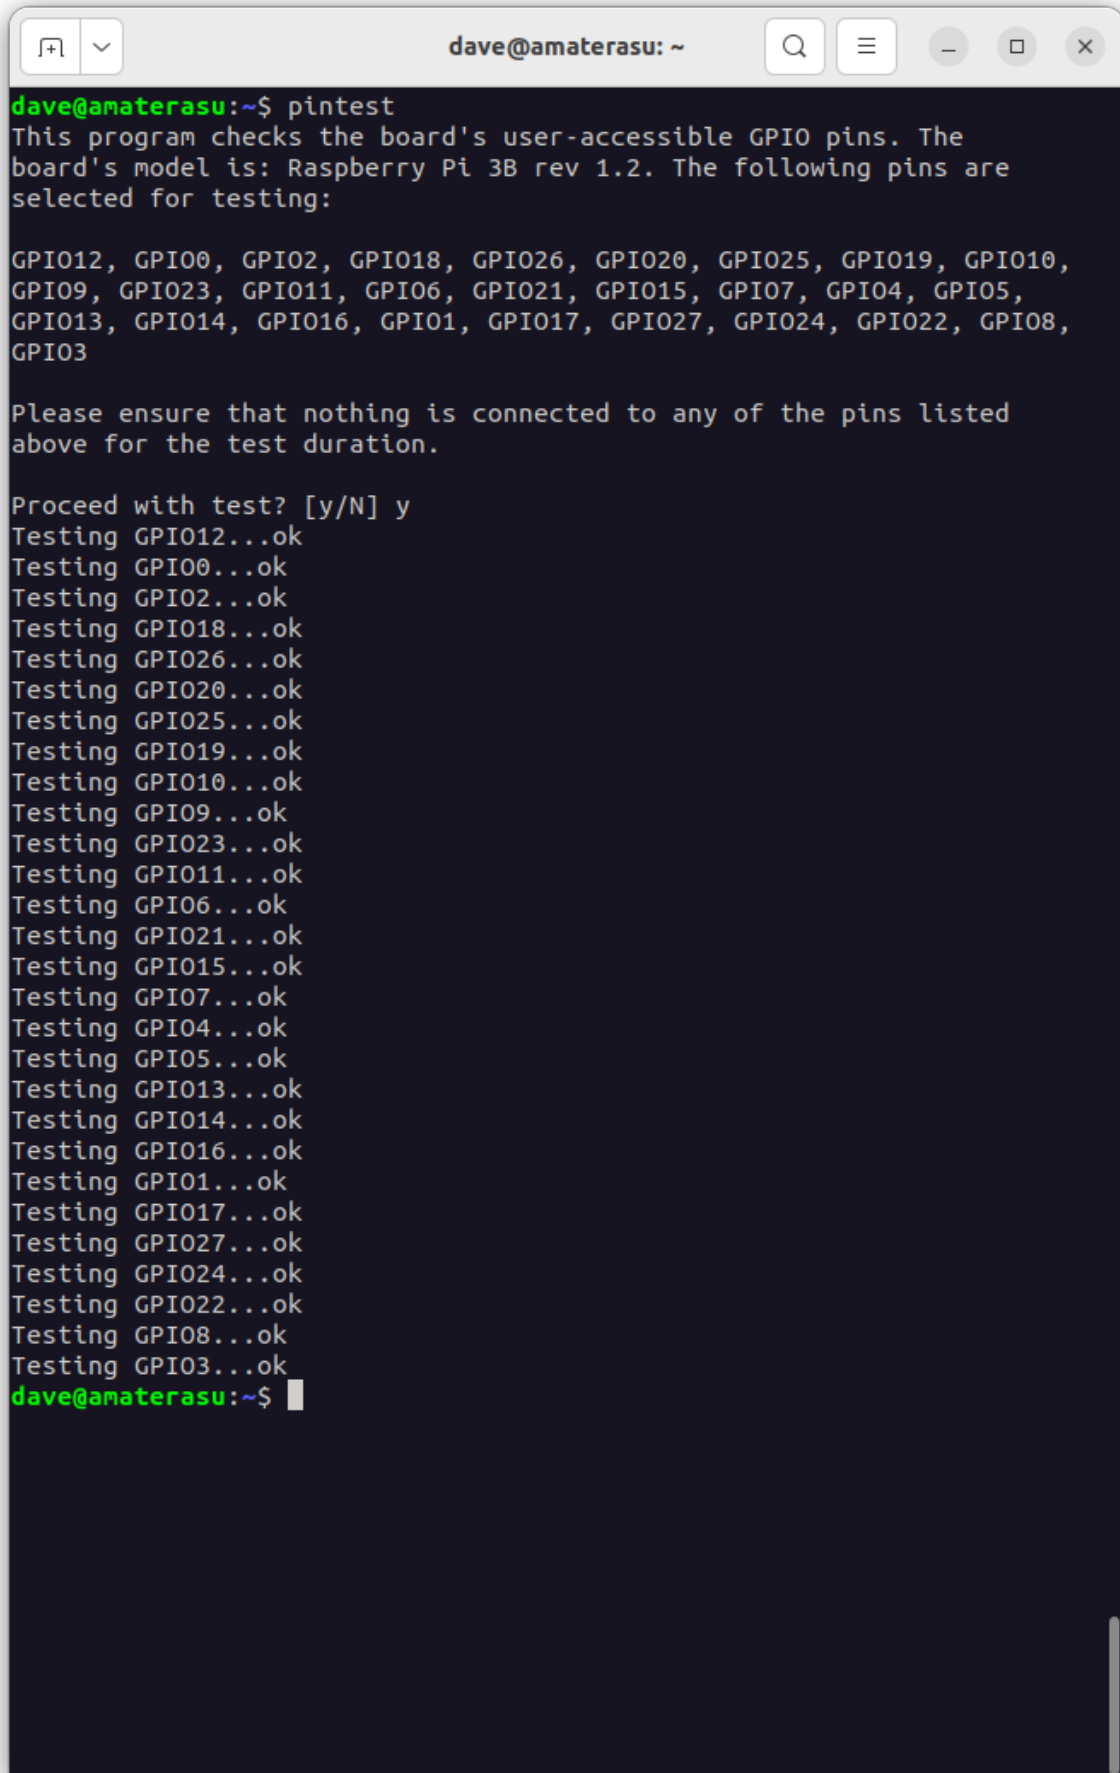

```
dave@amaterasu: ~  
dave@amaterasu:~$ pinctest  
This program checks the board's user-accessible GPIO pins. The  
board's model is: Raspberry Pi 3B rev 1.2. The following pins are  
selected for testing:  
  
GPIO12, GPIO0, GPIO2, GPIO18, GPIO26, GPIO20, GPIO25, GPIO19, GPIO10,  
GPIO9, GPIO23, GPIO11, GPIO6, GPIO21, GPIO15, GPIO7, GPIO4, GPIO5,  
GPIO13, GPIO14, GPIO16, GPIO1, GPIO17, GPIO27, GPIO24, GPIO22, GPIO8,  
GPIO3  
  
Please ensure that nothing is connected to any of the pins listed  
above for the test duration.  
  
Proceed with test? [y/N] y  
Testing GPIO12...ok  
Testing GPIO0...ok  
Testing GPIO2...ok  
Testing GPIO18...ok  
Testing GPIO26...ok  
Testing GPIO20...ok  
Testing GPIO25...ok  
Testing GPIO19...ok  
Testing GPIO10...ok  
Testing GPIO9...ok  
Testing GPIO23...ok  
Testing GPIO11...ok  
Testing GPIO6...ok  
Testing GPIO21...ok  
Testing GPIO15...ok  
Testing GPIO7...ok  
Testing GPIO4...ok  
Testing GPIO5...ok  
Testing GPIO13...ok  
Testing GPIO14...ok  
Testing GPIO16...ok  
Testing GPIO1...ok  
Testing GPIO17...ok  
Testing GPIO27...ok  
Testing GPIO24...ok  
Testing GPIO22...ok  
Testing GPIO8...ok  
Testing GPIO3...ok  
dave@amaterasu:~$
```

8.2.1 Synopsis

```
pintest [-h] [--version] [-p PINS] [-s SKIP] [-y] [-r REVISION]
```

8.2.2 Description

A utility for testing the function of GPIOs on a Raspberry Pi. It is possible to damage the GPIOs on a Pi by passing too much current (or voltage in the case of inputs) through them. The **pintest** utility can be used to determine if any of the GPIOs on a Pi are broken.

The utility will test all physically exposed GPIOs (those on the main GPIO header) by default, but you may wish to only test a subset, or to exclude certain GPIOs which can be accomplished with the `pintest --pins` (page 76) or `pintest --skip` (page 76) options.

Note: You must ensure that nothing is connected to the GPIOs that you intend to test. By default, the utility will prompt you before proceeding, repeating this warning.

In the event that any GPIO is found to be faulty, it will be reported in the output and the utility will exit with a return code of 1. If all specified GPIOs test fine, the return code is zero.

8.2.3 Options

-h, --help

show this help message and exit

--version

Show the program's version number and exit

-p PINS, --pins PINS

The pin(s) to test. Can be specified as a comma-separated list of pins. Pin numbers can be given in any form accepted by gpiozero, e.g. 14, GPIO14, BOARD8. The default is to test all pins

-s SKIP, --skip SKIP

The pin(s) to skip testing. Can be specified as comma-separated list of pins. Pin numbers can be given in any form accepted by gpiozero, e.g. 14, GPIO14, BOARD8. The default is to skip no pins

-y, --yes

Proceed without prompting

-r REVISION, --revision REVISION

Force board revision. Default is to autodetect revision of current device. You should avoid this option unless you are very sure the detection is incorrect

8.2.4 Examples

Test all physically exposed GPIOs on the board:

```
$ pintest
```

Test just the I2C GPIOs without prompting:

```
$ pintest --pins 2,3 --yes
```

Exclude the SPI GPIOs from testing:


```
$ pintest --exclude GPIO7,GPIO8,GPIO9,GPIO10,GPIO11
```

Note that pin numbers can be given in any form accepted by GPIO Zero, e.g. 14, GPIO14, or BOARD8.

8.3 Environment Variables

All utilities provided by GPIO Zero accept the following environment variables:

GPIOZERO_PIN_FACTORY

The library to use when communicating with the GPIO pins. Defaults to attempting to load `lgpio`, then `RPi.GPIO`, then `pigpio`, and finally uses a native Python implementation. Valid values include “`lgpio`”, “`rpigpio`”, “`pigpio`”, “`native`”, and “`mock`”. The latter is most useful on non-Pi platforms as it emulates a Raspberry Pi model 3B (by default).

PIGPIO_ADDR

The hostname of the Raspberry Pi the `pigpio` library should attempt to connect to (if the `pigpio` pin factory is being used). Defaults to `localhost`.

PIGPIO_PORT

The port number the `pigpio` library should attempt to connect to (if the `pigpio` pin factory is being used). Defaults to `8888`.

FREQUENTLY ASKED QUESTIONS

9.1 How do I keep my script running?

The following script looks like it should turn an *LED* (page 125) on:

```
from gpiozero import LED

led = LED(17)
led.on()
```

And it does, if you're using the Python or IPython shell, or the IDLE, Thonny or Mu editors. However, if you saved this script as a Python file and ran it, it would flash on briefly, then the script would end and it would turn off.

The following file includes an intentional `pause()`⁵⁹ to keep the script alive:

```
from gpiozero import LED
from signal import pause

led = LED(17)
led.on()

pause()
```

Now the script will stay running, leaving the LED on, until it is terminated manually (e.g. by pressing Ctrl+C). Similarly, when setting up callbacks on button presses or other input devices, the script needs to be running for the events to be detected:

```
from gpiozero import Button
from signal import pause

def hello():
    print("Hello")

button = Button(2)
button.when_pressed = hello

pause()
```

⁵⁹ <https://docs.python.org/3.9/library/signal.html#signal.pause>

9.2 What's the difference between `when_pressed`, `is_pressed` and `wait_for_press`?

gpiozero provides a range of different approaches to reading input devices. Sometimes you want to ask if a button's pressed, sometimes you want to do something until it's pressed, and sometimes you want something to happen *when* it's been pressed, regardless of what else is going on.

In a simple example where the button is the only device in play, all of the options would be equally effective. But as soon as you introduce an extra element, like another GPIO device, you might need to choose the right approach depending on your use case.

- `is_pressed` (page 106) is an attribute which reveals whether the button is currently pressed by returning `True` or `False`:

```
while True:
    if btn.is_pressed:
        print("Pressed")
    else:
        print("Not pressed")
```

- `wait_for_press()` (page 106) is a method which blocks the code from continuing until the button is pressed. Also see `wait_for_release()` (page 106):

```
while True:
    print("Released. Waiting for press..")
    btn.wait_for_press()
    print("Pressed. Waiting for release...")
    btn.wait_for_release()
```

- `when_pressed` (page 107) is an attribute which assigns a callback function to the event of the button being pressed. Every time the button is pressed, the callback function is executed in a separate thread. Also see `when_released` (page 107):

```
def pressed():
    print("Pressed")

def released():
    print("Released")

btn.when_pressed = pressed
btn.when_released = released
```

This pattern of options is common among many devices. All *input devices* (page 105) and *internal devices* (page 189) have `is_active`, `when_activated`, `when_deactivated`, `wait_for_active` and `wait_for_inactive`, and many provide aliases (such as “pressed” for “activated”).

Also see a more advanced approach in the *Source/Values* (page 61) page.

9.3 My event handler isn't being called

When assigning event handlers, don't call the function you're assigning. For example:

```
from gpiozero import Button

def pushed():
    print("Don't push the button!")

b = Button(17)
b.when_pressed = pushed()
```

In the case above, when assigning to `when_pressed` (page 107), the thing that is assigned is the *result of calling* the `pushed` function. Because `pushed` doesn't explicitly return anything, the result is `None`⁶⁰. Hence this is equivalent to doing:

```
b.when_pressed = None
```

This doesn't raise an error because it's perfectly valid: it's what you assign when you don't want the event handler to do anything. Instead, you want to do the following:

```
b.when_pressed = pushed
```

This will assign the function to the event handler *without calling it*. This is the crucial difference between `my_function` (a reference to a function) and `my_function()` (the result of calling a function).

Note: Note that as of v1.5, setting a callback to `None`⁶¹ when it was previously `None`⁶² will raise a `CallbackSetToNone` (page 244) warning, with the intention of alerting users when callbacks are set to `None`⁶³ accidentally. However, if this is intentional, the warning can be suppressed. See the `warnings`⁶⁴ module for reference.

9.4 Why do I get PinFactoryFallback warnings when I import gpiozero?

You are most likely working in a virtual Python environment and have forgotten to install a pin driver library like `RPi.GPIO`. GPIO Zero relies upon lower level pin drivers to handle interfacing to the GPIO pins on the Raspberry Pi, so you can eliminate the warning simply by installing GPIO Zero's first preference:

```
$ pip install rpi.gpio
```

When GPIO Zero is imported it attempts to find a pin driver by importing them in a preferred order (detailed in *API - Pins* (page 221)). If it fails to load its first preference (`RPi.GPIO`) it notifies you with a warning, then falls back to trying its second preference and so on. Eventually it will fall back all the way to the `native` implementation. This is a pure Python implementation built into GPIO Zero itself. While this will work for most things it's almost certainly not what you want (it doesn't support PWM, and it's quite slow at certain things).

If you want to use a pin driver other than the default, and you want to suppress the warnings you've got a couple of options:

1. Explicitly specify what pin driver you want via the `GPIOZERO_PIN_FACTORY` (page 77) environment variable. For example:

```
$ GPIOZERO_PIN_FACTORY=pigpio python3
```

In this case no warning is issued because there's no fallback; either the specified factory loads or it fails in which case an `ImportError`⁶⁵ will be raised.

2. Suppress the warnings and let the fallback mechanism work:

```
>>> import warnings
>>> warnings.simplefilter('ignore')
>>> import gpiozero
```

Refer to the `warnings`⁶⁶ module documentation for more refined ways to filter out specific warning classes.

⁶⁰ <https://docs.python.org/3.9/library/constants.html#None>

⁶¹ <https://docs.python.org/3.9/library/constants.html#None>

⁶² <https://docs.python.org/3.9/library/constants.html#None>

⁶³ <https://docs.python.org/3.9/library/constants.html#None>

⁶⁴ <https://docs.python.org/3.9/library/warnings.html#module-warnings>

⁶⁵ <https://docs.python.org/3.9/library/exceptions.html#ImportError>

⁶⁶ <https://docs.python.org/3.9/library/warnings.html#module-warnings>

9.5 How can I tell what version of gpiozero I have installed?

The gpiozero library relies on the `setuptools` package for installation services. You can use the `setuptools pkg_resources` API to query which version of gpiozero is available in your Python environment like so:

```
>>> from pkg_resources import require
>>> require('gpiozero')
[gpiozero 1.6.2 (/usr/lib/python3/dist-packages)]
>>> require('gpiozero')[0].version
'1.6.2'
```

If you have multiple versions installed (e.g. from **pip** and **apt**) they will not show up in the list returned by the `pkg_resources.require()` method. However, the first entry in the list will be the version that `import gpiozero` will import.

If you receive the error “No module named `pkg_resources`”, you need to install **pip**. This can be done with the following command in Raspberry Pi OS:

```
$ sudo apt install python3-pip
```

Alternatively, install `pip` with `get-pip`⁶⁷.

9.6 Why do I get “command not found” when running `pinout`?

The gpiozero library is available as a Debian package for Python 2 and Python 3, but the *pinout* (page 69) tool cannot be made available by both packages, so it’s only included with the Python 3 version of the package. To make sure the *pinout* (page 69) tool is available, the “python3-gpiozero” package must be installed:

```
$ sudo apt install python3-gpiozero
```

Alternatively, installing gpiozero using **pip** will install the command line tool, regardless of Python version:

```
$ sudo pip3 install gpiozero
```

or:

```
$ sudo pip install gpiozero
```

9.7 The `pinout` command line tool incorrectly identifies my Raspberry Pi model

If your Raspberry Pi model is new, it’s possible it wasn’t known about at the time of the gpiozero release you are using. Ensure you have the latest version installed (remember, the *pinout* (page 69) tool usually comes from the Python 3 version of the package as noted in the previous FAQ).

If the Pi model you are using isn’t known to gpiozero, it may have been added since the last release. You can check the [GitHub issues](https://github.com/gpiozero/gpiozero/issues)⁶⁸ to see if it’s been reported before, or check the [commits](https://github.com/gpiozero/gpiozero/commits/master)⁶⁹ on GitHub since the last release to see if it’s been added. The model determination can be found in `gpiozero/pins/data.py`.

⁶⁷ <https://pip.pypa.io/en/stable/installing/>

⁶⁸ <https://github.com/gpiozero/gpiozero/issues>

⁶⁹ <https://github.com/gpiozero/gpiozero/commits/master>

9.8 What's the gpiozero equivalent of GPIO.cleanup()?

Many people ask how to do the equivalent of the `cleanup` function from `RPi.GPIO`. In `gpiozero`, at the end of your script, cleanup is run automatically, restoring your GPIO pins to the state they were found.

To explicitly close a connection to a pin, you can manually call the `close()` (page 199) method on a device object:

```
>>> led = LED(2)
>>> led.on()
>>> led
<gpiozero.LED object on pin GPIO2, active_high=True, is_active=True>
>>> led.close()
>>> led
<gpiozero.LED object closed>
```

This means that you can reuse the pin for another device, and that despite turning the LED on (and hence, the pin high), after calling `close()` (page 199) it is restored to its previous state (LED off, pin low).

Read more about *Migrating from RPi.GPIO* (page 93).

9.9 How do I use `button.when_pressed` and `button.when_held` together?

The `Button` (page 105) class provides a `when_held` (page 106) property which is used to set a callback for when the button is held down for a set amount of time (as determined by the `hold_time` (page 106) property). If you want to set `when_held` (page 106) as well as `when_pressed` (page 107), you'll notice that both callbacks will fire. Sometimes, this is acceptable, but often you'll want to only fire the `when_pressed` (page 107) callback when the button has not been held, only pressed.

The way to achieve this is to *not* set a callback on `when_pressed` (page 107), and instead use `when_released` (page 107) to work out whether it had been held or just pressed:

```
from gpiozero import Button

Button.was_held = False

def held(btn):
    btn.was_held = True
    print("button was held not just pressed")

def released(btn):
    if not btn.was_held:
        pressed()
    btn.was_held = False

def pressed():
    print("button was pressed not held")

btn = Button(2)

btn.when_held = held
btn.when_released = released
```

9.10 Why do I get “ImportError: cannot import name” when trying to import from gpiozero?

It’s common to see people name their first gpiozero script `gpiozero.py`. Unfortunately, this will cause your script to try to import itself, rather than the gpiozero library from the libraries path. You’ll see an error like this:

```
Traceback (most recent call last):
  File "gpiozero.py", line 1, in <module>
    from gpiozero import LED
  File "/home/pi/gpiozero.py", line 1, in <module>
    from gpiozero import LED
ImportError: cannot import name 'LED'
```

Simply rename your script to something else, and run it again. Be sure not to name any of your scripts the same name as a Python module you may be importing, such as `picamera.py`.

9.11 Why do I get an AttributeError trying to set attributes on a device object?

If you try to add an attribute to a gpiozero device object after its initialization, you’ll find you can’t:

```
>>> from gpiozero import Button
>>> btn = Button(2)
>>> btn.label = 'alarm'
Traceback (most recent call last):
  File "<stdin>", line 1, in <module>
  File "/usr/lib/python3/dist-packages/gpiozero/devices.py", line 118, in __
->setattr__
    self.__class__.__name__, name))
AttributeError: 'Button' object has no attribute 'label'
```

This is in order to prevent users accidentally setting new attributes by mistake. Because gpiozero provides functionality through setting attributes via properties, such as callbacks on buttons (and often there is no immediate feedback when setting a property), this could lead to bugs very difficult to find. Consider the following example:

```
from gpiozero import Button

def hello():
    print("hello")

btn = Button(2)

btn.pressed = hello
```

This is perfectly valid Python code, and no errors would occur, but the program would not behave as expected: pressing the button would do nothing, because the property for setting a callback is `when_pressed` not `pressed`. But without gpiozero preventing this non-existent attribute from being set, the user would likely struggle to see the mistake.

If you really want to set a new attribute on a device object, you need to create it in the class before initializing your object:

```
>>> from gpiozero import Button
>>> Button.label = ''
>>> btn = Button(2)
>>> btn.label = 'alarm'
>>> def press(btn):
```

(continues on next page)

(continued from previous page)

```
...:     print(btn.label, "was pressed")
>>> btn.when_pressed = press
```

9.12 Why is it called GPIO Zero? Does it only work on Pi Zero?

gpiozero works on all Raspberry Pi models, not just the Pi Zero.

The “zero” is part of a naming convention for “zero-boilerplate” education friendly libraries, which started with [Pygame Zero](https://pygame-zero.readthedocs.io/en/stable/)⁷⁰, and has been followed by [NetworkZero](https://networkzero.readthedocs.io/en/latest/)⁷¹, [guizero](https://lawsie.github.io/guizero/)⁷² and more.

These libraries aim to remove barrier to entry and provide a smooth learning curve for beginners by making it easy to get started and easy to build up to more advanced projects.

⁷⁰ <https://pygame-zero.readthedocs.io/en/stable/>

⁷¹ <https://networkzero.readthedocs.io/en/latest/>

⁷² <https://lawsie.github.io/guizero/>

BACKWARDS COMPATIBILITY

GPIO Zero 2.x is a new major version and thus backwards incompatible changes can be expected. We have attempted to keep these as minimal as reasonably possible while taking advantage of the opportunity to clean up things. This chapter documents breaking changes from version 1.x of the library to 2.x, and all deprecated functionality which will still work in release 2.0 but is scheduled for removal in a future 2.x release.

10.1 Finding and fixing deprecated usage

As of release 2.0, all deprecated functionality will raise `DeprecationWarning`⁷³ when used. By default, the Python interpreter suppresses these warnings (as they're only of interest to developers, not users) but you can easily configure different behaviour.

The following example script uses a number of deprecated functions:

```
import gpiozero

board = gpiozero.pi_info()
for header in board.headers.values():
    for pin in header.pins.values():
        if pin.pull_up:
            print(pin.function, 'is pulled up')
```

Despite using deprecated functionality the script runs happily (and silently) with gpiozero 2.0. To discover what deprecated functions are being used, we add a couple of lines to tell the warnings module that we want “default” handling of `DeprecationWarning`⁷⁴; “default” handling means that the first time an attempt is made to raise this warning at a particular location, the warning’s details will be printed to the console. All future invocations from the same location will be ignored. This saves flooding the console with warning details from tight loops. With this change, the script looks like this:

```
import gpiozero

import warnings
warnings.filterwarnings('default', category=DeprecationWarning)

board = gpiozero.pi_info()
for header in board.headers.values():
    for pin in header.pins.values():
        if pin.pull_up:
            print(pin.function, 'is pulled up')
```

And produces the following output on the console when run:

⁷³ <https://docs.python.org/3.9/library/exceptions.html#DeprecationWarning>

⁷⁴ <https://docs.python.org/3.9/library/exceptions.html#DeprecationWarning>

```
/home/dave/projects/home/gpiozero/gpio-zero/gpiozero/pins/__init__.py:899:
DeprecationWarning: PinInfo.pull_up is deprecated; please use PinInfo.pull
  warnings.warn(
/home/dave/projects/home/gpiozero/gpio-zero/gpiozero/pins/__init__.py:889:
DeprecationWarning: PinInfo.function is deprecated; please use PinInfo.name
  warnings.warn(
GPIO2 is pulled up
GPIO3 is pulled up
```

This tells us which pieces of deprecated functionality are being used in our script, but it doesn't tell us where in the script they were used. For this, it is more useful to have warnings converted into full blown exceptions. With this change, each time a `DeprecationWarning`⁷⁵ would have been printed, it will instead cause the script to terminate with an unhandled exception and a full stack trace:

```
import gpiozero

import warnings
warnings.filterwarnings('error', category=DeprecationWarning)

board = gpiozero.pi_info()
for header in board.headers.values():
    for pin in header.pins.values():
        if pin.pull_up:
            print(pin.function, 'is pulled up')
```

Now when we run the script it produces the following:

```
Traceback (most recent call last):
  File "/home/dave/projects/home/gpiozero/gpio-zero/foo.py", line 9, in <module>
    if pin.pull_up:
  File "/home/dave/projects/home/gpiozero/gpio-zero/gpiozero/pins/__init__.py", line 899, in pull_up
    warnings.warn(
DeprecationWarning: PinInfo.pull_up is deprecated; please use PinInfo.pull
```

This tells us that line 9 of our script is using deprecated functionality, and provides a hint of how to fix it. We change line 9 to use the “pull” attribute instead. Now we run again, and this time get the following:

```
Traceback (most recent call last):
  File "/home/dave/projects/home/gpiozero/gpio-zero/foo.py", line 10, in <module>
    print(pin.function, 'is pulled up')
  File "/home/dave/projects/home/gpiozero/gpio-zero/gpiozero/pins/__init__.py", line 889, in function
    warnings.warn(
DeprecationWarning: PinInfo.function is deprecated; please use PinInfo.name
```

Now we can tell line 10 has a problem, and once again the exception tells us how to fix it. We continue in this fashion until the script looks like this:

```
import gpiozero

import warnings
warnings.filterwarnings('error', category=DeprecationWarning)

board = gpiozero.pi_info()
for header in board.headers.values():
    for pin in header.pins.values():
        if pin.pull == 'up':
            print(pin.name, 'is pulled up')
```

⁷⁵ <https://docs.python.org/3.9/library/exceptions.html#DeprecationWarning>

The script now runs to completion, so we can be confident it's no longer using any deprecated functionality and will run happily even when this functionality is removed in a future 2.x release. At this point, you may wish to remove the `filterwarnings` line as well (or at least comment it out).

10.2 Python 2.x support dropped

By far the biggest and most important change is that the Python 2.x series is no longer supported (in practice, this means Python 2.7 is no longer supported). If your code is not compatible with Python 3, you should follow the [porting guide](#)⁷⁶ in the [Python documentation](#)⁷⁷.

As of GPIO Zero 2.0, the lowest supported Python version will be 3.5. This base version may advance with minor releases, but we will make a reasonable best effort not to break compatibility with old Python 3.x versions, and to ensure that GPIO Zero can run on the version of Python in Debian oldstable at the time of its release.

10.3 RPIO pin factory removed

The RPIO pin implementation is unsupported on the Raspberry Pi 2 onwards and hence of little practical use these days. Anybody still relying on RPIO's stable PWM implementation is advised to try the `pigpio` pin implementation instead (also supported by GPIO Zero).

10.4 Deprecated pin-factory aliases removed

Several deprecated aliases for pin factories, which could be specified by the `GPIOZERO_PIN_FACTORY` (page 77) environment variable, have been removed:

- “PiGPIOPin” is removed in favour of “pigpio”
- “RPiGPIOPin” is removed in favour of “rpigpio”
- “NativePin” is removed in favour of “native”

In other words, you can no longer use the following when invoking your script:

```
$ GPIOZERO_PIN_FACTORY=PiGPIOPin python3 my_script.py
```

Instead, you should use the following:

```
$ GPIOZERO_PIN_FACTORY=pigpio python3 my_script.py
```

10.5 Keyword arguments

Many classes in GPIO Zero 1.x were documented as having keyword-only arguments in their constructors and methods. For example, the `PiLiter` (page 170) was documented as having the constructor: `PiLiter(*, pwm=False, initial_value=False, pin_factory=None)` implying that all its arguments were keyword only.

However, despite being documented in this manner, this was rarely enforced as it was extremely difficult to do so under Python 2.x without complicating the code-base considerably (Python 2.x lacked the “*” syntax to declare keyword-only arguments; they could only be implemented via “**kwargs” arguments and dictionary manipulation).

In GPIO Zero 2.0, all such arguments are now *actually* keyword arguments. If your code complied with the 1.x documentation you shouldn't notice any difference. In other words, the following is still fine:

⁷⁶ <https://docs.python.org/3/howto/pyporting.html>

⁷⁷ <https://docs.python.org/3/>

```
from gpiozero import PiLiter

l = PiLiter(pwm=True)
```

However, if you had omitted the keyword you will need to modify your code:

```
from gpiozero import PiLiter

l = PiLiter(True) # this will no longer work
```

10.6 Robots take Motors, and PhaseEnableRobot is deprecated

The GPIO Zero 1.x API specified that a *Robot* (page 176) was constructed with two tuples that were in turn used to construct two *Motor* (page 134) instances. The 2.x API replaces this with simply passing in the *Motor* (page 134), or *PhaseEnableMotor*() (page 136) instances you wish to use as the left and right wheels.

If your current code uses pins 4 and 14 for the left wheel, and 17 and 18 for the right wheel, it may look like this:

```
from gpiozero import Robot

r = Robot(left=(4, 14), right=(17, 18))
```

This should be changed to the following:

```
from gpiozero import Robot, Motor

r = Robot(left=Motor(4, 14), right=Motor(17, 18))
```

Likewise, if you are currently using *PhaseEnableRobot*() (page 178) your code may look like this:

```
from gpiozero import PhaseEnableRobot

r = PhaseEnableRobot(left=(4, 14), right=(17, 18))
```

This should be changed to the following:

```
from gpiozero import Robot, PhaseEnableMotor

r = Robot(left=PhaseEnableMotor(4, 14),
          right=PhaseEnableMotor(17, 18))
```

This change came about because the *Motor* (page 134) class was also documented as having two mandatory parameters (*forward* and *backward*) and several keyword-only parameters, including the *enable* pin. However, *enable* was treated as a positional argument for the sake of constructing *Robot* (page 176) which was inconsistent. Furthermore, *PhaseEnableRobot*() (page 178) was more or less a redundant duplicate of *Robot* (page 176) but was lacking a couple of features added to *Robot* (page 176) later (notable “curved” turning).

Although the new API requires a little more typing, it does mean that phase enable robot boards now inherit all the functionality of *Robot* (page 176) because that’s all they use. Theoretically you could also mix and match regular motors and phase-enable motors although there’s little sense in doing so.

The former functionality (passing tuples to the *Robot* (page 176) constructor) will remain as deprecated functionality for gpiozero 2.0, but will be removed in a future 2.x release. *PhaseEnableRobot*() (page 178) remains as a stub function which simply returns a *Robot* (page 176) instance, but this will be removed in a future 2.x release.

10.7 PiBoardInfo, HeaderInfo, PinInfo

The *PiBoardInfo* (page 217) class, and the associated *HeaderInfo* (page 218) and *PinInfo* (page 219) classes have undergone a major re-structuring. This is partly because some of the prior terminology was confusing (e.g. the meaning of *PinInfo.function* (page 219) and *Pin.function* (page 229) clashed), and partly because with the addition of the “lgpio” factory it’s entirely possible to use gpiozero on non-Pi boards (although at present the *pins.lgpio.LGPIOFactory* (page 235) is still written assuming it is only ever used on a Pi).

As a result the following classes, methods, and attributes are deprecated (not yet removed, but will be in a future release within the 2.x series):

- *Factory.pi_info* is deprecated in favour of *Factory.board_info* (page 227) which returns a *BoardInfo* instead of *PiBoardInfo* (page 217) (which is now a subclass of the former).
- *PinInfo.pull_up* (page 219) is deprecated in favour of *PinInfo.pull* (page 219).
- *PinInfo.function* (page 219) is deprecated in favour of *PinInfo.name* (page 219).
- *BoardInfo.physical_pins()*, *BoardInfo.physical_pin()*, and *BoardInfo.pulled_up()*, are all deprecated in favour of a combination of the new *BoardInfo.find_pin()* and the attributes mentioned above.
- *PiPin.number* is deprecated in favour of *Pin.info.name*.

MIGRATING FROM RPi.GPIO

If you are familiar with the [RPi.GPIO](#)⁷⁸ library, you will be used to writing code which deals with *pins* and the *state of pins*. You will see from the examples in this documentation that we generally refer to things like LEDs and Buttons rather than input pins and output pins.

GPIO Zero provides classes which represent *devices*, so instead of having a pin number and telling it to go high, you have an LED and you tell it to turn on, and instead of having a pin number and asking if it's high or low, you have a button and ask if it's pressed. There is also no boilerplate code to get started — you just import the parts you need.

GPIO Zero provides many device classes, each with specific methods and properties bespoke to that device. For example, the functionality for an HC-SR04 Distance Sensor can be found in the [DistanceSensor](#) (page 113) class.

As well as specific device classes, we provide base classes [InputDevice](#) (page 121) and [OutputDevice](#) (page 144). One main difference between these and the equivalents in RPi.GPIO is that they are classes, not functions, which means that you initialize one to begin, and provide its pin number, but then you never need to use the pin number again, as it's stored by the object.

GPIO Zero was originally just a layer on top of RPi.GPIO, but we later added support for various other underlying pin libraries. RPi.GPIO is currently the default pin library used. Read more about this in [Changing the pin factory](#) (page 223).

11.1 Output devices

Turning an LED on in [RPi.GPIO](#)⁷⁹:

```
import RPi.GPIO as GPIO

GPIO.setmode(GPIO.BCM)
GPIO.setwarnings(False)

GPIO.setup(2, GPIO.OUT)

GPIO.output(2, GPIO.HIGH)
```

Turning an LED on in GPIO Zero:

```
from gpiozero import LED

led = LED(2)

led.on()
```

The [LED](#) (page 125) class also supports threaded blinking through the [blink\(\)](#) (page 126) method.

⁷⁸ <https://pypi.org/project/RPi.GPIO/>

⁷⁹ <https://pypi.org/project/RPi.GPIO/>

OutputDevice (page 144) is the base class for output devices, and can be used in a similar way to output devices in RPi.GPIO.

See a full list of supported *output devices* (page 125). Other output devices have similar property and method names. There is commonality in naming at base level, such as `OutputDevice.is_active`, which is aliased in a device class, such as `LED.is_lit` (page 126).

11.2 Input devices

Reading a button press in `RPi.GPIO`⁸⁰:

```
import RPi.GPIO as GPIO

GPIO.setmode(GPIO.BCM)
GPIO.setwarnings(False)

GPIO.setup(4, GPIO.IN, GPIO.PUD_UP)

if not GPIO.input(4):
    print("button is pressed")
```

Reading a button press in GPIO Zero:

```
from gpiozero import Button

btn = Button(4)

if btn.is_pressed:
    print("button is pressed")
```

Note that in the `RPi.GPIO` example, the button is set up with the option `GPIO.PUD_UP` which means “pull-up”, and therefore when the button is not pressed, the pin is high. When the button is pressed, the pin goes low, so the condition requires negation (`if not`). If the button was configured as pull-down, the logic is reversed and the condition would become `if GPIO.input(4)`:

```
import RPi.GPIO as GPIO

GPIO.setmode(GPIO.BCM)
GPIO.setwarnings(False)

GPIO.setup(4, GPIO.IN, GPIO.PUD_DOWN)

if GPIO.input(4):
    print("button is pressed")
```

In GPIO Zero, the default configuration for a button is pull-up, but this can be configured at initialization, and the rest of the code stays the same:

```
from gpiozero import Button

btn = Button(4, pull_up=False)

if btn.is_pressed:
    print("button is pressed")
```

`RPi.GPIO` also supports blocking edge detection.

Wait for a pull-up button to be pressed in `RPi.GPIO`:

⁸⁰ <https://pypi.org/project/RPi.GPIO/>

```
import RPi.GPIO as GPIO

GPIO.setmode(GPIO.BCM)
GPIO.setwarnings(False)

GPIO.setup(4, GPIO.IN, GPIO.PUD_UP)

GPIO.wait_for_edge(4, GPIO.FALLING):
    print("button was pressed")
```

The equivalent in GPIO Zero:

```
from gpiozero import Button

btn = Button(4)

btn.wait_for_press()
print("button was pressed")
```

Again, if the button is pulled down, the logic is reversed. Instead of waiting for a falling edge, we're waiting for a rising edge:

```
import RPi.GPIO as GPIO

GPIO.setmode(GPIO.BCM)
GPIO.setwarnings(False)

GPIO.setup(4, GPIO.IN, GPIO.PUD_UP)

GPIO.wait_for_edge(4, GPIO.FALLING):
    print("button was pressed")
```

Again, in GPIO Zero, the only difference is in the initialization:

```
from gpiozero import Button

btn = Button(4, pull_up=False)

btn.wait_for_press()
print("button was pressed")
```

`RPi.GPIO` has threaded callbacks. You create a function (which must take one argument), and pass it in to `add_event_detect`, along with the pin number and the edge direction:

```
import RPi.GPIO as GPIO

GPIO.setmode(GPIO.BCM)
GPIO.setwarnings(False)

def pressed(pin):
    print("button was pressed")

def released(pin):
    print("button was released")

GPIO.setup(4, GPIO.IN, GPIO.PUD_UP)

GPIO.add_event_detect(4, GPIO.FALLING, pressed)
GPIO.add_event_detect(4, GPIO.RISING, released)
```

In GPIO Zero, you assign the `when_pressed` (page 107) and `when_released` (page 107) properties to set up callbacks on those actions:

```
from gpiozero import Button

def pressed():
    print("button was pressed")

def released():
    print("button was released")

btn = Button(4)

btn.when_pressed = pressed
btn.when_released = released
```

`when_held` (page 106) is also provided, where the length of time considered a “hold” is configurable.

The callback functions don’t have to take any arguments, but if they take one, the button object is passed in, allowing you to determine which button called the function.

`InputDevice` (page 121) is the base class for input devices, and can be used in a similar way to input devices in RPi.GPIO.

See a full list of *input devices* (page 105). Other input devices have similar property and method names. There is commonality in naming at base level, such as `InputDevice.is_active` (page 122), which is aliased in a device class, such as `Button.is_pressed` (page 106) and `LightSensor.light_detected` (page 112).

11.3 Composite devices, boards and accessories

Some devices require connections to multiple pins, for example a distance sensor, a combination of LEDs or a HAT. Some GPIO Zero devices comprise multiple device connections within one object, such as `RGBLED` (page 128), `LEDBoard` (page 157), `DistanceSensor` (page 113), `Motor` (page 134) and `Robot` (page 176).

With RPi.GPIO, you would have one output pin for the trigger, and one input pin for the echo. You would time the echo and calculate the distance. With GPIO Zero, you create a single `DistanceSensor` (page 113) object, specifying the trigger and echo pins, and you would read the `DistanceSensor.distance` (page 114) property which automatically calculates the distance within the implementation of the class.

The `Motor` (page 134) class controls two output pins to drive the motor forwards or backwards. The `Robot` (page 176) class controls four output pins (two motors) in the right combination to drive a robot forwards or backwards, and turn left and right.

The `LEDBoard` (page 157) class takes an arbitrary number of pins, each controlling a single LED. The resulting `LEDBoard` (page 157) object can be used to control all LEDs together (all on / all off), or individually by index. Also the object can be iterated over to turn LEDs on in order. See examples of this (including slicing) in the *advanced recipes* (page 37).

11.4 PWM (Pulse-width modulation)

Both libraries support software PWM control on any pin. Depending on the pin library used, GPIO Zero can also support hardware PWM (using `RPIOPin` or `PiGPIOPin`).

A simple example of using PWM is to control the brightness of an LED.

In RPi.GPIO⁸¹:

```
import RPi.GPIO as GPIO
from time import sleep
```

(continues on next page)

⁸¹ <https://pypi.org/project/RPi.GPIO/>

(continued from previous page)

```
GPIO.setmode(GPIO.BCM)
GPIO.setwarnings(False)

GPIO.setup(2, GPIO.OUT)
pwm = GPIO.PWM(2, 100)
pwm.start(0)

for dc in range(101):
    pwm.changeDutyCycle(dc)
    sleep(0.01)
```

In GPIO Zero:

```
from gpiozero import PWMLED
from time import sleep

led = PWMLED(2)

for b in range(101):
    led.value = b / 100.0
    sleep(0.01)
```

[PWMLED](#) (page 127) has a [blink\(\)](#) (page 127) method which can be used the same was as [LED](#) (page 125)'s [blink\(\)](#) (page 126) method, but its PWM capabilities allow for `fade_in` and `fade_out` options to be provided. There is also the [pulse\(\)](#) (page 127) method which provides a neat way to have an LED fade in and out repeatedly.

Other devices can make use of PWM, such as motors (for variable speed) and servos. See the [Motor](#) (page 134), [Servo](#) (page 137) and [AngularServo](#) (page 139) classes for information on those. [Motor](#) (page 134) and [Robot](#) (page 176) default to using PWM, but it can be disabled with `pwm=False` at initialization. Servos cannot be used without PWM. Devices containing LEDs default to not using PWM, but `pwm=True` can be specified and any LED objects within the device will be initialized as [PWMLED](#) (page 127) objects.

11.5 Cleanup

Pin state cleanup is explicit in RPi.GPIO, and is done manually with `GPIO.cleanup()` but in GPIO Zero, cleanup is automatically performed on every pin used, at the end of the script. Manual cleanup is possible by use of the [close\(\)](#) (page 199) method on the device.

Note that cleanup only occurs at the point of normal termination of the script. If the script exits due to a program error, cleanup will not be performed. To ensure that cleanup is performed after an exception is raised, the exception must be handled, for example:

```
from gpiozero import Button

btn = Button(4)

while True:
    try:
        if btn.is_pressed:
            print("Pressed")
    except KeyboardInterrupt:
        print("Ending program")
```

Read more in the relevant FAQ: [What's the gpiozero equivalent of GPIO.cleanup\(\)? \(page 83\)](#)

11.6 Pi Information

RPi.GPIO provides information about the Pi you’re using. The equivalent in GPIO Zero is the function `pi_info()` (page 217):

```
>>> from gpiozero import pi_info
>>> pi = pi_info()
>>> pi
PiBoardInfo(revision='a02082', model='3B', pcb_revision='1.2', released='2016Q1',
↳soc='BCM2837', manufacturer='Sony', memory=1024, storage='MicroSD', usb=4,
↳ethernet=1, wifi=True, bluetooth=True, csi=1, dsi=1, headers=..., board=...)
>>> pi.soc
'BCM2837'
>>> pi.wifi
True
```

Read more about what `PiBoardInfo` (page 217) provides.

11.7 More

GPIO Zero provides more than just GPIO device support, it includes some support for *SPI devices* (page 147) including a range of analog to digital converters.

Device classes which are compatible with other GPIO devices, but have no relation to GPIO pins, such as *CPU Temperature* (page 192), *TimeOfDay* (page 190), *PingServer* (page 191) and *LoadAverage* (page 193) are also provided.

GPIO Zero features support for multiple pin libraries. The default is to use `RPi.GPIO` to control the pins, but you can choose to use another library, such as `pigpio`, which supports network controlled GPIO. See *Changing the pin factory* (page 223) and *Configuring Remote GPIO* (page 45) for more information.

It is possible to run GPIO Zero on your PC, both for remote GPIO and for testing purposes, using *Mock pins* (page 225).

Another feature of this library is configuring devices to be connected together in a logical way, for example in one line you can say that an LED and button are “paired”, i.e. the button being pressed turns the LED on. Read about this in *Source/Values* (page 61).

11.8 FAQs

Note the following FAQs which may catch out users too familiar with RPi.GPIO:

- *How do I keep my script running?* (page 79)
- *Why do I get PinFactoryFallback warnings when I import gpiozero?* (page 81)
- *What’s the gpiozero equivalent of GPIO.cleanup()?* (page 83)

CONTRIBUTING

Contributions to the library are welcome! Here are some guidelines to follow.

12.1 Suggestions

Please make suggestions for additional components or enhancements to the codebase by opening an [issue](#)⁸² explaining your reasoning clearly.

12.2 Bugs

Please submit bug reports by opening an [issue](#)⁸³ explaining the problem clearly using code examples.

12.3 Documentation

The documentation source lives in the [docs](#)⁸⁴ folder. Contributions to the documentation are welcome but should be easy to read and understand.

12.4 Commit messages and pull requests

Commit messages should be concise but descriptive, and in the form of a patch description, i.e. instructional not past tense (“Add LED example” not “Added LED example”).

Commits which close (or intend to close) an issue should include the phrase “fix #123” or “close #123” where #123 is the issue number, as well as include a short description, for example: “Add LED example, close #123”, and pull requests should aim to match or closely match the corresponding issue title.

Copyrights on submissions are owned by their authors (we don’t bother with copyright assignments), and we assume that authors are happy for their code to be released under the project’s [license](#) (page 255). Do feel free to add your name to the list of contributors in `README.rst` at the top level of the project in your pull request! Don’t worry about adding your name to the copyright headers in whatever files you touch; these are updated automatically from the git metadata before each release.

⁸² <https://github.com/gpiozero/gpiozero/issues/new>

⁸³ <https://github.com/gpiozero/gpiozero/issues/new>

⁸⁴ <https://github.com/gpiozero/gpiozero/tree/master/docs>

12.5 Backwards compatibility

Since this library reached v1.0 we aim to maintain backwards-compatibility thereafter. Changes which break backwards-compatibility will not be accepted.

12.6 Python 2/3

The library is 100% compatible with both Python 2.7 and Python 3 from version 3.2 onwards. Since Python 2 is now past its [end-of-life](http://legacy.python.org/dev/peps/pep-0373/)⁸⁵, the 1.6.2 release (2021-03-18) is the last to support Python 2.

⁸⁵ <http://legacy.python.org/dev/peps/pep-0373/>

DEVELOPMENT

The main GitHub repository for the project can be found at:

<https://github.com/gpiozero/gpiozero>

For anybody wishing to hack on the project, we recommend starting off by getting to grips with some simple device classes. Pick something like *LED* (page 125) and follow its heritage backward to *DigitalOutputDevice* (page 141). Follow that back to *OutputDevice* (page 144) and you should have a good understanding of simple output devices along with a grasp of how GPIO Zero relies fairly heavily upon inheritance to refine the functionality of devices. The same can be done for input devices, and eventually more complex devices (composites and SPI based).

13.1 Development installation

If you wish to develop GPIO Zero itself, we recommend obtaining the source by cloning the GitHub repository and then use the “develop” target of the Makefile which will install the package as a link to the cloned repository allowing in-place development (it also builds a tags file for use with vim/emacs with Exuberant’s ctags utility). The following example demonstrates this method within a virtual Python environment:

```
$ sudo apt install lsb-release build-essential git exuberant-ctags \
    virtualenvwrapper python-virtualenv python3-virtualenv \
    python-dev python3-dev
```

After installing `virtualenvwrapper` you’ll need to restart your shell before commands like `mkvirtualenv` will operate correctly. Once you’ve restarted your shell, continue:

```
$ cd
$ mkvirtualenv -p /usr/bin/python3 gpiozero
$ workon gpiozero
(gpiozero) $ git clone https://github.com/gpiozero/gpiozero.git
(gpiozero) $ cd gpiozero
(gpiozero) $ make develop
```

You will likely wish to install one or more pin implementations within the virtual environment (if you don’t, GPIO Zero will use the “native” pin implementation which is usable at this stage, but doesn’t support facilities like PWM):

```
(gpiozero) $ pip install rpi.gpio pigpio
```

If you are working on SPI devices you may also wish to install the `spidev` package to provide hardware SPI capabilities (again, GPIO Zero will work without this, but a big-banging software SPI implementation will be used instead which limits bandwidth):

```
(gpiozero) $ pip install spidev
```

To pull the latest changes from git into your clone and update your installation:

```
$ workon gpiozero
(gpiozero) $ cd ~/gpiozero
(gpiozero) $ git pull
(gpiozero) $ make develop
```

To remove your installation, destroy the sandbox and the clone:

```
(gpiozero) $ deactivate
$ rmvirtualenv gpiozero
$ rm -rf ~/gpiozero
```

13.2 Building the docs

If you wish to build the docs, you'll need a few more dependencies. Inkscape is used for conversion of SVGs to other formats, Graphviz is used for rendering certain charts, and TeX Live is required for building PDF output. The following command should install all required dependencies:

```
$ sudo apt install texlive-latex-recommended texlive-latex-extra \
    texlive-fonts-recommended texlive-xetex graphviz inkscape \
    python3-sphinx python3-sphinx-rtd-theme latexmk xindy
```

Once these are installed, you can use the “doc” target to build the documentation:

```
$ workon gpiozero
(gpiozero) $ cd ~/gpiozero
(gpiozero) $ make doc
```

The HTML output is written to `build/html` while the PDF output goes to `build/latex`.

13.3 Test suite

If you wish to run the GPIO Zero test suite, follow the instructions in [Development installation](#) (page 101) above and then make the “test” target within the sandbox. You'll also need to install some pip packages:

```
$ workon gpiozero
(gpiozero) $ pip install coverage mock pytest
(gpiozero) $ cd ~/gpiozero
(gpiozero) $ make test
```

The test suite expects pins 22 and 27 (by default) to be wired together in order to run the “real” pin tests. The pins used by the test suite can be overridden with the environment variables `GPIOZERO_TEST_PIN` (defaults to 22) and `GPIOZERO_TEST_INPUT_PIN` (defaults to 27).

Warning: When wiring GPIOs together, ensure a load (like a 1K Ω resistor) is placed between them. Failure to do so may lead to blown GPIO pins (your humble author has a fried GPIO27 as a result of such laziness, although it did take *many* runs of the test suite before this occurred!).

The test suite is also setup for usage with the **tox** utility, in which case it will attempt to execute the test suite with all supported versions of Python. If you are developing under Ubuntu you may wish to look into the [Dead Snakes PPA](#)⁸⁶ in order to install old/new versions of Python; the tox setup *should* work with the version of tox shipped with Ubuntu Xenial, but more features (like parallel test execution) are available with later versions.

On the subject of parallel test execution, this is also supported in the tox setup, including the “real” pin tests (a file-system level lock is used to ensure different interpreters don't try to access the physical pins simultaneously).

⁸⁶ <https://launchpad.net/~deadsnakes/%2Barchive/ubuntu/ppa>

For example, to execute the test suite under tox, skipping interpreter versions which are not installed:

```
$ tox -s
```

To execute the test suite under all installed interpreter versions in parallel, using as many parallel tasks as there are CPUs, then displaying a combined report of coverage from all environments:

```
$ tox -p auto -s
$ coverage combine --rcfile coverage.cfg
$ coverage report --rcfile coverage.cfg
```

13.4 Mock pins

The test suite largely depends on the existence of the mock pin factory *MockFactory* (page 237), which is also useful for manual testing, for example in the Python shell or another REPL. See the section on *Mock pins* (page 225) in the *API - Pins* (page 221) chapter for more information.

API - INPUT DEVICES

These input device component interfaces have been provided for simple use of everyday components. Components must be wired up correctly before use in code.

Note: All GPIO pin numbers use Broadcom (BCM) numbering by default. See the *Pin Numbering* (page 3) section for more information.

14.1 Regular Classes

The following classes are intended for general use with the devices they represent. All classes in this section are concrete (not abstract).

14.1.1 Button

class `gpiozero.Button(*args, **kwargs)`

Extends *DigitalInputDevice* (page 119) and represents a simple push button or switch.

Connect one side of the button to a ground pin, and the other to any GPIO pin. Alternatively, connect one side of the button to the 3V3 pin, and the other to any GPIO pin, then set *pull_up* to `False`⁸⁷ in the *Button* (page 105) constructor.

The following example will print a line of text when the button is pushed:

```
from gpiozero import Button

button = Button(4)
button.wait_for_press()
print("The button was pressed!")
```

Parameters

- **pin** (*int*⁸⁸ or *str*⁸⁹) – The GPIO pin which the button is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is `None`⁹⁰ a *GPIODeviceError* (page 241) will be raised.
- **pull_up** (*bool*⁹¹ or `None`) – If `True`⁹² (the default), the GPIO pin will be pulled high by default. In this case, connect the other side of the button to ground. If `False`⁹³, the GPIO pin will be pulled low by default. In this case, connect the other side of the button to 3V3. If `None`⁹⁴, the pin will be floating, so it must be externally pulled up or down and the *active_state* parameter must be set accordingly.
- **active_state** (*bool*⁹⁵ or `None`) – See description under *InputDevice* (page 121) for more information.

- **bounce_time** (*float*⁹⁶ or *None*) – If *None*⁹⁷ (the default), no software bounce compensation will be performed. Otherwise, this is the length of time (in seconds) that the component will ignore changes in state after an initial change.
- **hold_time** (*float*⁹⁸) – The length of time (in seconds) to wait after the button is pushed, until executing the *when_held* (page 106) handler. Defaults to 1.
- **hold_repeat** (*bool*⁹⁹) – If *True*¹⁰⁰, the *when_held* (page 106) handler will be repeatedly executed as long as the device remains active, every *hold_time* seconds. If *False*¹⁰¹ (the default) the *when_held* (page 106) handler will be only be executed once per hold.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

wait_for_press (*timeout=None*)

Pause the script until the device is activated, or the timeout is reached.

Parameters

timeout (*float*¹⁰² or *None*) – Number of seconds to wait before proceeding. If this is *None*¹⁰³ (the default), then wait indefinitely until the device is active.

wait_for_release (*timeout=None*)

Pause the script until the device is deactivated, or the timeout is reached.

Parameters

timeout (*float*¹⁰⁴ or *None*) – Number of seconds to wait before proceeding. If this is *None*¹⁰⁵ (the default), then wait indefinitely until the device is inactive.

property held_time

The length of time (in seconds) that the device has been held for. This is counted from the first execution of the *when_held* (page 106) event rather than when the device activated, in contrast to *active_time* (page 201). If the device is not currently held, this is *None*¹⁰⁶.

property hold_repeat

If *True*¹⁰⁷, *when_held* (page 106) will be executed repeatedly with *hold_time* (page 106) seconds between each invocation.

property hold_time

The length of time (in seconds) to wait after the device is activated, until executing the *when_held* (page 106) handler. If *hold_repeat* (page 106) is *True*, this is also the length of time between invocations of *when_held* (page 106).

property is_held

When *True*¹⁰⁸, the device has been active for at least *hold_time* (page 106) seconds.

property is_pressed

Returns *True*¹⁰⁹ if the device is currently active and *False*¹¹⁰ otherwise. This property is usually derived from *value* (page 106). Unlike *value* (page 106), this is *always* a boolean.

property pin

The *Pin* (page 227) that the device is connected to. This will be *None*¹¹¹ if the device has been closed (see the *close()* (page 199) method). When dealing with GPIO pins, query *pin.number* to discover the GPIO pin (in BCM numbering) that the device is connected to.

property pull_up

If *True*¹¹², the device uses a pull-up resistor to set the GPIO pin “high” by default.

property value

Returns 1 if the button is currently pressed, and 0 if it is not.

when_held

The function to run when the device has remained active for *hold_time* (page 106) seconds.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated will be passed as that parameter.

Set this property to `None`¹¹³ (the default) to disable the event.

when_pressed

The function to run when the device changes state from inactive to active.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None`¹¹⁴ (the default) to disable the event.

when_released

The function to run when the device changes state from active to inactive.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that deactivated it will be passed as that parameter.

Set this property to `None`¹¹⁵ (the default) to disable the event.

⁸⁷ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁸ <https://docs.python.org/3.9/library/functions.html#int>
⁸⁹ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁹⁰ <https://docs.python.org/3.9/library/constants.html#None>
⁹¹ <https://docs.python.org/3.9/library/functions.html#bool>
⁹² <https://docs.python.org/3.9/library/constants.html#True>
⁹³ <https://docs.python.org/3.9/library/constants.html#False>
⁹⁴ <https://docs.python.org/3.9/library/constants.html#None>
⁹⁵ <https://docs.python.org/3.9/library/functions.html#bool>
⁹⁶ <https://docs.python.org/3.9/library/functions.html#float>
⁹⁷ <https://docs.python.org/3.9/library/constants.html#None>
⁹⁸ <https://docs.python.org/3.9/library/functions.html#float>
⁹⁹ <https://docs.python.org/3.9/library/functions.html#bool>
¹⁰⁰ <https://docs.python.org/3.9/library/constants.html#True>
¹⁰¹ <https://docs.python.org/3.9/library/constants.html#False>
¹⁰² <https://docs.python.org/3.9/library/functions.html#float>
¹⁰³ <https://docs.python.org/3.9/library/constants.html#None>
¹⁰⁴ <https://docs.python.org/3.9/library/functions.html#float>
¹⁰⁵ <https://docs.python.org/3.9/library/constants.html#None>
¹⁰⁶ <https://docs.python.org/3.9/library/constants.html#None>
¹⁰⁷ <https://docs.python.org/3.9/library/constants.html#True>
¹⁰⁸ <https://docs.python.org/3.9/library/constants.html#True>
¹⁰⁹ <https://docs.python.org/3.9/library/constants.html#True>
¹¹⁰ <https://docs.python.org/3.9/library/constants.html#False>
¹¹¹ <https://docs.python.org/3.9/library/constants.html#None>
¹¹² <https://docs.python.org/3.9/library/constants.html#True>
¹¹³ <https://docs.python.org/3.9/library/constants.html#None>
¹¹⁴ <https://docs.python.org/3.9/library/constants.html#None>
¹¹⁵ <https://docs.python.org/3.9/library/constants.html#None>

14.1.2 LineSensor (TRCT5000)

class gpiozero.LineSensor (*args, **kwargs)

Extends *SmoothedInputDevice* (page 120) and represents a single pin line sensor like the TCRT5000 infra-red proximity sensor found in the *CamJam #3 EduKit*¹¹⁶.

A typical line sensor has a small circuit board with three pins: VCC, GND, and OUT. VCC should be connected to a 3V3 pin, GND to one of the ground pins, and finally OUT to the GPIO specified as the value of the *pin* parameter in the constructor.

The following code will print a line of text indicating when the sensor detects a line, or stops detecting a line:

```
from gpiozero import LineSensor
from signal import pause

sensor = LineSensor(4)
sensor.when_line = lambda: print('Line detected')
sensor.when_no_line = lambda: print('No line detected')
pause()
```

Parameters

- **pin** (*int*¹¹⁷ or *str*¹¹⁸) – The GPIO pin which the sensor is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*¹¹⁹ a *GPIODeviceError* (page 241) will be raised.
- **pull_up** (*bool*¹²⁰ or *None*) – See description under *InputDevice* (page 121) for more information.
- **active_state** (*bool*¹²¹ or *None*) – See description under *InputDevice* (page 121) for more information.
- **queue_len** (*int*¹²²) – The length of the queue used to store values read from the sensor. This defaults to 5.
- **sample_rate** (*float*¹²³) – The number of values to read from the device (and append to the internal queue) per second. Defaults to 100.
- **threshold** (*float*¹²⁴) – Defaults to 0.5. When the average of all values in the internal queue rises above this value, the sensor will be considered “active” by the *is_active* (page 121) property, and all appropriate events will be fired.
- **partial** (*bool*¹²⁵) – When *False*¹²⁶ (the default), the object will not return a value for *is_active* (page 121) until the internal queue has filled with values. Only set this to *True*¹²⁷ if you require values immediately after object construction.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

wait_for_line (*timeout=None*)

Pause the script until the device is deactivated, or the timeout is reached.

Parameters

- **timeout** (*float*¹²⁸ or *None*) – Number of seconds to wait before proceeding. If this is *None*¹²⁹ (the default), then wait indefinitely until the device is inactive.

wait_for_no_line (*timeout=None*)

Pause the script until the device is activated, or the timeout is reached.

Parameters

- **timeout** (*float*¹³⁰ or *None*) – Number of seconds to wait before proceeding. If this is *None*¹³¹ (the default), then wait indefinitely until the device is active.

property pin

The *Pin* (page 227) that the device is connected to. This will be `None`¹³² if the device has been closed (see the `close()` (page 199) method). When dealing with GPIO pins, query `pin.number` to discover the GPIO pin (in BCM numbering) that the device is connected to.

property value

Returns a value representing the average of the queued values. This is nearer 0 for black under the sensor, and nearer 1 for white under the sensor.

when_line

The function to run when the device changes state from active to inactive.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that deactivated it will be passed as that parameter.

Set this property to `None`¹³³ (the default) to disable the event.

when_no_line

The function to run when the device changes state from inactive to active.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None`¹³⁴ (the default) to disable the event.

14.1.3 MotionSensor (D-SUN PIR)

class `gpiozero.MotionSensor(*args, **kwargs)`

Extends *SmoothedInputDevice* (page 120) and represents a passive infra-red (PIR) motion sensor like the sort found in the *CamJam #2 EduKit*¹³⁵.

A typical PIR device has a small circuit board with three pins: VCC, OUT, and GND. VCC should be connected to a 5V pin, GND to one of the ground pins, and finally OUT to the GPIO specified as the value of the *pin* parameter in the constructor.

The following code will print a line of text when motion is detected:

```
from gpiozero import MotionSensor

pir = MotionSensor(4)
pir.wait_for_motion()
print("Motion detected!")
```

¹¹⁶ http://camjam.me/?page_id=1035
¹¹⁷ <https://docs.python.org/3.9/library/functions.html#int>
¹¹⁸ <https://docs.python.org/3.9/library/stdtypes.html#str>
¹¹⁹ <https://docs.python.org/3.9/library/constants.html#None>
¹²⁰ <https://docs.python.org/3.9/library/functions.html#bool>
¹²¹ <https://docs.python.org/3.9/library/functions.html#bool>
¹²² <https://docs.python.org/3.9/library/functions.html#int>
¹²³ <https://docs.python.org/3.9/library/functions.html#float>
¹²⁴ <https://docs.python.org/3.9/library/functions.html#float>
¹²⁵ <https://docs.python.org/3.9/library/functions.html#bool>
¹²⁶ <https://docs.python.org/3.9/library/constants.html#False>
¹²⁷ <https://docs.python.org/3.9/library/constants.html#True>
¹²⁸ <https://docs.python.org/3.9/library/functions.html#float>
¹²⁹ <https://docs.python.org/3.9/library/constants.html#None>
¹³⁰ <https://docs.python.org/3.9/library/functions.html#float>
¹³¹ <https://docs.python.org/3.9/library/constants.html#None>
¹³² <https://docs.python.org/3.9/library/constants.html#None>
¹³³ <https://docs.python.org/3.9/library/constants.html#None>
¹³⁴ <https://docs.python.org/3.9/library/constants.html#None>

Parameters

- **pin** (*int*¹³⁶ or *str*¹³⁷) – The GPIO pin which the sensor is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*¹³⁸ a *GPIODeviceError* (page 241) will be raised.
- **pull_up** (*bool*¹³⁹ or *None*) – See description under *InputDevice* (page 121) for more information.
- **active_state** (*bool*¹⁴⁰ or *None*) – See description under *InputDevice* (page 121) for more information.
- **queue_len** (*int*¹⁴¹) – The length of the queue used to store values read from the sensor. This defaults to 1 which effectively disables the queue. If your motion sensor is particularly “twitchy” you may wish to increase this value.
- **sample_rate** (*float*¹⁴²) – The number of values to read from the device (and append to the internal queue) per second. Defaults to 10.
- **threshold** (*float*¹⁴³) – Defaults to 0.5. When the average of all values in the internal queue rises above this value, the sensor will be considered “active” by the *is_active* (page 121) property, and all appropriate events will be fired.
- **partial** (*bool*¹⁴⁴) – When *False*¹⁴⁵ (the default), the object will not return a value for *is_active* (page 121) until the internal queue has filled with values. Only set this to *True*¹⁴⁶ if you require values immediately after object construction.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

wait_for_motion (*timeout=None*)

Pause the script until the device is activated, or the timeout is reached.

Parameters

- **timeout** (*float*¹⁴⁷ or *None*) – Number of seconds to wait before proceeding. If this is *None*¹⁴⁸ (the default), then wait indefinitely until the device is active.

wait_for_no_motion (*timeout=None*)

Pause the script until the device is deactivated, or the timeout is reached.

Parameters

- **timeout** (*float*¹⁴⁹ or *None*) – Number of seconds to wait before proceeding. If this is *None*¹⁵⁰ (the default), then wait indefinitely until the device is inactive.

property motion_detected

Returns *True*¹⁵¹ if the *value* (page 121) currently exceeds *threshold* (page 121) and *False*¹⁵² otherwise.

property pin

The *Pin* (page 227) that the device is connected to. This will be *None*¹⁵³ if the device has been closed (see the *close()* (page 199) method). When dealing with GPIO pins, query *pin.number* to discover the GPIO pin (in BCM numbering) that the device is connected to.

property value

With the default *queue_len* of 1, this is effectively boolean where 0 means no motion detected and 1 means motion detected. If you specify a *queue_len* greater than 1, this will be an averaged value where values closer to 1 imply motion detection.

when_motion

The function to run when the device changes state from inactive to active.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None`¹⁵⁴ (the default) to disable the event.

when_no_motion

The function to run when the device changes state from active to inactive.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that deactivated it will be passed as that parameter.

Set this property to `None`¹⁵⁵ (the default) to disable the event.

14.1.4 LightSensor (LDR)

class gpiozero.LightSensor (*args, **kwargs)

Extends *SmoothedInputDevice* (page 120) and represents a light dependent resistor (LDR).

Connect one leg of the LDR to the 3V3 pin; connect one leg of a 1µF capacitor to a ground pin; connect the other leg of the LDR and the other leg of the capacitor to the same GPIO pin. This class repeatedly discharges the capacitor, then times the duration it takes to charge (which will vary according to the light falling on the LDR).

The following code will print a line of text when light is detected:

```
from gpiozero import LightSensor

ldr = LightSensor(18)
ldr.wait_for_light()
print("Light detected!")
```

Parameters

- **pin** (*int*¹⁵⁶ or *str*¹⁵⁷) – The GPIO pin which the sensor is attached to. See *Pin Numbering* (page 3) for valid pin numbers. If this is `None`¹⁵⁸ a *GPIODeviceError* (page 241) will be raised.
- **queue_len** (*int*¹⁵⁹) – The length of the queue used to store values read from the circuit. This defaults to 5.
- **charge_time_limit** (*float*¹⁶⁰) – If the capacitor in the circuit takes longer than this length of time to charge, it is assumed to be dark. The default (0.01 seconds) is appropriate for a 1µF capacitor coupled with the LDR from the *CamJam #2 EduKit*¹⁶¹. You may need to adjust this value for different valued capacitors or LDRs.

¹³⁵ http://camjam.me/?page_id=623
¹³⁶ <https://docs.python.org/3.9/library/functions.html#int>
¹³⁷ <https://docs.python.org/3.9/library/stdtypes.html#str>
¹³⁸ <https://docs.python.org/3.9/library/constants.html#None>
¹³⁹ <https://docs.python.org/3.9/library/functions.html#bool>
¹⁴⁰ <https://docs.python.org/3.9/library/functions.html#bool>
¹⁴¹ <https://docs.python.org/3.9/library/functions.html#int>
¹⁴² <https://docs.python.org/3.9/library/functions.html#float>
¹⁴³ <https://docs.python.org/3.9/library/functions.html#float>
¹⁴⁴ <https://docs.python.org/3.9/library/functions.html#bool>
¹⁴⁵ <https://docs.python.org/3.9/library/constants.html#False>
¹⁴⁶ <https://docs.python.org/3.9/library/constants.html#True>
¹⁴⁷ <https://docs.python.org/3.9/library/functions.html#float>
¹⁴⁸ <https://docs.python.org/3.9/library/constants.html#None>
¹⁴⁹ <https://docs.python.org/3.9/library/functions.html#float>
¹⁵⁰ <https://docs.python.org/3.9/library/constants.html#None>
¹⁵¹ <https://docs.python.org/3.9/library/constants.html#True>
¹⁵² <https://docs.python.org/3.9/library/constants.html#False>
¹⁵³ <https://docs.python.org/3.9/library/constants.html#None>
¹⁵⁴ <https://docs.python.org/3.9/library/constants.html#None>
¹⁵⁵ <https://docs.python.org/3.9/library/constants.html#None>

- **threshold** (*float*¹⁶²) – Defaults to 0.1. When the average of all values in the internal queue rises above this value, the area will be considered “light”, and all appropriate events will be fired.
- **partial** (*bool*¹⁶³) – When `False`¹⁶⁴ (the default), the object will not return a value for `is_active` (page 121) until the internal queue has filled with values. Only set this to `True`¹⁶⁵ if you require values immediately after object construction.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

wait_for_dark (*timeout=None*)

Pause the script until the device is deactivated, or the timeout is reached.

Parameters

timeout (*float*¹⁶⁶ or *None*) – Number of seconds to wait before proceeding. If this is `None`¹⁶⁷ (the default), then wait indefinitely until the device is inactive.

wait_for_light (*timeout=None*)

Pause the script until the device is activated, or the timeout is reached.

Parameters

timeout (*float*¹⁶⁸ or *None*) – Number of seconds to wait before proceeding. If this is `None`¹⁶⁹ (the default), then wait indefinitely until the device is active.

property light_detected

Returns `True`¹⁷⁰ if the *value* (page 121) currently exceeds *threshold* (page 121) and `False`¹⁷¹ otherwise.

property pin

The *Pin* (page 227) that the device is connected to. This will be `None`¹⁷² if the device has been closed (see the `close()` (page 199) method). When dealing with GPIO pins, query `pin.number` to discover the GPIO pin (in BCM numbering) that the device is connected to.

property value

Returns a value between 0 (dark) and 1 (light).

when_dark

The function to run when the device changes state from active to inactive.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that deactivated it will be passed as that parameter.

Set this property to `None`¹⁷³ (the default) to disable the event.

when_light

The function to run when the device changes state from inactive to active.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None`¹⁷⁴ (the default) to disable the event.

14.1.5 DistanceSensor (HC-SR04)

class gpiozero.DistanceSensor (*args, **kwargs)

Extends [SmoothedInputDevice](#) (page 120) and represents an HC-SR04 ultrasonic distance sensor, as found in the [CamJam #3 EduKit](#)¹⁷⁵.

The distance sensor requires two GPIO pins: one for the *trigger* (marked TRIG on the sensor) and another for the *echo* (marked ECHO on the sensor). However, a voltage divider is required to ensure the 5V from the ECHO pin doesn't damage the Pi. Wire your sensor according to the following instructions:

1. Connect the GND pin of the sensor to a ground pin on the Pi.
2. Connect the TRIG pin of the sensor a GPIO pin.
3. Connect one end of a 330Ω resistor to the ECHO pin of the sensor.
4. Connect one end of a 470Ω resistor to the GND pin of the sensor.
5. Connect the free ends of both resistors to another GPIO pin. This forms the required [voltage divider](#)¹⁷⁶.
6. Finally, connect the VCC pin of the sensor to a 5V pin on the Pi.

Alternatively, the 3V3 tolerant HC-SR04P sensor (which does not require a voltage divider) will work with this class.

Note: If you do not have the precise values of resistor specified above, don't worry! What matters is the *ratio* of the resistors to each other.

You also don't need to be absolutely precise; the [voltage divider](#)¹⁷⁷ given above will actually output ~3V (rather than 3.3V). A simple 2:3 ratio will give 3.333V which implies you can take three resistors of equal value, use one of them instead of the 330Ω resistor, and two of them in series instead of the 470Ω resistor.

The following code will periodically report the distance measured by the sensor in cm assuming the TRIG pin is connected to GPIO17, and the ECHO pin to GPIO18:

```
from gpiozero import DistanceSensor
from time import sleep

sensor = DistanceSensor(echo=18, trigger=17)
while True:
    print('Distance: ', sensor.distance * 100)
    sleep(1)
```

Note: For improved accuracy, use the pigpio pin driver rather than the default RPi.GPIO driver (pigpio uses DMA sampling for much more precise edge timing). This is particularly relevant if you're using Pi 1 or Pi

¹⁷⁶ <https://docs.python.org/3.9/library/functions.html#int>
¹⁷⁷ <https://docs.python.org/3.9/library/stdtypes.html#str>
¹⁵⁸ <https://docs.python.org/3.9/library/constants.html#None>
¹⁵⁹ <https://docs.python.org/3.9/library/functions.html#int>
¹⁶⁰ <https://docs.python.org/3.9/library/functions.html#float>
¹⁶¹ http://camjam.me/?page_id=623
¹⁶² <https://docs.python.org/3.9/library/functions.html#float>
¹⁶³ <https://docs.python.org/3.9/library/functions.html#bool>
¹⁶⁴ <https://docs.python.org/3.9/library/constants.html#False>
¹⁶⁵ <https://docs.python.org/3.9/library/constants.html#True>
¹⁶⁶ <https://docs.python.org/3.9/library/functions.html#float>
¹⁶⁷ <https://docs.python.org/3.9/library/constants.html#None>
¹⁶⁸ <https://docs.python.org/3.9/library/functions.html#float>
¹⁶⁹ <https://docs.python.org/3.9/library/constants.html#None>
¹⁷⁰ <https://docs.python.org/3.9/library/constants.html#True>
¹⁷¹ <https://docs.python.org/3.9/library/constants.html#False>
¹⁷² <https://docs.python.org/3.9/library/constants.html#None>
¹⁷³ <https://docs.python.org/3.9/library/constants.html#None>
¹⁷⁴ <https://docs.python.org/3.9/library/constants.html#None>

Zero. See *Changing the pin factory* (page 223) for further information.

Parameters

- **echo** (*int*¹⁷⁸ or *str*¹⁷⁹) – The GPIO pin which the ECHO pin is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*¹⁸⁰ a *GPIODeviceError* (page 241) will be raised.
- **trigger** (*int*¹⁸¹ or *str*¹⁸²) – The GPIO pin which the TRIG pin is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*¹⁸³ a *GPIODeviceError* (page 241) will be raised.
- **queue_len** (*int*¹⁸⁴) – The length of the queue used to store values read from the sensor. This defaults to 9.
- **max_distance** (*float*¹⁸⁵) – The *value* (page 115) attribute reports a normalized value between 0 (too close to measure) and 1 (maximum distance). This parameter specifies the maximum distance expected in meters. This defaults to 1.
- **threshold_distance** (*float*¹⁸⁶) – Defaults to 0.3. This is the distance (in meters) that will trigger the *in_range* and *out_of_range* events when crossed.
- **partial** (*bool*¹⁸⁷) – When *False*¹⁸⁸ (the default), the object will not return a value for *is_active* (page 121) until the internal queue has filled with values. Only set this to *True*¹⁸⁹ if you require values immediately after object construction.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

wait_for_in_range (*timeout=None*)

Pause the script until the device is deactivated, or the timeout is reached.

Parameters

- **timeout** (*float*¹⁹⁰ or *None*) – Number of seconds to wait before proceeding. If this is *None*¹⁹¹ (the default), then wait indefinitely until the device is inactive.

wait_for_out_of_range (*timeout=None*)

Pause the script until the device is activated, or the timeout is reached.

Parameters

- **timeout** (*float*¹⁹² or *None*) – Number of seconds to wait before proceeding. If this is *None*¹⁹³ (the default), then wait indefinitely until the device is active.

property distance

Returns the current distance measured by the sensor in meters. Note that this property will have a value between 0 and *max_distance* (page 114).

property echo

Returns the *Pin* (page 227) that the sensor's echo is connected to. This is simply an alias for the usual *pin* (page 123) attribute.

property max_distance

The maximum distance that the sensor will measure in meters. This value is specified in the constructor and is used to provide the scaling for the *value* (page 121) attribute. When *distance* (page 114) is equal to *max_distance* (page 114), *value* (page 121) will be 1.

property threshold_distance

The distance, measured in meters, that will trigger the *when_in_range* (page 115) and *when_out_of_range* (page 115) events when crossed. This is simply a meter-scaled variant of the usual *threshold* (page 121) attribute.

property trigger

Returns the *Pin* (page 227) that the sensor's trigger is connected to.

property value

Returns a value between 0, indicating the reflector is either touching the sensor or is sufficiently near that the sensor can't tell the difference, and 1, indicating the reflector is at or beyond the specified *max_distance*.

when_in_range

The function to run when the device changes state from active to inactive.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that deactivated it will be passed as that parameter.

Set this property to *None*¹⁹⁴ (the default) to disable the event.

when_out_of_range

The function to run when the device changes state from inactive to active.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None*¹⁹⁵ (the default) to disable the event.

14.1.6 RotaryEncoder

class gpiozero.RotaryEncoder (*args, **kwargs)

Represents a simple two-pin incremental rotary encoder¹⁹⁶ device.

These devices typically have three pins labelled “A”, “B”, and “C”. Connect A and B directly to two GPIO pins, and C (“common”) to one of the ground pins on your Pi. Then simply specify the A and B pins as the arguments when constructing this class.

For example, if your encoder's A pin is connected to GPIO 21, and the B pin to GPIO 20 (and presumably the C pin to a suitable GND pin), while an LED (with a suitable 300Ω resistor) is connected to GPIO 5, the following session will result in the brightness of the LED being controlled by dialling the rotary encoder back and forth:

¹⁷⁵ http://camjam.me/?page_id=1035

¹⁷⁶ https://en.wikipedia.org/wiki/Voltage_divider

¹⁷⁷ https://en.wikipedia.org/wiki/Voltage_divider

¹⁷⁸ <https://docs.python.org/3.9/library/functions.html#int>

¹⁷⁹ <https://docs.python.org/3.9/library/stdtypes.html#str>

¹⁸⁰ <https://docs.python.org/3.9/library/constants.html#None>

¹⁸¹ <https://docs.python.org/3.9/library/functions.html#int>

¹⁸² <https://docs.python.org/3.9/library/stdtypes.html#str>

¹⁸³ <https://docs.python.org/3.9/library/constants.html#None>

¹⁸⁴ <https://docs.python.org/3.9/library/functions.html#int>

¹⁸⁵ <https://docs.python.org/3.9/library/functions.html#float>

¹⁸⁶ <https://docs.python.org/3.9/library/functions.html#float>

¹⁸⁷ <https://docs.python.org/3.9/library/functions.html#bool>

¹⁸⁸ <https://docs.python.org/3.9/library/constants.html#False>

¹⁸⁹ <https://docs.python.org/3.9/library/constants.html#True>

¹⁹⁰ <https://docs.python.org/3.9/library/functions.html#float>

¹⁹¹ <https://docs.python.org/3.9/library/constants.html#None>

¹⁹² <https://docs.python.org/3.9/library/functions.html#float>

¹⁹³ <https://docs.python.org/3.9/library/constants.html#None>

¹⁹⁴ <https://docs.python.org/3.9/library/constants.html#None>

¹⁹⁵ <https://docs.python.org/3.9/library/constants.html#None>


```
>>> from gpiozero import RotaryEncoder
>>> from gpiozero.tools import scaled_half
>>> rotor = RotaryEncoder(21, 20)
>>> led = PWMLed(5)
>>> led.source = scaled_half(rotor.values)
```

Parameters

- **a** (*int*¹⁹⁷ or *str*¹⁹⁸) – The GPIO pin connected to the “A” output of the rotary encoder.
- **b** (*int*¹⁹⁹ or *str*²⁰⁰) – The GPIO pin connected to the “B” output of the rotary encoder.
- **bounce_time** (*float*²⁰¹ or *None*) – If *None*²⁰² (the default), no software bounce compensation will be performed. Otherwise, this is the length of time (in seconds) that the component will ignore changes in state after an initial change.
- **max_steps** (*int*²⁰³) – The number of steps clockwise the encoder takes to change the *value* (page 117) from 0 to 1, or counter-clockwise from 0 to -1. If this is 0, then the encoder’s *value* (page 117) never changes, but you can still read *steps* (page 116) to determine the integer number of steps the encoder has moved clockwise or counter clockwise.
- **threshold_steps** (*tuple*²⁰⁴ of *int*²⁰⁵) – A (min, max) tuple of steps between which the device will be considered “active”, inclusive. In other words, when *steps* (page 116) is greater than or equal to the *min* value, and less than or equal the *max* value, the active property will be *True*²⁰⁶ and the appropriate events (*when_activated*, *when_deactivated*) will be fired. Defaults to (0, 0).
- **wrap** (*bool*²⁰⁷) – If *True*²⁰⁸ and *max_steps* is non-zero, when the *steps* (page 116) reaches positive or negative *max_steps* it wraps around by negation. Defaults to *False*²⁰⁹.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

wait_for_rotate (*timeout=None*)

Pause the script until the encoder is rotated at least one step in either direction, or the timeout is reached.

Parameters

timeout (*float*²¹⁰ or *None*) – Number of seconds to wait before proceeding. If this is *None*²¹¹ (the default), then wait indefinitely until the encoder is rotated.

wait_for_rotate_clockwise (*timeout=None*)

Pause the script until the encoder is rotated at least one step clockwise, or the timeout is reached.

Parameters

timeout (*float*²¹² or *None*) – Number of seconds to wait before proceeding. If this is *None*²¹³ (the default), then wait indefinitely until the encoder is rotated clockwise.

wait_for_rotate_counter_clockwise (*timeout=None*)

Pause the script until the encoder is rotated at least one step counter-clockwise, or the timeout is reached.

Parameters

timeout (*float*²¹⁴ or *None*) – Number of seconds to wait before proceeding. If this is *None*²¹⁵ (the default), then wait indefinitely until the encoder is rotated counter-clockwise.

property max_steps

The number of discrete steps the rotary encoder takes to move *value* (page 117) from 0 to 1 clockwise, or 0 to -1 counter-clockwise. In another sense, this is also the total number of discrete states this input can represent.

property steps

The “steps” value of the encoder starts at 0. It increments by one for every step the encoder is rotated clockwise, and decrements by one for every step it is rotated counter-clockwise. The steps value is limited by `max_steps` (page 116). It will not advance beyond positive or negative `max_steps` (page 116), unless `wrap` (page 117) is `True`²¹⁶ in which case it will roll around by negation. If `max_steps` (page 116) is zero then steps are not limited at all, and will increase infinitely in either direction, but `value` (page 117) will return a constant zero.

Note that, in contrast to most other input devices, because the rotary encoder has no absolute position the `steps` (page 116) attribute (and `value` (page 117) by corollary) is writable.

property threshold_steps

The minimum and maximum number of steps between which `is_active` will return `True`²¹⁷. Defaults to (0, 0).

property value

Represents the value of the rotary encoder as a value between -1 and 1. The value is calculated by dividing the value of `steps` (page 116) into the range from negative `max_steps` (page 116) to positive `max_steps` (page 116).

Note that, in contrast to most other input devices, because the rotary encoder has no absolute position the `value` (page 117) attribute is writable.

when_rotated

The function to be run when the encoder is rotated in either direction.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated will be passed as that parameter.

Set this property to `None`²¹⁸ (the default) to disable the event.

when_rotated_clockwise

The function to be run when the encoder is rotated clockwise.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated will be passed as that parameter.

Set this property to `None`²¹⁹ (the default) to disable the event.

when_rotated_counter_clockwise

The function to be run when the encoder is rotated counter-clockwise.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated will be passed as that parameter.


Set this property to `None`²²⁰ (the default) to disable the event.

property wrap

If `True`²²¹, when `value` (page 117) reaches its limit (-1 or 1), it “wraps around” to the opposite limit. When `False`²²², the value (and the corresponding `steps` (page 116) attribute) simply don’t advance beyond their limits.

14.2 Base Classes

The classes in the sections above are derived from a series of base classes, some of which are effectively abstract. The classes form the (partial) hierarchy displayed in the graph below (abstract classes are shaded lighter than concrete classes):

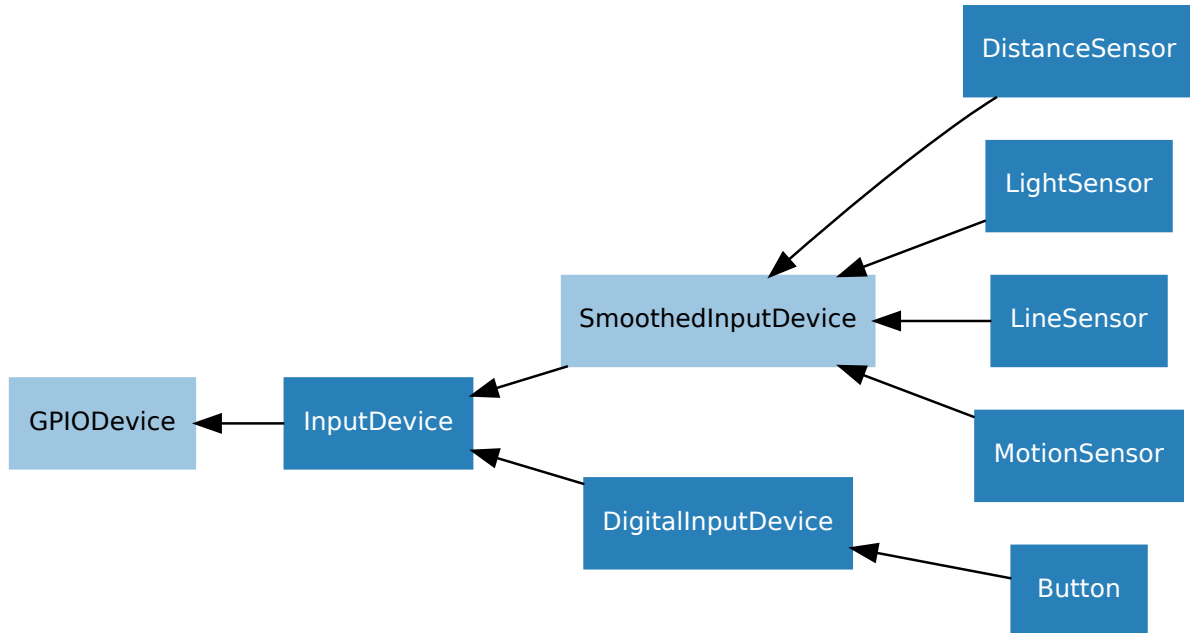

The following sections document these base classes for advanced users that wish to construct classes for their own devices.

196 https://en.wikipedia.org/wiki/Rotary_encoder
 197 <https://docs.python.org/3.9/library/functions.html#int>
 198 <https://docs.python.org/3.9/library/stdtypes.html#str>
 199 <https://docs.python.org/3.9/library/functions.html#int>
 200 <https://docs.python.org/3.9/library/stdtypes.html#str>
 201 <https://docs.python.org/3.9/library/functions.html#float>
 202 <https://docs.python.org/3.9/library/constants.html#None>
 203 <https://docs.python.org/3.9/library/functions.html#int>
 204 <https://docs.python.org/3.9/library/stdtypes.html#tuple>
 205 <https://docs.python.org/3.9/library/functions.html#int>
 206 <https://docs.python.org/3.9/library/constants.html#True>
 207 <https://docs.python.org/3.9/library/functions.html#bool>
 208 <https://docs.python.org/3.9/library/constants.html#True>
 209 <https://docs.python.org/3.9/library/constants.html#False>
 210 <https://docs.python.org/3.9/library/functions.html#float>
 211 <https://docs.python.org/3.9/library/constants.html#None>
 212 <https://docs.python.org/3.9/library/functions.html#float>
 213 <https://docs.python.org/3.9/library/constants.html#None>
 214 <https://docs.python.org/3.9/library/functions.html#float>
 215 <https://docs.python.org/3.9/library/constants.html#None>
 216 <https://docs.python.org/3.9/library/constants.html#True>
 217 <https://docs.python.org/3.9/library/constants.html#True>
 218 <https://docs.python.org/3.9/library/constants.html#None>
 219 <https://docs.python.org/3.9/library/constants.html#None>
 220 <https://docs.python.org/3.9/library/constants.html#None>
 221 <https://docs.python.org/3.9/library/constants.html#True>
 222 <https://docs.python.org/3.9/library/constants.html#False>

14.2.1 DigitalInputDevice

class gpiozero.DigitalInputDevice (*args, **kwargs)

Represents a generic input device with typical on/off behaviour.

This class extends *InputDevice* (page 121) with machinery to fire the active and inactive events for devices that operate in a typical digital manner: straight forward on / off states with (reasonably) clean transitions between the two.

Parameters

- **pin** (*int*²²³ or *str*²²⁴) – The GPIO pin that the device is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*²²⁵ a *GPIODeviceError* (page 241) will be raised.
- **pull_up** (*bool*²²⁶ or *None*) – See description under *InputDevice* (page 121) for more information.
- **active_state** (*bool*²²⁷ or *None*) – See description under *InputDevice* (page 121) for more information.
- **bounce_time** (*float*²²⁸ or *None*) – Specifies the length of time (in seconds) that the component will ignore changes in state after an initial change. This defaults to *None*²²⁹ which indicates that no bounce compensation will be performed.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

wait_for_active (*timeout=None*)

Pause the script until the device is activated, or the timeout is reached.

Parameters

timeout (*float*²³⁰ or *None*) – Number of seconds to wait before proceeding. If this is *None*²³¹ (the default), then wait indefinitely until the device is active.

wait_for_inactive (*timeout=None*)

Pause the script until the device is deactivated, or the timeout is reached.

Parameters

timeout (*float*²³² or *None*) – Number of seconds to wait before proceeding. If this is *None*²³³ (the default), then wait indefinitely until the device is inactive.

property active_time

The length of time (in seconds) that the device has been active for. When the device is inactive, this is *None*²³⁴.

property inactive_time

The length of time (in seconds) that the device has been inactive for. When the device is active, this is *None*²³⁵.

property value

Returns a value representing the device's state. Frequently, this is a boolean value, or a number between 0 and 1 but some devices use larger ranges (e.g. -1 to +1) and composite devices usually use tuples to return the states of all their subordinate components.

when_activated

The function to run when the device changes state from inactive to active.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None*²³⁶ (the default) to disable the event.

when_deactivated

The function to run when the device changes state from active to inactive.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that deactivated it will be passed as that parameter.

Set this property to `None`²³⁷ (the default) to disable the event.

14.2.2 SmoothedInputDevice

class gpiozero.SmoothedInputDevice (*args, **kwargs)

Represents a generic input device which takes its value from the average of a queue of historical values.

This class extends *InputDevice* (page 121) with a queue which is filled by a background thread which continually polls the state of the underlying device. The average (a configurable function) of the values in the queue is compared to a threshold which is used to determine the state of the *is_active* (page 121) property.

Note: The background queue is not automatically started upon construction. This is to allow descendents to set up additional components before the queue starts reading values. Effectively this is an abstract base class.

This class is intended for use with devices which either exhibit analog behaviour (such as the charging time of a capacitor with an LDR), or those which exhibit “twitchy” behaviour (such as certain motion sensors).

Parameters

- **pin** (*int*²³⁸ or *str*²³⁹) – The GPIO pin that the device is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is `None`²⁴⁰ a *GPIODeviceError* (page 241) will be raised.
- **pull_up** (*bool*²⁴¹ or `None`) – See description under *InputDevice* (page 121) for more information.
- **active_state** (*bool*²⁴² or `None`) – See description under *InputDevice* (page 121) for more information.
- **threshold** (*float*²⁴³) – The value above which the device will be considered “on”.
- **queue_len** (*int*²⁴⁴) – The length of the internal queue which is filled by the background thread.
- **sample_wait** (*float*²⁴⁵) – The length of time to wait between retrieving the state of the underlying device. Defaults to 0.0 indicating that values are retrieved as fast as possible.
- **partial** (*bool*²⁴⁶) – If `False`²⁴⁷ (the default), attempts to read the state of the device (from the *is_active* (page 121) property) will block until the queue has filled. If

²²³ <https://docs.python.org/3.9/library/functions.html#int>

²²⁴ <https://docs.python.org/3.9/library/stdtypes.html#str>

²²⁵ <https://docs.python.org/3.9/library/constants.html#None>

²²⁶ <https://docs.python.org/3.9/library/functions.html#bool>

²²⁷ <https://docs.python.org/3.9/library/functions.html#bool>

²²⁸ <https://docs.python.org/3.9/library/functions.html#float>

²²⁹ <https://docs.python.org/3.9/library/constants.html#None>

²³⁰ <https://docs.python.org/3.9/library/functions.html#float>

²³¹ <https://docs.python.org/3.9/library/constants.html#None>

²³² <https://docs.python.org/3.9/library/functions.html#float>

²³³ <https://docs.python.org/3.9/library/constants.html#None>

²³⁴ <https://docs.python.org/3.9/library/constants.html#None>

²³⁵ <https://docs.python.org/3.9/library/constants.html#None>

²³⁶ <https://docs.python.org/3.9/library/constants.html#None>

²³⁷ <https://docs.python.org/3.9/library/constants.html#None>

`True`²⁴⁸, a value will be returned immediately, but be aware that this value is likely to fluctuate excessively.

- **average** – The function used to average the values in the internal queue. This defaults to `statistics.median()`²⁴⁹ which is a good selection for discarding outliers from jittery sensors. The function specified must accept a sequence of numbers and return a single number.
- **ignore** (`frozenset`²⁵⁰ or `None`) – The set of values which the queue should ignore, if returned from querying the device's value.
- **pin_factory** (`Factory` (page 226) or `None`) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

property is_active

Returns `True`²⁵¹ if the *value* (page 121) currently exceeds *threshold* (page 121) and `False`²⁵² otherwise.

property partial

If `False`²⁵³ (the default), attempts to read the *value* (page 121) or *is_active* (page 121) properties will block until the queue has filled.

property queue_len

The length of the internal queue of values which is averaged to determine the overall state of the device. This defaults to 5.

property threshold

If *value* (page 121) exceeds this amount, then *is_active* (page 121) will return `True`²⁵⁴.

property value

Returns the average of the values in the internal queue. This is compared to *threshold* (page 121) to determine whether *is_active* (page 121) is `True`²⁵⁵.

14.2.3 InputDevice

class gpiozero.InputDevice (*args, **kwargs)

Represents a generic GPIO input device.

This class extends *GPIODevice* (page 122) to add facilities common to GPIO input devices. The constructor adds the optional *pull_up* parameter to specify how the pin should be pulled by the internal resistors. The *is_active* (page 122) property is adjusted accordingly so that `True`²⁵⁶ still means active regardless of the *pull_up* setting.

Parameters

- ²³⁸ <https://docs.python.org/3.9/library/functions.html#int>
- ²³⁹ <https://docs.python.org/3.9/library/stdtypes.html#str>
- ²⁴⁰ <https://docs.python.org/3.9/library/constants.html#None>
- ²⁴¹ <https://docs.python.org/3.9/library/functions.html#bool>
- ²⁴² <https://docs.python.org/3.9/library/functions.html#bool>
- ²⁴³ <https://docs.python.org/3.9/library/functions.html#float>
- ²⁴⁴ <https://docs.python.org/3.9/library/functions.html#int>
- ²⁴⁵ <https://docs.python.org/3.9/library/functions.html#float>
- ²⁴⁶ <https://docs.python.org/3.9/library/functions.html#bool>
- ²⁴⁷ <https://docs.python.org/3.9/library/constants.html#False>
- ²⁴⁸ <https://docs.python.org/3.9/library/constants.html#True>
- ²⁴⁹ <https://docs.python.org/3.9/library/statistics.html#statistics.median>
- ²⁵⁰ <https://docs.python.org/3.9/library/stdtypes.html#frozenset>
- ²⁵¹ <https://docs.python.org/3.9/library/constants.html#True>
- ²⁵² <https://docs.python.org/3.9/library/constants.html#False>
- ²⁵³ <https://docs.python.org/3.9/library/constants.html#False>
- ²⁵⁴ <https://docs.python.org/3.9/library/constants.html#True>
- ²⁵⁵ <https://docs.python.org/3.9/library/constants.html#True>

- **pin** (*int*²⁵⁷ or *str*²⁵⁸) – The GPIO pin that the device is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*²⁵⁹ a *GPIODeviceError* (page 241) will be raised.
- **pull_up** (*bool*²⁶⁰ or *None*) – If *True*²⁶¹, the pin will be pulled high with an internal resistor. If *False*²⁶² (the default), the pin will be pulled low. If *None*²⁶³, the pin will be floating. As gpiozero cannot automatically guess the active state when not pulling the pin, the *active_state* parameter must be passed.
- **active_state** (*bool*²⁶⁴ or *None*) – If *True*²⁶⁵, when the hardware pin state is HIGH, the software pin is HIGH. If *False*²⁶⁶, the input polarity is reversed: when the hardware pin state is HIGH, the software pin state is LOW. Use this parameter to set the active state of the underlying pin when configuring it as not pulled (when *pull_up* is *None*²⁶⁷). When *pull_up* is *True*²⁶⁸ or *False*²⁶⁹, the active state is automatically set to the proper value.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

property is_active

Returns *True*²⁷⁰ if the device is currently active and *False*²⁷¹ otherwise. This property is usually derived from *value* (page 122). Unlike *value* (page 122), this is *always* a boolean.

property pull_up

If *True*²⁷², the device uses a pull-up resistor to set the GPIO pin “high” by default.

property value

Returns a value representing the device’s state. Frequently, this is a boolean value, or a number between 0 and 1 but some devices use larger ranges (e.g. -1 to +1) and composite devices usually use tuples to return the states of all their subordinate components.

14.2.4 GPIODevice

class gpiozero.GPIODevice (*args, **kwargs)

Extends *Device* (page 199). Represents a generic GPIO device and provides the services common to all single-pin GPIO devices (like ensuring two GPIO devices do not share a *pin* (page 123)).

Parameters

pin (*int*²⁷³ or *str*²⁷⁴) – The GPIO pin that the device is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*²⁷⁵ a *GPIODeviceError* (page 241) will be raised. If the pin is already in use by another device, *GPIOPinInUse* (page 241) will be raised.

close ()

Shut down the device and release all associated resources (such as GPIO pins).

²⁵⁶ <https://docs.python.org/3.9/library/constants.html#True>

²⁵⁷ <https://docs.python.org/3.9/library/functions.html#int>

²⁵⁸ <https://docs.python.org/3.9/library/stdtypes.html#str>

²⁵⁹ <https://docs.python.org/3.9/library/constants.html#None>

²⁶⁰ <https://docs.python.org/3.9/library/functions.html#bool>

²⁶¹ <https://docs.python.org/3.9/library/constants.html#True>

²⁶² <https://docs.python.org/3.9/library/constants.html#False>

²⁶³ <https://docs.python.org/3.9/library/constants.html#None>

²⁶⁴ <https://docs.python.org/3.9/library/functions.html#bool>

²⁶⁵ <https://docs.python.org/3.9/library/constants.html#True>

²⁶⁶ <https://docs.python.org/3.9/library/constants.html#False>

²⁶⁷ <https://docs.python.org/3.9/library/constants.html#None>

²⁶⁸ <https://docs.python.org/3.9/library/constants.html#True>

²⁶⁹ <https://docs.python.org/3.9/library/constants.html#False>

²⁷⁰ <https://docs.python.org/3.9/library/constants.html#True>

²⁷¹ <https://docs.python.org/3.9/library/constants.html#False>

²⁷² <https://docs.python.org/3.9/library/constants.html#True>

You can attempt to do this simply by deleting an object, but unless you've cleaned up all references to the object this may not work (even if you've cleaned up all references, there's still no guarantee the garbage collector will actually delete the object at that point). By contrast, the `close` method provides a means of ensuring that the object is shut down.

```
>>> from gpiozero import *
>>> bz = Buzzer(16)
>>> bz.on()
>>> bz.off()
>>> bz.close()
>>> led = LED(16)
>>> led.blink()
```

```
>>> from gpiozero import *
>>> with Buzzer(16) as bz:
...     bz.on()
...
>>> with LED(16) as led:
...     led.on()
...
```

Returns `True`²⁷⁷ if the device is closed (see the `close()` (page 122) method). Once a device is closed you can no longer use any other methods or properties to control or query the device.

The `Pin` (page 227) that the device is connected to. This will be `None`²⁷⁸ if the device has been closed (see the `close()` (page 199) method). When dealing with GPIO pins, query `pin.number` to discover the GPIO pin (in BCM numbering) that the device is connected to.

Returns a value representing the device's state. Frequently, this is a boolean value, or a number between 0 and 1 but some devices use larger ranges (e.g. -1 to +1) and composite devices usually use tuples to return the states of all their subordinate components.

²⁷⁸ <https://docs.python.org/3.9/library/constants.html#None>

API - OUTPUT DEVICES

These output device component interfaces have been provided for simple use of everyday components. Components must be wired up correctly before use in code.

Note: All GPIO pin numbers use Broadcom (BCM) numbering by default. See the *Pin Numbering* (page 3) section for more information.

15.1 Regular Classes

The following classes are intended for general use with the devices they represent. All classes in this section are concrete (not abstract).

15.1.1 LED

class `gpiozero.LED` (**args, **kwargs*)

Extends *DigitalOutputDevice* (page 141) and represents a light emitting diode (LED).

Connect the cathode (short leg, flat side) of the LED to a ground pin; connect the anode (longer leg) to a limiting resistor; connect the other side of the limiting resistor to a GPIO pin (the limiting resistor can be placed either side of the LED).

The following example will light the LED:

```
from gpiozero import LED

led = LED(17)
led.on()
```

Parameters

- **pin** (*int*²⁷⁹ or *str*²⁸⁰) – The GPIO pin which the LED is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*²⁸¹ a *GPIODeviceError* (page 241) will be raised.
- **active_high** (*bool*²⁸²) – If *True*²⁸³ (the default), the LED will operate normally with the circuit described above. If *False*²⁸⁴ you should wire the cathode to the GPIO pin, and the anode to a 3V3 pin (via a limiting resistor).
- **initial_value** (*bool*²⁸⁵ or *None*) – If *False*²⁸⁶ (the default), the LED will be off initially. If *None*²⁸⁷, the LED will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*²⁸⁸, the LED will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

blink (*on_time=1, off_time=1, n=None, background=True*)

Make the device turn on and off repeatedly.

Parameters

- **on_time** (*float*²⁸⁹) – Number of seconds on. Defaults to 1 second.
- **off_time** (*float*²⁹⁰) – Number of seconds off. Defaults to 1 second.
- **n** (*int*²⁹¹ or *None*) – Number of times to blink; *None*²⁹² (the default) means forever.
- **background** (*bool*²⁹³) – If *True*²⁹⁴ (the default), start a background thread to continue blinking and return immediately. If *False*²⁹⁵, only return when the blink is finished (warning: the default value of *n* will result in this method never returning).

off ()

Turns the device off.

on ()

Turns the device on.

toggle ()

Reverse the state of the device. If it's on, turn it off; if it's off, turn it on.

property is_lit

Returns *True*²⁹⁶ if the device is currently active and *False*²⁹⁷ otherwise. This property is usually derived from *value* (page 126). Unlike *value* (page 126), this is *always* a boolean.

property pin

The *Pin* (page 227) that the device is connected to. This will be *None*²⁹⁸ if the device has been closed (see the *close* () (page 199) method). When dealing with GPIO pins, query *pin.number* to discover the GPIO pin (in BCM numbering) that the device is connected to.

property value

Returns 1 if the device is currently active and 0 otherwise. Setting this property changes the state of the device.

²⁷⁹ <https://docs.python.org/3.9/library/functions.html#int>
²⁸⁰ <https://docs.python.org/3.9/library/stdtypes.html#str>
²⁸¹ <https://docs.python.org/3.9/library/constants.html#None>
²⁸² <https://docs.python.org/3.9/library/functions.html#bool>
²⁸³ <https://docs.python.org/3.9/library/constants.html#True>
²⁸⁴ <https://docs.python.org/3.9/library/constants.html#False>
²⁸⁵ <https://docs.python.org/3.9/library/functions.html#bool>
²⁸⁶ <https://docs.python.org/3.9/library/constants.html#False>
²⁸⁷ <https://docs.python.org/3.9/library/constants.html#None>
²⁸⁸ <https://docs.python.org/3.9/library/constants.html#True>
²⁸⁹ <https://docs.python.org/3.9/library/functions.html#float>
²⁹⁰ <https://docs.python.org/3.9/library/functions.html#float>
²⁹¹ <https://docs.python.org/3.9/library/functions.html#int>
²⁹² <https://docs.python.org/3.9/library/constants.html#None>
²⁹³ <https://docs.python.org/3.9/library/functions.html#bool>
²⁹⁴ <https://docs.python.org/3.9/library/constants.html#True>
²⁹⁵ <https://docs.python.org/3.9/library/constants.html#False>
²⁹⁶ <https://docs.python.org/3.9/library/constants.html#True>
²⁹⁷ <https://docs.python.org/3.9/library/constants.html#False>
²⁹⁸ <https://docs.python.org/3.9/library/constants.html#None>

15.1.2 PWMLLED

class gpiozero.**PWMLLED** (*args, **kwargs)

Extends *PWMOutputDevice* (page 142) and represents a light emitting diode (LED) with variable brightness.

A typical configuration of such a device is to connect a GPIO pin to the anode (long leg) of the LED, and the cathode (short leg) to ground, with an optional resistor to prevent the LED from burning out.

Parameters

- **pin** (*int*²⁹⁹ or *str*³⁰⁰) – The GPIO pin which the LED is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*³⁰¹ a *GPIODeviceError* (page 241) will be raised.
- **active_high** (*bool*³⁰²) – If *True*³⁰³ (the default), the *on()* (page 127) method will set the GPIO to HIGH. If *False*³⁰⁴, the *on()* (page 127) method will set the GPIO to LOW (the *off()* (page 127) method always does the opposite).
- **initial_value** (*float*³⁰⁵) – If 0 (the default), the LED will be off initially. Other values between 0 and 1 can be specified as an initial brightness for the LED. Note that *None*³⁰⁶ cannot be specified (unlike the parent class) as there is no way to tell PWM not to alter the state of the pin.
- **frequency** (*int*³⁰⁷) – The frequency (in Hz) of pulses emitted to drive the LED. Defaults to 100Hz.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

blink (*on_time=1, off_time=1, fade_in_time=0, fade_out_time=0, n=None, background=True*)

Make the device turn on and off repeatedly.

Parameters

- **on_time** (*float*³⁰⁸) – Number of seconds on. Defaults to 1 second.
- **off_time** (*float*³⁰⁹) – Number of seconds off. Defaults to 1 second.
- **fade_in_time** (*float*³¹⁰) – Number of seconds to spend fading in. Defaults to 0.
- **fade_out_time** (*float*³¹¹) – Number of seconds to spend fading out. Defaults to 0.
- **n** (*int*³¹² or *None*) – Number of times to blink; *None*³¹³ (the default) means forever.
- **background** (*bool*³¹⁴) – If *True*³¹⁵ (the default), start a background thread to continue blinking and return immediately. If *False*³¹⁶, only return when the blink is finished (warning: the default value of *n* will result in this method never returning).

off()

Turns the device off.

on()

Turns the device on.

pulse (*fade_in_time=1, fade_out_time=1, n=None, background=True*)

Make the device fade in and out repeatedly.

Parameters

- **fade_in_time** (*float*³¹⁷) – Number of seconds to spend fading in. Defaults to 1.
- **fade_out_time** (*float*³¹⁸) – Number of seconds to spend fading out. Defaults to 1.
- **n** (*int*³¹⁹ or *None*) – Number of times to pulse; *None*³²⁰ (the default) means forever.

- **background** (*bool*³²¹) – If *True*³²² (the default), start a background thread to continue pulsing and return immediately. If *False*³²³, only return when the pulse is finished (warning: the default value of *n* will result in this method never returning).

toggle ()

Toggle the state of the device. If the device is currently off (*value* (page 128) is 0.0), this changes it to “fully” on (*value* (page 128) is 1.0). If the device has a duty cycle (*value* (page 128)) of 0.1, this will toggle it to 0.9, and so on.

property is_lit

Returns *True*³²⁴ if the device is currently active (*value* (page 128) is non-zero) and *False*³²⁵ otherwise.

property pin

The *Pin* (page 227) that the device is connected to. This will be *None*³²⁶ if the device has been closed (see the *close ()* (page 199) method). When dealing with GPIO pins, query *pin.number* to discover the GPIO pin (in BCM numbering) that the device is connected to.

property value

The duty cycle of the PWM device. 0.0 is off, 1.0 is fully on. Values in between may be specified for varying levels of power in the device.

15.1.3 RGBLED

class gpiozero.**RGBLED** (*args, **kwargs)

Extends *Device* (page 199) and represents a full color LED component (composed of red, green, and blue LEDs).

Connect the common cathode (longest leg) to a ground pin; connect each of the other legs (representing the red, green, and blue anodes) to any GPIO pins. You should use three limiting resistors (one per anode).

The following code will make the LED yellow:

```

299 https://docs.python.org/3.9/library/functions.html#int
300 https://docs.python.org/3.9/library/stdtypes.html#str
301 https://docs.python.org/3.9/library/constants.html#None
302 https://docs.python.org/3.9/library/functions.html#bool
303 https://docs.python.org/3.9/library/constants.html#True
304 https://docs.python.org/3.9/library/constants.html#False
305 https://docs.python.org/3.9/library/functions.html#float
306 https://docs.python.org/3.9/library/constants.html#None
307 https://docs.python.org/3.9/library/functions.html#int
308 https://docs.python.org/3.9/library/functions.html#float
309 https://docs.python.org/3.9/library/functions.html#float
310 https://docs.python.org/3.9/library/functions.html#float
311 https://docs.python.org/3.9/library/functions.html#float
312 https://docs.python.org/3.9/library/functions.html#int
313 https://docs.python.org/3.9/library/constants.html#None
314 https://docs.python.org/3.9/library/functions.html#bool
315 https://docs.python.org/3.9/library/constants.html#True
316 https://docs.python.org/3.9/library/constants.html#False
317 https://docs.python.org/3.9/library/functions.html#float
318 https://docs.python.org/3.9/library/functions.html#float
319 https://docs.python.org/3.9/library/functions.html#int
320 https://docs.python.org/3.9/library/constants.html#None
321 https://docs.python.org/3.9/library/functions.html#bool
322 https://docs.python.org/3.9/library/constants.html#True
323 https://docs.python.org/3.9/library/constants.html#False
324 https://docs.python.org/3.9/library/constants.html#True
325 https://docs.python.org/3.9/library/constants.html#False
326 https://docs.python.org/3.9/library/constants.html#None

```

```
from gpiozero import RGBLED

led = RGBLED(2, 3, 4)
led.color = (1, 1, 0)
```

The `colorzero`³²⁷ library is also supported:

```
from gpiozero import RGBLED
from colorzero import Color

led = RGBLED(2, 3, 4)
led.color = Color('yellow')
```

Parameters

- **red** (*int*³²⁸ or *str*³²⁹) – The GPIO pin that controls the red component of the RGB LED. See *Pin Numbering* (page 3) for valid pin numbers. If this is `None`³³⁰ a `GPIODeviceError` (page 241) will be raised.
- **green** (*int*³³¹ or *str*³³²) – The GPIO pin that controls the green component of the RGB LED.
- **blue** (*int*³³³ or *str*³³⁴) – The GPIO pin that controls the blue component of the RGB LED.
- **active_high** (*bool*³³⁵) – Set to `True`³³⁶ (the default) for common cathode RGB LEDs. If you are using a common anode RGB LED, set this to `False`³³⁷.
- **initial_value** (*Color*³³⁸ or *tuple*³³⁹) – The initial color for the RGB LED. Defaults to black (0, 0, 0).
- **pwm** (*bool*³⁴⁰) – If `True`³⁴¹ (the default), construct `PWMLED` (page 127) instances for each component of the RGBLED. If `False`³⁴², construct regular `LED` (page 125) instances, which prevents smooth color graduations.
- **pin_factory** (*Factory* (page 226) or `None`) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

blink (*on_time=1, off_time=1, fade_in_time=0, fade_out_time=0, on_color=(1, 1, 1), off_color=(0, 0, 0), n=None, background=True*)

Make the device turn on and off repeatedly.

Parameters

- **on_time** (*float*³⁴³) – Number of seconds on. Defaults to 1 second.
- **off_time** (*float*³⁴⁴) – Number of seconds off. Defaults to 1 second.
- **fade_in_time** (*float*³⁴⁵) – Number of seconds to spend fading in. Defaults to 0. Must be 0 if `pwm` was `False`³⁴⁶ when the class was constructed (`ValueError`³⁴⁷ will be raised if not).
- **fade_out_time** (*float*³⁴⁸) – Number of seconds to spend fading out. Defaults to 0. Must be 0 if `pwm` was `False`³⁴⁹ when the class was constructed (`ValueError`³⁵⁰ will be raised if not).
- **on_color** (*Color*³⁵¹ or *tuple*³⁵²) – The color to use when the LED is “on”. Defaults to white.
- **off_color** (*Color*³⁵³ or *tuple*³⁵⁴) – The color to use when the LED is “off”. Defaults to black.
- **n** (*int*³⁵⁵ or `None`) – Number of times to blink; `None`³⁵⁶ (the default) means forever.

- **background** (*bool*³⁵⁷) – If *True*³⁵⁸ (the default), start a background thread to continue blinking and return immediately. If *False*³⁵⁹, only return when the blink is finished (warning: the default value of *n* will result in this method never returning).

off()

Turn the LED off. This is equivalent to setting the LED color to black (0, 0, 0).

on()

Turn the LED on. This equivalent to setting the LED color to white (1, 1, 1).

pulse (*fade_in_time=1, fade_out_time=1, on_color=(1, 1, 1), off_color=(0, 0, 0), n=None, background=True*)

Make the device fade in and out repeatedly.

Parameters

- **fade_in_time** (*float*³⁶⁰) – Number of seconds to spend fading in. Defaults to 1.
- **fade_out_time** (*float*³⁶¹) – Number of seconds to spend fading out. Defaults to 1.
- **on_color** (*Color*³⁶² or *tuple*³⁶³) – The color to use when the LED is “on”. Defaults to white.
- **off_color** (*Color*³⁶⁴ or *tuple*³⁶⁵) – The color to use when the LED is “off”. Defaults to black.
- **n** (*int*³⁶⁶ or *None*) – Number of times to pulse; *None*³⁶⁷ (the default) means forever.
- **background** (*bool*³⁶⁸) – If *True*³⁶⁹ (the default), start a background thread to continue pulsing and return immediately. If *False*³⁷⁰, only return when the pulse is finished (warning: the default value of *n* will result in this method never returning).

toggle()

Toggle the state of the device. If the device is currently off (*value* (page 130) is (0, 0, 0)), this changes it to “fully” on (*value* (page 130) is (1, 1, 1)). If the device has a specific color, this method inverts the color.

property blue

Represents the blue element of the LED as a *Blue*³⁷¹ object.

property color

Represents the color of the LED as a *Color*³⁷² object.

property green

Represents the green element of the LED as a *Green*³⁷³ object.

property is_lit

Returns *True*³⁷⁴ if the LED is currently active (not black) and *False*³⁷⁵ otherwise.

property red

Represents the red element of the LED as a *Red*³⁷⁶ object.

property value

Represents the color of the LED as an RGB 3-tuple of (red, green, blue) where each value is between 0 and 1 if *pwm* was *True*³⁷⁷ when the class was constructed (and only 0 or 1 if not).

For example, red would be (1, 0, 0) and yellow would be (1, 1, 0), while orange would be (1, 0.5, 0).

15.1.4 Buzzer

class gpiozero.Buzzer (*args, **kwargs)

Extends *DigitalOutputDevice* (page 141) and represents a digital buzzer component.

Note: This interface is only capable of simple on/off commands, and is not capable of playing a variety of tones (see *TonalBuzzer* (page 133)).

Connect the cathode (negative pin) of the buzzer to a ground pin; connect the other side to any GPIO pin.

The following example will sound the buzzer:

```
from gpiozero import Buzzer
```

(continues on next page)

```
327 https://colorzero.readthedocs.io/
328 https://docs.python.org/3.9/library/functions.html#int
329 https://docs.python.org/3.9/library/stdtypes.html#str
330 https://docs.python.org/3.9/library/constants.html#None
331 https://docs.python.org/3.9/library/functions.html#int
332 https://docs.python.org/3.9/library/stdtypes.html#str
333 https://docs.python.org/3.9/library/functions.html#int
334 https://docs.python.org/3.9/library/stdtypes.html#str
335 https://docs.python.org/3.9/library/functions.html#bool
336 https://docs.python.org/3.9/library/constants.html#True
337 https://docs.python.org/3.9/library/constants.html#False
338 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Color
339 https://docs.python.org/3.9/library/stdtypes.html#tuple
340 https://docs.python.org/3.9/library/functions.html#bool
341 https://docs.python.org/3.9/library/constants.html#True
342 https://docs.python.org/3.9/library/constants.html#False
343 https://docs.python.org/3.9/library/functions.html#float
344 https://docs.python.org/3.9/library/functions.html#float
345 https://docs.python.org/3.9/library/functions.html#float
346 https://docs.python.org/3.9/library/constants.html#False
347 https://docs.python.org/3.9/library/exceptions.html#ValueError
348 https://docs.python.org/3.9/library/functions.html#float
349 https://docs.python.org/3.9/library/constants.html#False
350 https://docs.python.org/3.9/library/exceptions.html#ValueError
351 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Color
352 https://docs.python.org/3.9/library/stdtypes.html#tuple
353 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Color
354 https://docs.python.org/3.9/library/stdtypes.html#tuple
355 https://docs.python.org/3.9/library/functions.html#int
356 https://docs.python.org/3.9/library/constants.html#None
357 https://docs.python.org/3.9/library/functions.html#bool
358 https://docs.python.org/3.9/library/constants.html#True
359 https://docs.python.org/3.9/library/constants.html#False
360 https://docs.python.org/3.9/library/functions.html#float
361 https://docs.python.org/3.9/library/functions.html#float
362 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Color
363 https://docs.python.org/3.9/library/stdtypes.html#tuple
364 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Color
365 https://docs.python.org/3.9/library/stdtypes.html#tuple
366 https://docs.python.org/3.9/library/functions.html#int
367 https://docs.python.org/3.9/library/constants.html#None
368 https://docs.python.org/3.9/library/functions.html#bool
369 https://docs.python.org/3.9/library/constants.html#True
370 https://docs.python.org/3.9/library/constants.html#False
371 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Blue
372 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Color
373 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Green
374 https://docs.python.org/3.9/library/constants.html#True
375 https://docs.python.org/3.9/library/constants.html#False
376 https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Red
377 https://docs.python.org/3.9/library/constants.html#True
```

(continued from previous page)

```
bz = Buzzer(3)
bz.on()
```

Parameters

- **pin** (*int*³⁷⁸ or *str*³⁷⁹) – The GPIO pin which the buzzer is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*³⁸⁰ a *GPIODeviceError* (page 241) will be raised.
- **active_high** (*bool*³⁸¹) – If *True*³⁸² (the default), the buzzer will operate normally with the circuit described above. If *False*³⁸³ you should wire the cathode to the GPIO pin, and the anode to a 3V3 pin.
- **initial_value** (*bool*³⁸⁴ or *None*) – If *False*³⁸⁵ (the default), the buzzer will be silent initially. If *None*³⁸⁶, the buzzer will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*³⁸⁷, the buzzer will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

beep (*on_time=1, off_time=1, n=None, background=True*)

Make the device turn on and off repeatedly.

Parameters

- **on_time** (*float*³⁸⁸) – Number of seconds on. Defaults to 1 second.
- **off_time** (*float*³⁸⁹) – Number of seconds off. Defaults to 1 second.
- **n** (*int*³⁹⁰ or *None*) – Number of times to blink; *None*³⁹¹ (the default) means forever.
- **background** (*bool*³⁹²) – If *True*³⁹³ (the default), start a background thread to continue blinking and return immediately. If *False*³⁹⁴, only return when the blink is finished (warning: the default value of *n* will result in this method never returning).

off ()

Turns the device off.

on ()

Turns the device on.

toggle ()

Reverse the state of the device. If it's on, turn it off; if it's off, turn it on.

property is_active

Returns *True*³⁹⁵ if the device is currently active and *False*³⁹⁶ otherwise. This property is usually derived from *value* (page 132). Unlike *value* (page 132), this is *always* a boolean.

property pin

The *Pin* (page 227) that the device is connected to. This will be *None*³⁹⁷ if the device has been closed (see the *close* () (page 199) method). When dealing with GPIO pins, query *pin.number* to discover the GPIO pin (in BCM numbering) that the device is connected to.

property value

Returns 1 if the device is currently active and 0 otherwise. Setting this property changes the state of the device.

15.1.5 TonalBuzzer

class gpiozero.TonalBuzzer (*args, **kwargs)

Extends *CompositeDevice* (page 187) and represents a tonal buzzer.

Parameters

- **pin** (*int*³⁹⁸ or *str*³⁹⁹) – The GPIO pin which the buzzer is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*⁴⁰⁰ a *GPIODeviceError* (page 241) will be raised.
- **initial_value** (*float*⁴⁰¹) – If *None*⁴⁰² (the default), the buzzer will be off initially. Values between -1 and 1 can be specified as an initial value for the buzzer.
- **mid_tone** (*int*⁴⁰³ or *str*⁴⁰⁴) – The tone which is represented the device’s middle value (0). The default is “A4” (MIDI note 69).
- **octaves** (*int*⁴⁰⁵) – The number of octaves to allow away from the base note. The default is 1, meaning a value of -1 goes one octave below the base note, and one above, i.e. from A3 to A5 with the default base note of A4.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

Note: Note that this class does not currently work with *PiGPIOFactory* (page 236).

play (tone)

Play the given *tone*. This can either be an instance of *Tone* (page 215) or can be anything that could be used to construct an instance of *Tone* (page 215).

For example:

```
>>> from gpiozero import TonalBuzzer
>>> from gpiozero.tones import Tone
>>> b = TonalBuzzer(17)
>>> b.play(Tone("A4"))
>>> b.play(Tone(220.0)) # Hz
>>> b.play(Tone(60)) # middle C in MIDI notation
>>> b.play("A4")
>>> b.play(220.0)
>>> b.play(60)
```

stop ()

Turn the buzzer off. This is equivalent to setting *value* (page 134) to *None*⁴⁰⁶.

³⁷⁸ <https://docs.python.org/3.9/library/functions.html#int>
³⁷⁹ <https://docs.python.org/3.9/library/stdtypes.html#str>
³⁸⁰ <https://docs.python.org/3.9/library/constants.html#None>
³⁸¹ <https://docs.python.org/3.9/library/functions.html#bool>
³⁸² <https://docs.python.org/3.9/library/constants.html#True>
³⁸³ <https://docs.python.org/3.9/library/constants.html#False>
³⁸⁴ <https://docs.python.org/3.9/library/functions.html#bool>
³⁸⁵ <https://docs.python.org/3.9/library/constants.html#False>
³⁸⁶ <https://docs.python.org/3.9/library/constants.html#None>
³⁸⁷ <https://docs.python.org/3.9/library/constants.html#True>
³⁸⁸ <https://docs.python.org/3.9/library/functions.html#float>
³⁸⁹ <https://docs.python.org/3.9/library/functions.html#float>
³⁹⁰ <https://docs.python.org/3.9/library/functions.html#int>
³⁹¹ <https://docs.python.org/3.9/library/constants.html#None>
³⁹² <https://docs.python.org/3.9/library/functions.html#bool>
³⁹³ <https://docs.python.org/3.9/library/constants.html#True>
³⁹⁴ <https://docs.python.org/3.9/library/constants.html#False>
³⁹⁵ <https://docs.python.org/3.9/library/constants.html#True>
³⁹⁶ <https://docs.python.org/3.9/library/constants.html#False>
³⁹⁷ <https://docs.python.org/3.9/library/constants.html#None>

property is_active

Returns `True`⁴⁰⁷ if the buzzer is currently playing, otherwise `False`⁴⁰⁸.

property max_tone

The highest tone that the buzzer can play, i.e. the tone played when `value` (page 134) is 1.

property mid_tone

The middle tone available, i.e. the tone played when `value` (page 134) is 0.

property min_tone

The lowest tone that the buzzer can play, i.e. the tone played when `value` (page 134) is -1.

property octaves

The number of octaves available (above and below `mid_tone`).

property tone

Returns the `Tone` (page 215) that the buzzer is currently playing, or `None`⁴⁰⁹ if the buzzer is silent. This property can also be set to play the specified tone.

property value

Represents the state of the buzzer as a value between -1 (representing the minimum tone) and 1 (representing the maximum tone). This can also be the special value `None`⁴¹⁰ indicating that the buzzer is currently silent.

15.1.6 Motor

class `gpiozero.Motor` (**args, **kwargs*)

Extends `CompositeDevice` (page 187) and represents a generic motor connected to a bi-directional motor driver circuit (i.e. an `H-bridge`⁴¹¹).

Attach an `H-bridge`⁴¹² motor controller to your Pi; connect a power source (e.g. a battery pack or the 5V pin) to the controller; connect the outputs of the controller board to the two terminals of the motor; connect the inputs of the controller board to two GPIO pins.

The following code will make the motor turn “forwards”:

```
from gpiozero import Motor

motor = Motor(17, 18)
motor.forward()
```

Parameters

- **forward** (*int*⁴¹³ or *str*⁴¹⁴) – The GPIO pin that the forward input of the motor driver chip is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is `None`⁴¹⁵ a `GPIODeviceError` (page 241) will be raised.

³⁹⁸ <https://docs.python.org/3.9/library/functions.html#int>
³⁹⁹ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁴⁰⁰ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁰¹ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁰² <https://docs.python.org/3.9/library/constants.html#None>
⁴⁰³ <https://docs.python.org/3.9/library/functions.html#int>
⁴⁰⁴ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁴⁰⁵ <https://docs.python.org/3.9/library/functions.html#int>
⁴⁰⁶ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁰⁷ <https://docs.python.org/3.9/library/constants.html#True>
⁴⁰⁸ <https://docs.python.org/3.9/library/constants.html#False>
⁴⁰⁹ <https://docs.python.org/3.9/library/constants.html#None>
⁴¹⁰ <https://docs.python.org/3.9/library/constants.html#None>

- **backward** (*int*⁴¹⁶ or *str*⁴¹⁷) – The GPIO pin that the backward input of the motor driver chip is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*⁴¹⁸ a *GPIODeviceError* (page 241) will be raised.
- **enable** (*int*⁴¹⁹ or *str*⁴²⁰ or *None*) – The GPIO pin that enables the motor. Required for *some* motor controller boards. See *Pin Numbering* (page 3) for valid pin numbers.
- **pwm** (*bool*⁴²¹) – If *True*⁴²² (the default), construct *PWMOutputDevice* (page 142) instances for the motor controller pins, allowing both direction and variable speed control. If *False*⁴²³, construct *DigitalOutputDevice* (page 141) instances, allowing only direction control.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

backward (*speed=1*)

Drive the motor backwards.

Parameters

speed (*float*⁴²⁴) – The speed at which the motor should turn. Can be any value between 0 (stopped) and the default 1 (maximum speed) if *pwm* was *True*⁴²⁵ when the class was constructed (and only 0 or 1 if not).

forward (*speed=1*)

Drive the motor forwards.

Parameters

speed (*float*⁴²⁶) – The speed at which the motor should turn. Can be any value between 0 (stopped) and the default 1 (maximum speed) if *pwm* was *True*⁴²⁷ when the class was constructed (and only 0 or 1 if not).

reverse ()

Reverse the current direction of the motor. If the motor is currently idle this does nothing. Otherwise, the motor’s direction will be reversed at the current speed.

stop ()

Stop the motor.

property is_active

Returns *True*⁴²⁸ if the motor is currently running and *False*⁴²⁹ otherwise.

property value

Represents the speed of the motor as a floating point value between -1 (full speed backward) and 1 (full speed forward), with 0 representing stopped.

⁴¹¹ https://en.wikipedia.org/wiki/H_bridge

⁴¹² https://en.wikipedia.org/wiki/H_bridge

⁴¹³ <https://docs.python.org/3.9/library/functions.html#int>

⁴¹⁴ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁴¹⁵ <https://docs.python.org/3.9/library/constants.html#None>

⁴¹⁶ <https://docs.python.org/3.9/library/functions.html#int>

⁴¹⁷ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁴¹⁸ <https://docs.python.org/3.9/library/constants.html#None>

⁴¹⁹ <https://docs.python.org/3.9/library/functions.html#int>

⁴²⁰ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁴²¹ <https://docs.python.org/3.9/library/functions.html#bool>

⁴²² <https://docs.python.org/3.9/library/constants.html#True>

⁴²³ <https://docs.python.org/3.9/library/constants.html#False>

⁴²⁴ <https://docs.python.org/3.9/library/functions.html#float>

⁴²⁵ <https://docs.python.org/3.9/library/constants.html#True>

⁴²⁶ <https://docs.python.org/3.9/library/functions.html#float>

⁴²⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁴²⁸ <https://docs.python.org/3.9/library/constants.html#True>

⁴²⁹ <https://docs.python.org/3.9/library/constants.html#False>

15.1.7 PhaseEnableMotor

class gpiozero.PhaseEnableMotor(*args, **kwargs)

Extends [CompositeDevice](#) (page 187) and represents a generic motor connected to a Phase/Enable motor driver circuit; the phase of the driver controls whether the motor turns forwards or backwards, while enable controls the speed with PWM.

The following code will make the motor turn “forwards”:

```
from gpiozero import PhaseEnableMotor
motor = PhaseEnableMotor(12, 5)
motor.forward()
```

Parameters

- **phase** ([int](#)⁴³⁰ or [str](#)⁴³¹) – The GPIO pin that the phase (direction) input of the motor driver chip is connected to. See [Pin Numbering](#) (page 3) for valid pin numbers. If this is [None](#)⁴³² a [GPIODeviceError](#) (page 241) will be raised.
- **enable** ([int](#)⁴³³ or [str](#)⁴³⁴) – The GPIO pin that the enable (speed) input of the motor driver chip is connected to. See [Pin Numbering](#) (page 3) for valid pin numbers. If this is [None](#)⁴³⁵ a [GPIODeviceError](#) (page 241) will be raised.
- **pwm** ([bool](#)⁴³⁶) – If [True](#)⁴³⁷ (the default), construct [PWMOutputDevice](#) (page 142) instances for the motor controller pins, allowing both direction and variable speed control. If [False](#)⁴³⁸, construct [DigitalOutputDevice](#) (page 141) instances, allowing only direction control.
- **pin_factory** ([Factory](#) (page 226) or [None](#)) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

backward (speed=1)

Drive the motor backwards.

Parameters

- **speed** ([float](#)⁴³⁹) – The speed at which the motor should turn. Can be any value between 0 (stopped) and the default 1 (maximum speed).

forward (speed=1)

Drive the motor forwards.

Parameters

- **speed** ([float](#)⁴⁴⁰) – The speed at which the motor should turn. Can be any value between 0 (stopped) and the default 1 (maximum speed).

reverse ()

Reverse the current direction of the motor. If the motor is currently idle this does nothing. Otherwise, the motor’s direction will be reversed at the current speed.

stop ()

Stop the motor.

property is_active

Returns [True](#)⁴⁴¹ if the motor is currently running and [False](#)⁴⁴² otherwise.

property value

Represents the speed of the motor as a floating point value between -1 (full speed backward) and 1 (full speed forward).

15.1.8 Servo

class gpiozero.Servo(*args, **kwargs)

Extends *CompositeDevice* (page 187) and represents a PWM-controlled servo motor connected to a GPIO pin.

Connect a power source (e.g. a battery pack or the 5V pin) to the power cable of the servo (this is typically colored red); connect the ground cable of the servo (typically colored black or brown) to the negative of your battery pack, or a GND pin; connect the final cable (typically colored white or orange) to the GPIO pin you wish to use for controlling the servo.

The following code will make the servo move between its minimum, maximum, and mid-point positions with a pause between each:

```
from gpiozero import Servo
from time import sleep

servo = Servo(17)

while True:
    servo.min()
    sleep(1)
    servo.mid()
    sleep(1)
    servo.max()
    sleep(1)
```

You can also use the *value* (page 138) property to move the servo to a particular position, on a scale from -1 (min) to 1 (max) where 0 is the mid-point:

```
from gpiozero import Servo

servo = Servo(17)

servo.value = 0.5
```

Note: To reduce servo jitter, use the pigpio pin driver rather than the default RPi.GPIO driver (pigpio uses DMA sampling for much more precise edge timing). See *Changing the pin factory* (page 223) for further information.

Parameters

- **pin** (*int*⁴⁴³ or *str*⁴⁴⁴) – The GPIO pin that the servo is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*⁴⁴⁵ a *GPIODeviceError* (page 241) will be raised.
- **initial_value** (*float*⁴⁴⁶) – If 0 (the default), the device’s mid-point will be set initially. Other values between -1 and +1 can be specified as an initial position. *None*⁴⁴⁷

⁴³⁰ <https://docs.python.org/3.9/library/functions.html#int>
⁴³¹ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁴³² <https://docs.python.org/3.9/library/constants.html#None>
⁴³³ <https://docs.python.org/3.9/library/functions.html#int>
⁴³⁴ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁴³⁵ <https://docs.python.org/3.9/library/constants.html#None>
⁴³⁶ <https://docs.python.org/3.9/library/functions.html#bool>
⁴³⁷ <https://docs.python.org/3.9/library/constants.html#True>
⁴³⁸ <https://docs.python.org/3.9/library/constants.html#False>
⁴³⁹ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁴⁰ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁴¹ <https://docs.python.org/3.9/library/constants.html#True>
⁴⁴² <https://docs.python.org/3.9/library/constants.html#False>

means to start the servo un-controlled (see *value* (page 138)).

- **min_pulse_width** (*float*⁴⁴⁸) – The pulse width corresponding to the servo’s minimum position. This defaults to 1ms.
- **max_pulse_width** (*float*⁴⁴⁹) – The pulse width corresponding to the servo’s maximum position. This defaults to 2ms.
- **frame_width** (*float*⁴⁵⁰) – The length of time between servo control pulses measured in seconds. This defaults to 20ms which is a common value for servos.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

detach ()

Temporarily disable control of the servo. This is equivalent to setting *value* (page 138) to *None*⁴⁵¹.

max ()

Set the servo to its maximum position.

mid ()

Set the servo to its mid-point position.

min ()

Set the servo to its minimum position.

property frame_width

The time between control pulses, measured in seconds.

property is_active

Composite devices are considered “active” if any of their constituent devices have a “truthy” value.

property max_pulse_width

The control pulse width corresponding to the servo’s maximum position, measured in seconds.

property min_pulse_width

The control pulse width corresponding to the servo’s minimum position, measured in seconds.

property pulse_width

Returns the current pulse width controlling the servo.

property value

Represents the position of the servo as a value between -1 (the minimum position) and +1 (the maximum position). This can also be the special value *None*⁴⁵² indicating that the servo is currently “uncontrolled”, i.e. that no control signal is being sent. Typically this means the servo’s position remains unchanged, but that it can be moved by hand.

⁴⁴³ <https://docs.python.org/3.9/library/functions.html#int>
⁴⁴⁴ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁴⁴⁵ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁴⁶ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁴⁷ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁴⁸ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁴⁹ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁵⁰ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁵¹ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁵² <https://docs.python.org/3.9/library/constants.html#None>

15.1.9 AngularServo

class gpiozero.AngularServo (*args, **kwargs)

Extends [Servo](#) (page 137) and represents a rotational PWM-controlled servo motor which can be set to particular angles (assuming valid minimum and maximum angles are provided to the constructor).

Connect a power source (e.g. a battery pack or the 5V pin) to the power cable of the servo (this is typically colored red); connect the ground cable of the servo (typically colored black or brown) to the negative of your battery pack, or a GND pin; connect the final cable (typically colored white or orange) to the GPIO pin you wish to use for controlling the servo.

Next, calibrate the angles that the servo can rotate to. In an interactive Python session, construct a [Servo](#) (page 137) instance. The servo should move to its mid-point by default. Set the servo to its minimum value, and measure the angle from the mid-point. Set the servo to its maximum value, and again measure the angle:

```
>>> from gpiozero import Servo
>>> s = Servo(17)
>>> s.min() # measure the angle
>>> s.max() # measure the angle
```

You should now be able to construct an [AngularServo](#) (page 139) instance with the correct bounds:

```
>>> from gpiozero import AngularServo
>>> s = AngularServo(17, min_angle=-42, max_angle=44)
>>> s.angle = 0.0
>>> s.angle
0.0
>>> s.angle = 15
>>> s.angle
15.0
```

Note: You can set `min_angle` greater than `max_angle` if you wish to reverse the sense of the angles (e.g. `min_angle=45, max_angle=-45`). This can be useful with servos that rotate in the opposite direction to your expectations of minimum and maximum.

Parameters

- **pin** (*int*⁴⁵³ or *str*⁴⁵⁴) – The GPIO pin that the servo is connected to. See [Pin Numbering](#) (page 3) for valid pin numbers. If this is `None`⁴⁵⁵ a [GPIODeviceError](#) (page 241) will be raised.
- **initial_angle** (*float*⁴⁵⁶) – Sets the servo’s initial angle to the specified value. The default is 0. The value specified must be between `min_angle` and `max_angle` inclusive. `None`⁴⁵⁷ means to start the servo un-controlled (see [value](#) (page 140)).
- **min_angle** (*float*⁴⁵⁸) – Sets the minimum angle that the servo can rotate to. This defaults to -90, but should be set to whatever you measure from your servo during calibration.
- **max_angle** (*float*⁴⁵⁹) – Sets the maximum angle that the servo can rotate to. This defaults to 90, but should be set to whatever you measure from your servo during calibration.
- **min_pulse_width** (*float*⁴⁶⁰) – The pulse width corresponding to the servo’s minimum position. This defaults to 1ms.
- **max_pulse_width** (*float*⁴⁶¹) – The pulse width corresponding to the servo’s maximum position. This defaults to 2ms.
- **frame_width** (*float*⁴⁶²) – The length of time between servo control pulses measured in seconds. This defaults to 20ms which is a common value for servos.

- **pin_factory** ([Factory](#) (page 226) or *None*) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

max()

Set the servo to its maximum position.

mid()

Set the servo to its mid-point position.

min()

Set the servo to its minimum position.

property angle

The position of the servo as an angle measured in degrees. This will only be accurate if [min_angle](#) (page 140) and [max_angle](#) (page 140) have been set appropriately in the constructor.

This can also be the special value `None`⁴⁶³ indicating that the servo is currently “uncontrolled”, i.e. that no control signal is being sent. Typically this means the servo’s position remains unchanged, but that it can be moved by hand.

property is_active

Composite devices are considered “active” if any of their constituent devices have a “truthy” value.

property max_angle

The maximum angle that the servo will rotate to when [max\(\)](#) (page 140) is called.

property min_angle

The minimum angle that the servo will rotate to when [min\(\)](#) (page 140) is called.


property value

Represents the position of the servo as a value between -1 (the minimum position) and +1 (the maximum position). This can also be the special value `None`⁴⁶⁴ indicating that the servo is currently “uncontrolled”, i.e. that no control signal is being sent. Typically this means the servo’s position remains unchanged, but that it can be moved by hand.

15.2 Base Classes

The classes in the sections above are derived from a series of base classes, some of which are effectively abstract. The classes form the (partial) hierarchy displayed in the graph below (abstract classes are shaded lighter than concrete classes):

⁴⁵³ <https://docs.python.org/3.9/library/functions.html#int>
⁴⁵⁴ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁴⁵⁵ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁵⁶ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁵⁷ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁵⁸ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁵⁹ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁶⁰ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁶¹ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁶² <https://docs.python.org/3.9/library/functions.html#float>
⁴⁶³ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁶⁴ <https://docs.python.org/3.9/library/constants.html#None>

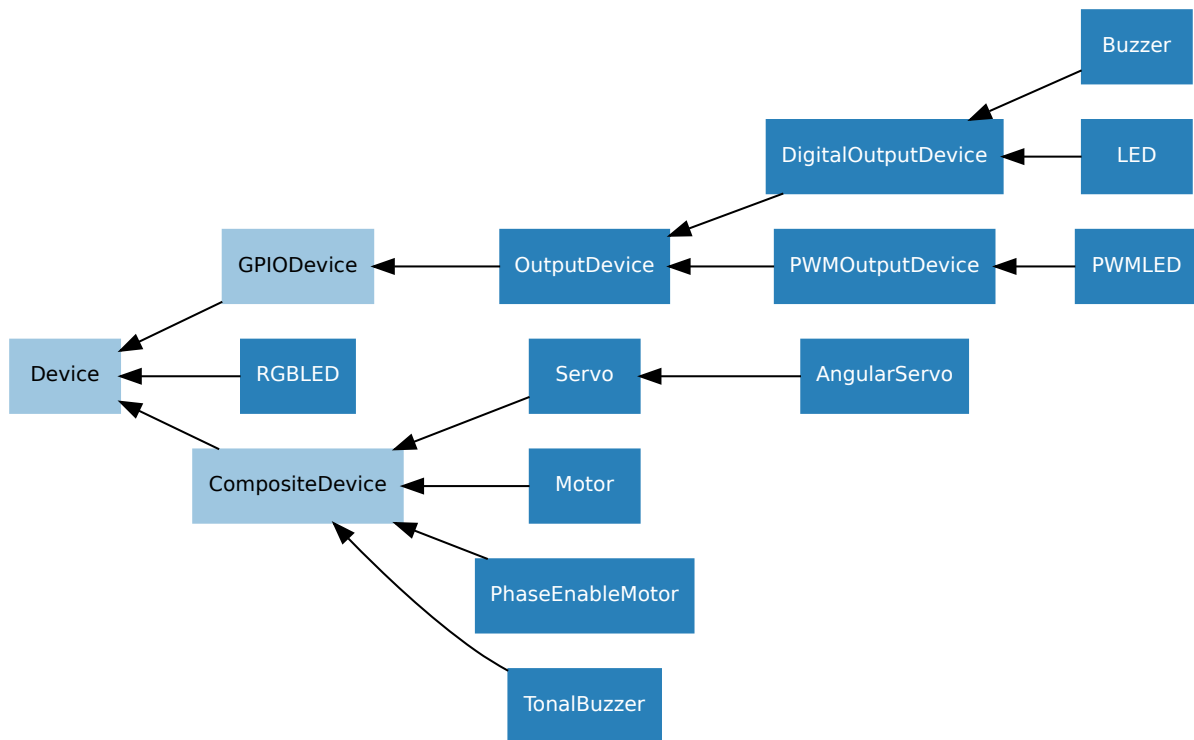

The following sections document these base classes for advanced users that wish to construct classes for their own devices.

15.2.1 DigitalOutputDevice

class `gpiozero.DigitalOutputDevice` (**args, **kwargs*)

Represents a generic output device with typical on/off behaviour.

This class extends `OutputDevice` (page 144) with a `blink()` (page 141) method which uses an optional background thread to handle toggling the device state without further interaction.

Parameters

- **pin** (*int*⁴⁶⁵ or *str*⁴⁶⁶) – The GPIO pin that the device is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is `None`⁴⁶⁷ a `GPIODeviceError` (page 241) will be raised.
- **active_high** (*bool*⁴⁶⁸) – If `True`⁴⁶⁹ (the default), the `on()` (page 142) method will set the GPIO to HIGH. If `False`⁴⁷⁰, the `on()` (page 142) method will set the GPIO to LOW (the `off()` (page 142) method always does the opposite).
- **initial_value** (*bool*⁴⁷¹ or `None`) – If `False`⁴⁷² (the default), the device will be off initially. If `None`⁴⁷³, the device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If `True`⁴⁷⁴, the device will be switched on initially.
- **pin_factory** (`Factory` (page 226) or `None`) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

blink (*on_time=1, off_time=1, n=None, background=True*)

Make the device turn on and off repeatedly.

Parameters

- **on_time** (*float*⁴⁷⁵) – Number of seconds on. Defaults to 1 second.
- **off_time** (*float*⁴⁷⁶) – Number of seconds off. Defaults to 1 second.

- **n** (*int*⁴⁷⁷ or *None*) – Number of times to blink; *None*⁴⁷⁸ (the default) means forever.
- **background** (*bool*⁴⁷⁹) – If *True*⁴⁸⁰ (the default), start a background thread to continue blinking and return immediately. If *False*⁴⁸¹, only return when the blink is finished (warning: the default value of *n* will result in this method never returning).

off()

Turns the device off.

on()

Turns the device on.

property value

Returns 1 if the device is currently active and 0 otherwise. Setting this property changes the state of the device.

15.2.2 PWMOutputDevice

class gpiozero.PWMOutputDevice (*args, **kwargs)

Generic output device configured for pulse-width modulation (PWM).

Parameters

- **pin** (*int*⁴⁸² or *str*⁴⁸³) – The GPIO pin that the device is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*⁴⁸⁴ a *GPIODeviceError* (page 241) will be raised.
- **active_high** (*bool*⁴⁸⁵) – If *True*⁴⁸⁶ (the default), the *on()* (page 143) method will set the GPIO to HIGH. If *False*⁴⁸⁷, the *on()* (page 143) method will set the GPIO to LOW (the *off()* (page 143) method always does the opposite).
- **initial_value** (*float*⁴⁸⁸) – If 0 (the default), the device’s duty cycle will be 0 initially. Other values between 0 and 1 can be specified as an initial duty cycle. Note that *None*⁴⁸⁹ cannot be specified (unlike the parent class) as there is no way to tell PWM not to alter the state of the pin.
- **frequency** (*int*⁴⁹⁰) – The frequency (in Hz) of pulses emitted to drive the device. Defaults to 100Hz.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

blink (*on_time=1, off_time=1, fade_in_time=0, fade_out_time=0, n=None, background=True*)

Make the device turn on and off repeatedly.

Parameters

- **on_time** (*float*⁴⁹¹) – Number of seconds on. Defaults to 1 second.

⁴⁶⁵ <https://docs.python.org/3.9/library/functions.html#int>
⁴⁶⁶ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁴⁶⁷ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁶⁸ <https://docs.python.org/3.9/library/functions.html#bool>
⁴⁶⁹ <https://docs.python.org/3.9/library/constants.html#True>
⁴⁷⁰ <https://docs.python.org/3.9/library/constants.html#False>
⁴⁷¹ <https://docs.python.org/3.9/library/functions.html#bool>
⁴⁷² <https://docs.python.org/3.9/library/constants.html#False>
⁴⁷³ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁷⁴ <https://docs.python.org/3.9/library/constants.html#True>
⁴⁷⁵ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁷⁶ <https://docs.python.org/3.9/library/functions.html#float>
⁴⁷⁷ <https://docs.python.org/3.9/library/functions.html#int>
⁴⁷⁸ <https://docs.python.org/3.9/library/constants.html#None>
⁴⁷⁹ <https://docs.python.org/3.9/library/functions.html#bool>
⁴⁸⁰ <https://docs.python.org/3.9/library/constants.html#True>
⁴⁸¹ <https://docs.python.org/3.9/library/constants.html#False>

- **off_time** (*float*⁴⁹²) – Number of seconds off. Defaults to 1 second.
- **fade_in_time** (*float*⁴⁹³) – Number of seconds to spend fading in. Defaults to 0.
- **fade_out_time** (*float*⁴⁹⁴) – Number of seconds to spend fading out. Defaults to 0.
- **n** (*int*⁴⁹⁵ or *None*) – Number of times to blink; *None*⁴⁹⁶ (the default) means forever.
- **background** (*bool*⁴⁹⁷) – If *True*⁴⁹⁸ (the default), start a background thread to continue blinking and return immediately. If *False*⁴⁹⁹, only return when the blink is finished (warning: the default value of *n* will result in this method never returning).

off()

Turns the device off.

on()

Turns the device on.

pulse (*fade_in_time=1, fade_out_time=1, n=None, background=True*)

Make the device fade in and out repeatedly.

Parameters

- **fade_in_time** (*float*⁵⁰⁰) – Number of seconds to spend fading in. Defaults to 1.
- **fade_out_time** (*float*⁵⁰¹) – Number of seconds to spend fading out. Defaults to 1.
- **n** (*int*⁵⁰² or *None*) – Number of times to pulse; *None*⁵⁰³ (the default) means forever.
- **background** (*bool*⁵⁰⁴) – If *True*⁵⁰⁵ (the default), start a background thread to continue pulsing and return immediately. If *False*⁵⁰⁶, only return when the pulse is finished (warning: the default value of *n* will result in this method never returning).

toggle()

Toggle the state of the device. If the device is currently off (*value* (page 143) is 0.0), this changes it to “fully” on (*value* (page 143) is 1.0). If the device has a duty cycle (*value* (page 143)) of 0.1, this will toggle it to 0.9, and so on.

property frequency

The frequency of the pulses used with the PWM device, in Hz. The default is 100Hz.

property is_active

Returns *True*⁵⁰⁷ if the device is currently active (*value* (page 143) is non-zero) and *False*⁵⁰⁸ otherwise.

property value

The duty cycle of the PWM device. 0.0 is off, 1.0 is fully on. Values in between may be specified for varying levels of power in the device.

15.2.3 OutputDevice

class gpiozero.OutputDevice (*args, **kwargs)

Represents a generic GPIO output device.

This class extends *GPIODevice* (page 122) to add facilities common to GPIO output devices: an *on()* (page 144) method to switch the device on, a corresponding *off()* (page 144) method, and a *toggle()* (page 144) method.

Parameters

- **pin** (*int*⁵⁰⁹ or *str*⁵¹⁰) – The GPIO pin that the device is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is *None*⁵¹¹ a *GPIODeviceError* (page 241) will be raised.
- **active_high** (*bool*⁵¹²) – If *True*⁵¹³ (the default), the *on()* (page 144) method will set the GPIO to HIGH. If *False*⁵¹⁴, the *on()* (page 144) method will set the GPIO to LOW (the *off()* (page 144) method always does the opposite).
- **initial_value** (*bool*⁵¹⁵ or *None*) – If *False*⁵¹⁶ (the default), the device will be off initially. If *None*⁵¹⁷, the device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁵¹⁸, the device will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

off()

Turns the device off.

on()

Turns the device on.

toggle()

Reverse the state of the device. If it's on, turn it off; if it's off, turn it on.

property active_high

When *True*⁵¹⁹, the *value* (page 145) property is *True*⁵²⁰ when the device's *pin* (page 123) is high.

482 <https://docs.python.org/3.9/library/functions.html#int>
483 <https://docs.python.org/3.9/library/stdtypes.html#str>
484 <https://docs.python.org/3.9/library/constants.html#None>
485 <https://docs.python.org/3.9/library/functions.html#bool>
486 <https://docs.python.org/3.9/library/constants.html#True>
487 <https://docs.python.org/3.9/library/constants.html#False>
488 <https://docs.python.org/3.9/library/functions.html#float>
489 <https://docs.python.org/3.9/library/constants.html#None>
490 <https://docs.python.org/3.9/library/functions.html#int>
491 <https://docs.python.org/3.9/library/functions.html#float>
492 <https://docs.python.org/3.9/library/functions.html#float>
493 <https://docs.python.org/3.9/library/functions.html#float>
494 <https://docs.python.org/3.9/library/functions.html#float>
495 <https://docs.python.org/3.9/library/functions.html#int>
496 <https://docs.python.org/3.9/library/constants.html#None>
497 <https://docs.python.org/3.9/library/functions.html#bool>
498 <https://docs.python.org/3.9/library/constants.html#True>
499 <https://docs.python.org/3.9/library/constants.html#False>
500 <https://docs.python.org/3.9/library/functions.html#float>
501 <https://docs.python.org/3.9/library/functions.html#float>
502 <https://docs.python.org/3.9/library/functions.html#int>
503 <https://docs.python.org/3.9/library/constants.html#None>
504 <https://docs.python.org/3.9/library/functions.html#bool>
505 <https://docs.python.org/3.9/library/constants.html#True>
506 <https://docs.python.org/3.9/library/constants.html#False>
507 <https://docs.python.org/3.9/library/constants.html#True>
508 <https://docs.python.org/3.9/library/constants.html#False>

When `False`⁵²¹ the `value` (page 145) property is `True`⁵²² when the device’s pin is low (i.e. the value is inverted).

This property can be set after construction; be warned that changing it will invert `value` (page 145) (i.e. changing this property doesn’t change the device’s pin state - it just changes how that state is interpreted).

property value

Returns 1 if the device is currently active and 0 otherwise. Setting this property changes the state of the device.

15.2.4 GPIODevice

class gpiozero.GPIODevice (*args, **kwargs)

Extends `Device` (page 199). Represents a generic GPIO device and provides the services common to all single-pin GPIO devices (like ensuring two GPIO devices do not share a `pin` (page 123)).

Parameters

pin (`int`⁵²³ or `str`⁵²⁴) – The GPIO pin that the device is connected to. See *Pin Numbering* (page 3) for valid pin numbers. If this is `None`⁵²⁵ a `GPIODeviceError` (page 241) will be raised. If the pin is already in use by another device, `GPIOPinInUse` (page 241) will be raised.

close ()

Shut down the device and release all associated resources (such as GPIO pins).

This method is idempotent (can be called on an already closed device without any side-effects). It is primarily intended for interactive use at the command line. It disables the device and releases its pin(s) for use by another device.

You can attempt to do this simply by deleting an object, but unless you’ve cleaned up all references to the object this may not work (even if you’ve cleaned up all references, there’s still no guarantee the garbage collector will actually delete the object at that point). By contrast, the `close` method provides a means of ensuring that the object is shut down.

For example, if you have a breadboard with a buzzer connected to pin 16, but then wish to attach an LED instead:

```
>>> from gpiozero import *
>>> bz = Buzzer(16)
>>> bz.on()
>>> bz.off()
>>> bz.close()
>>> led = LED(16)
>>> led.blink()
```

`Device` (page 199) descendants can also be used as context managers using the `with`⁵²⁶ statement. For example:

⁵⁰⁹ <https://docs.python.org/3.9/library/functions.html#int>
⁵¹⁰ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁵¹¹ <https://docs.python.org/3.9/library/constants.html#None>
⁵¹² <https://docs.python.org/3.9/library/functions.html#bool>
⁵¹³ <https://docs.python.org/3.9/library/constants.html#True>
⁵¹⁴ <https://docs.python.org/3.9/library/constants.html#False>
⁵¹⁵ <https://docs.python.org/3.9/library/functions.html#bool>
⁵¹⁶ <https://docs.python.org/3.9/library/constants.html#False>
⁵¹⁷ <https://docs.python.org/3.9/library/constants.html#None>
⁵¹⁸ <https://docs.python.org/3.9/library/constants.html#True>
⁵¹⁹ <https://docs.python.org/3.9/library/constants.html#True>
⁵²⁰ <https://docs.python.org/3.9/library/constants.html#True>
⁵²¹ <https://docs.python.org/3.9/library/constants.html#False>
⁵²² <https://docs.python.org/3.9/library/constants.html#True>

```
>>> from gpiozero import *
>>> with Buzzer(16) as bz:
...     bz.on()
...
>>> with LED(16) as led:
...     led.on()
...
```

property closed

Returns `True`⁵²⁷ if the device is closed (see the `close()` (page 122) method). Once a device is closed you can no longer use any other methods or properties to control or query the device.

property pin

The `Pin` (page 227) that the device is connected to. This will be `None`⁵²⁸ if the device has been closed (see the `close()` (page 199) method). When dealing with GPIO pins, query `pin.number` to discover the GPIO pin (in BCM numbering) that the device is connected to.

property value

Returns a value representing the device's state. Frequently, this is a boolean value, or a number between 0 and 1 but some devices use larger ranges (e.g. -1 to +1) and composite devices usually use tuples to return the states of all their subordinate components.

⁵²³ <https://docs.python.org/3.9/library/functions.html#int>

⁵²⁴ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁵²⁵ <https://docs.python.org/3.9/library/constants.html#None>

⁵²⁶ https://docs.python.org/3.9/reference/compound_stmts.html#with

⁵²⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁵²⁸ <https://docs.python.org/3.9/library/constants.html#None>

API - SPI DEVICES

SPI stands for [Serial Peripheral Interface](#)⁵²⁹ and is a mechanism allowing compatible devices to communicate with the Pi. SPI is a four-wire protocol meaning it usually requires four pins to operate:

- A “clock” pin which provides timing information.
- A “MOSI” pin (Master Out, Slave In) which the Pi uses to send information to the device.
- A “MISO” pin (Master In, Slave Out) which the Pi uses to receive information from the device.
- A “select” pin which the Pi uses to indicate which device it’s talking to. This last pin is necessary because multiple devices can share the clock, MOSI, and MISO pins, but only one device can be connected to each select pin.

The `gpiozero` library provides two SPI implementations:

- A software based implementation. This is always available, can use any four GPIO pins for SPI communication, but is rather slow and won’t work with all devices.
- A hardware based implementation. This is only available when the SPI kernel module is loaded, and the Python `spidev` library is available. It can only use specific pins for SPI communication (GPIO11=clock, GPIO10=MOSI, GPIO9=MISO, while GPIO8 is select for device 0 and GPIO7 is select for device 1). However, it is extremely fast and works with all devices.

16.1 SPI keyword args

When constructing an SPI device there are two schemes for specifying which pins it is connected to:

- You can specify *port* and *device* keyword arguments. The *port* parameter must be 0 (there is only one user-accessible hardware SPI interface on the Pi using GPIO11 as the clock pin, GPIO10 as the MOSI pin, and GPIO9 as the MISO pin), while the *device* parameter must be 0 or 1. If *device* is 0, the select pin will be GPIO8. If *device* is 1, the select pin will be GPIO7.
- Alternatively you can specify *clock_pin*, *mosi_pin*, *miso_pin*, and *select_pin* keyword arguments. In this case the pins can be any 4 GPIO pins (remember that SPI devices can share clock, MOSI, and MISO pins, but not select pins - the `gpiozero` library will enforce this restriction).

You cannot mix these two schemes, i.e. attempting to specify *port* and *clock_pin* will result in `SPIBadArgs` (page 240) being raised. However, you can omit any arguments from either scheme. The defaults are:

- *port* and *device* both default to 0.
- *clock_pin* defaults to 11, *mosi_pin* defaults to 10, *miso_pin* defaults to 9, and *select_pin* defaults to 8.
- As with other GPIO based devices you can optionally specify a *pin_factory* argument overriding the default pin factory (see [API - Pins](#) (page 221) for more information).

Hence the following constructors are all equivalent:

⁵²⁹ https://en.wikipedia.org/wiki/Serial_Peripheral_Interface_Bus

```
from gpiozero import MCP3008

MCP3008(channel=0)
MCP3008(channel=0, device=0)
MCP3008(channel=0, port=0, device=0)
MCP3008(channel=0, select_pin=8)
MCP3008(channel=0, clock_pin=11, mosi_pin=10, miso_pin=9, select_pin=8)
```

Note that the defaults describe equivalent sets of pins and that these pins are compatible with the hardware implementation. Regardless of which scheme you use, gpiozero will attempt to use the hardware implementation if it is available and if the selected pins are compatible, falling back to the software implementation if not.

16.2 Analog to Digital Converters (ADC)

The following classes are intended for general use with the integrated circuits they are named after. All classes in this section are concrete (not abstract).

16.2.1 MCP3001

class gpiozero.MCP3001(*args, **kwargs)

The MCP3001⁵³⁰ is a 10-bit analog to digital converter with 1 channel. Please note that the MCP3001 always operates in differential mode, measuring the value of IN+ relative to IN-.

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

16.2.2 MCP3002

class gpiozero.MCP3002(*args, **kwargs)

The MCP3002⁵³¹ is a 10-bit analog to digital converter with 2 channels (0-1).

property channel

The channel to read data from. The MCP3008/3208/3304 have 8 channels (0-7), while the MCP3004/3204/3302 have 4 channels (0-3), the MCP3002/3202 have 2 channels (0-1), and the MCP3001/3201/3301 only have 1 channel.

property differential

If `True`, the device is operated in differential mode. In this mode one channel (specified by the channel attribute) is read relative to the value of a second channel (implied by the chip's design).

Please refer to the device data-sheet to determine which channel is used as the relative base value (for example, when using an MCP3008 (page 149) in differential mode, channel 0 is read relative to channel 1).

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

⁵³⁰ <http://www.farnell.com/datasheets/630400.pdf>

⁵³¹ <http://www.farnell.com/datasheets/1599363.pdf>

16.2.3 MCP3004

class gpiozero.MCP3004 (*args, **kwargs)

The MCP3004⁵³² is a 10-bit analog to digital converter with 4 channels (0-3).

property channel

The channel to read data from. The MCP3008/3208/3304 have 8 channels (0-7), while the MCP3004/3204/3302 have 4 channels (0-3), the MCP3002/3202 have 2 channels (0-1), and the MCP3001/3201/3301 only have 1 channel.

property differential

If `True`, the device is operated in differential mode. In this mode one channel (specified by the channel attribute) is read relative to the value of a second channel (implied by the chip's design).

Please refer to the device data-sheet to determine which channel is used as the relative base value (for example, when using an MCP3008 (page 149) in differential mode, channel 0 is read relative to channel 1).

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

16.2.4 MCP3008

class gpiozero.MCP3008 (*args, **kwargs)

The MCP3008⁵³³ is a 10-bit analog to digital converter with 8 channels (0-7).

property channel

The channel to read data from. The MCP3008/3208/3304 have 8 channels (0-7), while the MCP3004/3204/3302 have 4 channels (0-3), the MCP3002/3202 have 2 channels (0-1), and the MCP3001/3201/3301 only have 1 channel.

property differential

If `True`, the device is operated in differential mode. In this mode one channel (specified by the channel attribute) is read relative to the value of a second channel (implied by the chip's design).

Please refer to the device data-sheet to determine which channel is used as the relative base value (for example, when using an MCP3008 (page 149) in differential mode, channel 0 is read relative to channel 1).

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

16.2.5 MCP3201

class gpiozero.MCP3201 (*args, **kwargs)

The MCP3201⁵³⁴ is a 12-bit analog to digital converter with 1 channel. Please note that the MCP3201 always operates in differential mode, measuring the value of IN+ relative to IN-.

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

⁵³² <http://www.farnell.com/datasheets/808965.pdf>

⁵³³ <http://www.farnell.com/datasheets/808965.pdf>

⁵³⁴ <http://www.farnell.com/datasheets/1669366.pdf>

16.2.6 MCP3202

class gpiozero.MCP3202 (*args, **kwargs)

The MCP3202⁵³⁵ is a 12-bit analog to digital converter with 2 channels (0-1).

property channel

The channel to read data from. The MCP3008/3208/3304 have 8 channels (0-7), while the MCP3004/3204/3302 have 4 channels (0-3), the MCP3002/3202 have 2 channels (0-1), and the MCP3001/3201/3301 only have 1 channel.

property differential

If `True`, the device is operated in differential mode. In this mode one channel (specified by the channel attribute) is read relative to the value of a second channel (implied by the chip's design).

Please refer to the device data-sheet to determine which channel is used as the relative base value (for example, when using an MCP3008 (page 149) in differential mode, channel 0 is read relative to channel 1).

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

16.2.7 MCP3204

class gpiozero.MCP3204 (*args, **kwargs)

The MCP3204⁵³⁶ is a 12-bit analog to digital converter with 4 channels (0-3).

property channel

The channel to read data from. The MCP3008/3208/3304 have 8 channels (0-7), while the MCP3004/3204/3302 have 4 channels (0-3), the MCP3002/3202 have 2 channels (0-1), and the MCP3001/3201/3301 only have 1 channel.

property differential

If `True`, the device is operated in differential mode. In this mode one channel (specified by the channel attribute) is read relative to the value of a second channel (implied by the chip's design).

Please refer to the device data-sheet to determine which channel is used as the relative base value (for example, when using an MCP3008 (page 149) in differential mode, channel 0 is read relative to channel 1).

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

16.2.8 MCP3208

class gpiozero.MCP3208 (*args, **kwargs)

The MCP3208⁵³⁷ is a 12-bit analog to digital converter with 8 channels (0-7).

property channel

The channel to read data from. The MCP3008/3208/3304 have 8 channels (0-7), while the MCP3004/3204/3302 have 4 channels (0-3), the MCP3002/3202 have 2 channels (0-1), and the MCP3001/3201/3301 only have 1 channel.

⁵³⁵ <http://www.farnell.com/datasheets/1669376.pdf>

⁵³⁶ <http://www.farnell.com/datasheets/808967.pdf>

property differential

If `True`, the device is operated in differential mode. In this mode one channel (specified by the channel attribute) is read relative to the value of a second channel (implied by the chip's design).

Please refer to the device data-sheet to determine which channel is used as the relative base value (for example, when using an [MCP3008](#) (page 149) in differential mode, channel 0 is read relative to channel 1).

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

16.2.9 MCP3301

class `gpiozero.MCP3301` (**args*, ***kwargs*)

The [MCP3301](#)⁵³⁸ is a signed 13-bit analog to digital converter. Please note that the MCP3301 always operates in differential mode measuring the difference between IN+ and IN-. Its output value is scaled from -1 to +1.

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for devices operating in differential mode).

16.2.10 MCP3302

class `gpiozero.MCP3302` (**args*, ***kwargs*)

The [MCP3302](#)⁵³⁹ is a 12/13-bit analog to digital converter with 4 channels (0-3). When operated in differential mode, the device outputs a signed 13-bit value which is scaled from -1 to +1. When operated in single-ended mode (the default), the device outputs an unsigned 12-bit value scaled from 0 to 1.

property channel

The channel to read data from. The MCP3008/3208/3304 have 8 channels (0-7), while the MCP3004/3204/3302 have 4 channels (0-3), the MCP3002/3202 have 2 channels (0-1), and the MCP3001/3201/3301 only have 1 channel.

property differential

If `True`, the device is operated in differential mode. In this mode one channel (specified by the channel attribute) is read relative to the value of a second channel (implied by the chip's design).

Please refer to the device data-sheet to determine which channel is used as the relative base value (for example, when using an [MCP3304](#) (page 152) in differential mode, channel 0 is read relative to channel 1).

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for devices operating in differential mode).

⁵³⁷ <http://www.farnell.com/datasheets/808967.pdf>

⁵³⁸ <http://www.farnell.com/datasheets/1669397.pdf>

⁵³⁹ <http://www.farnell.com/datasheets/1486116.pdf>

16.2.11 MCP3304

class gpiozero.MCP3304 (*args, **kwargs)

The MCP3304⁵⁴⁰ is a 12/13-bit analog to digital converter with 8 channels (0-7). When operated in differential mode, the device outputs a signed 13-bit value which is scaled from -1 to +1. When operated in single-ended mode (the default), the device outputs an unsigned 12-bit value scaled from 0 to 1.

property channel

The channel to read data from. The MCP3008/3208/3304 have 8 channels (0-7), while the MCP3004/3204/3302 have 4 channels (0-3), the MCP3002/3202 have 2 channels (0-1), and the MCP3001/3201/3301 only have 1 channel.

property differential

If True, the device is operated in differential mode. In this mode one channel (specified by the channel attribute) is read relative to the value of a second channel (implied by the chip's design).

Please refer to the device data-sheet to determine which channel is used as the relative base value (for example, when using an MCP3304 (page 152) in differential mode, channel 0 is read relative to channel 1).


property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for devices operating in differential mode).

16.3 Base Classes

The classes in the sections above are derived from a series of base classes, some of which are effectively abstract. The classes form the (partial) hierarchy displayed in the graph below (abstract classes are shaded lighter than concrete classes):

⁵⁴⁰ <http://www.farnell.com/datasheets/1486116.pdf>

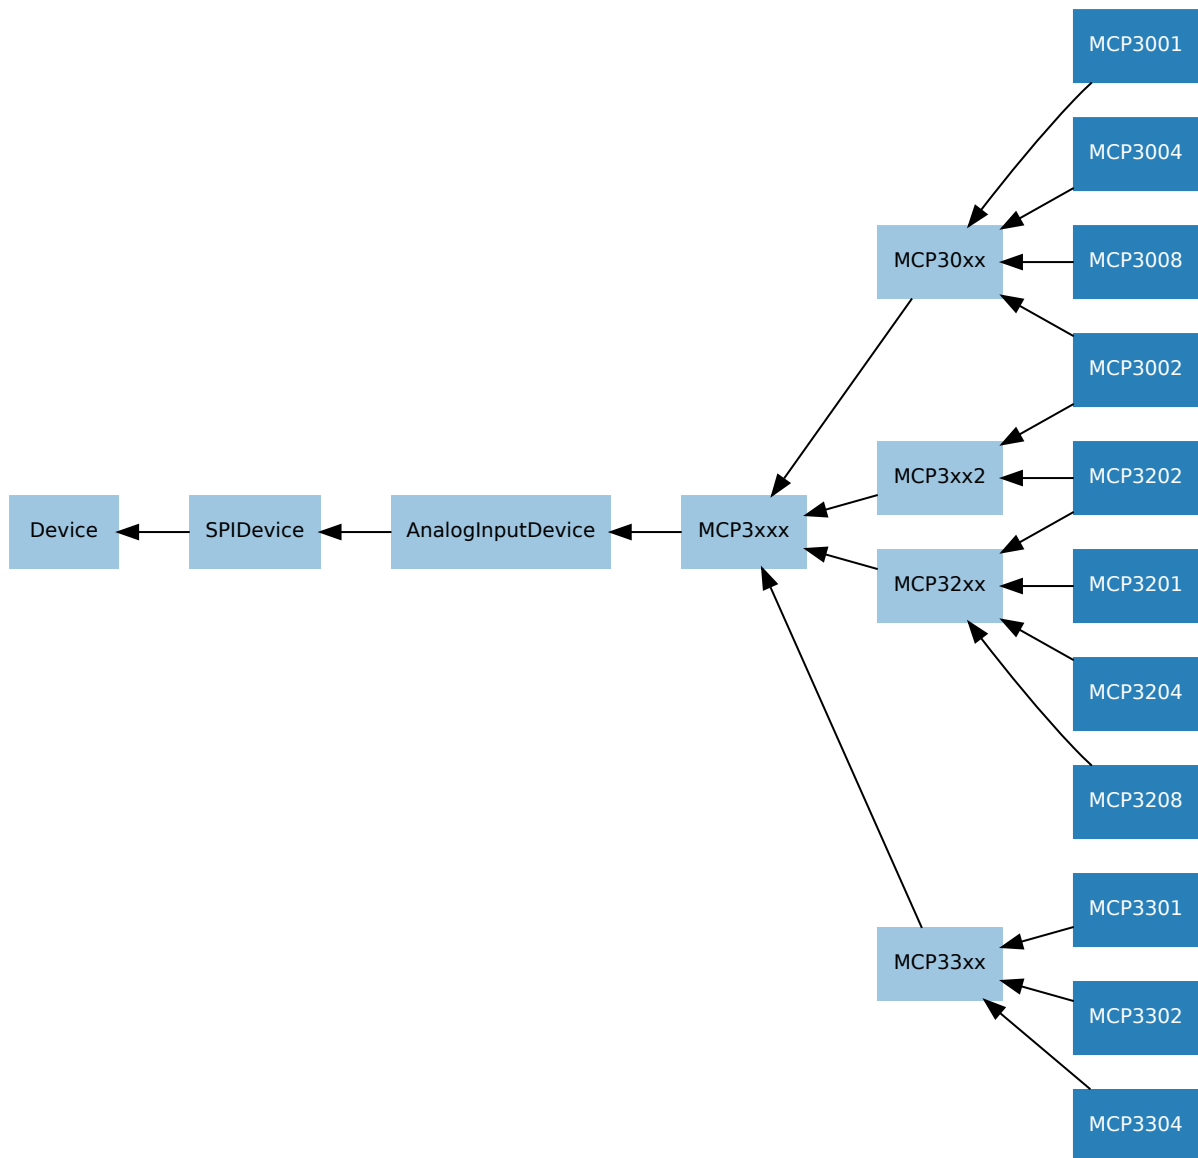

The following sections document these base classes for advanced users that wish to construct classes for their own devices.

16.3.1 AnalogInputDevice

class `gpiozero.AnalogInputDevice(*args, **kwargs)`

Represents an analog input device connected to SPI (serial interface).

Typical analog input devices are [analog to digital converters](#)⁵⁴¹ (ADCs). Several classes are provided for specific ADC chips, including [MCP3004](#) (page 149), [MCP3008](#) (page 149), [MCP3204](#) (page 150), and [MCP3208](#) (page 150).

The following code demonstrates reading the first channel of an MCP3008 chip attached to the Pi's SPI pins:

```

from gpiozero import MCP3008

pot = MCP3008(0)
print(pot.value)
  
```

The `value` (page 154) attribute is normalized such that its value is always between 0.0 and 1.0 (or in special cases, such as differential sampling, -1 to +1). Hence, you can use an analog input to control the brightness of

a *PWMLED* (page 127) like so:

```
from gpiozero import MCP3008, PWMLED

pot = MCP3008(0)
led = PWMLED(17)
led.source = pot
```

The *voltage* (page 154) attribute reports values between 0.0 and *max_voltage* (which defaults to 3.3, the logic level of the GPIO pins).

property bits

The bit-resolution of the device/channel.

property max_voltage

The voltage required to set the device's value to 1.

property raw_value

The raw value as read from the device.

property value

The current value read from the device, scaled to a value between 0 and 1 (or -1 to +1 for certain devices operating in differential mode).

property voltage

The current voltage read from the device. This will be a value between 0 and the *max_voltage* parameter specified in the constructor.

16.3.2 SPIDevice

class gpiozero.*SPIDevice* (*args, **kwargs)

Extends *Device* (page 199). Represents a device that communicates via the SPI protocol.

See *SPI keyword args* (page 147) for information on the keyword arguments that can be specified with the constructor.

close()

Shut down the device and release all associated resources (such as GPIO pins).

This method is idempotent (can be called on an already closed device without any side-effects). It is primarily intended for interactive use at the command line. It disables the device and releases its pin(s) for use by another device.

You can attempt to do this simply by deleting an object, but unless you've cleaned up all references to the object this may not work (even if you've cleaned up all references, there's still no guarantee the garbage collector will actually delete the object at that point). By contrast, the close method provides a means of ensuring that the object is shut down.

For example, if you have a breadboard with a buzzer connected to pin 16, but then wish to attach an LED instead:

```
>>> from gpiozero import *
>>> bz = Buzzer(16)
>>> bz.on()
>>> bz.off()
>>> bz.close()
>>> led = LED(16)
>>> led.blink()
```

Device (page 199) descendants can also be used as context managers using the *with*⁵⁴² statement. For example:

⁵⁴¹ https://en.wikipedia.org/wiki/Analog-to-digital_converter

```
>>> from gpiozero import *
>>> with Buzzer(16) as bz:
...     bz.on()
...
>>> with LED(16) as led:
...     led.on()
...
```

property closed

Returns `True`⁵⁴³ if the device is closed (see the `close()` (page 154) method). Once a device is closed you can no longer use any other methods or properties to control or query the device.

⁵⁴² https://docs.python.org/3.9/reference/compound_stmts.html#with

⁵⁴³ <https://docs.python.org/3.9/library/constants.html#True>

API - BOARDS AND ACCESSORIES

These additional interfaces are provided to group collections of components together for ease of use, and as examples. They are composites made up of components from the various *API - Input Devices* (page 105) and *API - Output Devices* (page 125) provided by GPIO Zero. See those pages for more information on using components individually.

Note: All GPIO pin numbers use Broadcom (BCM) numbering by default. See the *Pin Numbering* (page 3) section for more information.

17.1 Regular Classes

The following classes are intended for general use with the devices they are named after. All classes in this section are concrete (not abstract).

17.1.1 LEDBoard

class gpiozero.LEDBoard(*args, **kwargs)

Extends *LEDCollection* (page 186) and represents a generic LED board or collection of LEDs.

The following example turns on all the LEDs on a board containing 5 LEDs attached to GPIO pins 2 through 6:

```
from gpiozero import LEDBoard

leds = LEDBoard(2, 3, 4, 5, 6)
leds.on()
```

Parameters

- ***pins** – Specify the GPIO pins that the LEDs of the board are attached to. See *Pin Numbering* (page 3) for valid pin numbers. You can designate as many pins as necessary. You can also specify *LEDBoard* (page 157) instances to create trees of LEDs.
- **pwm** (*bool*⁵⁴⁴) – If *True*⁵⁴⁵, construct *PWMLED* (page 127) instances for each pin. If *False*⁵⁴⁶ (the default), construct regular *LED* (page 125) instances.
- **active_high** (*bool*⁵⁴⁷) – If *True*⁵⁴⁸ (the default), the *on()* (page 158) method will set all the associated pins to HIGH. If *False*⁵⁴⁹, the *on()* (page 158) method will set all pins to LOW (the *off()* (page 158) method always does the opposite).
- **initial_value** (*bool*⁵⁵⁰ or *None*) – If *False*⁵⁵¹ (the default), all LEDs will be off initially. If *None*⁵⁵², each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁵⁵³, the device will be switched on initially.

- **_order** (*list*⁵⁵⁴ or *None*) – If specified, this is the order of named items specified by keyword arguments (to ensure that the *value* tuple is constructed with a specific order). All keyword arguments *must* be included in the collection. If omitted, an alphabetically sorted order will be selected for keyword arguments.
- **pin_factory** (*Factory* (page 226) or *None*) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).
- ****named_pins** – Specify GPIO pins that LEDs of the board are attached to, associating each LED with a property name. You can designate as many pins as necessary and use any names, provided they're not already in use by something else. You can also specify [LEDBoard](#) (page 157) instances to create trees of LEDs.

blink (*on_time=1, off_time=1, fade_in_time=0, fade_out_time=0, n=None, background=True*)

Make all the LEDs turn on and off repeatedly.

Parameters

- **on_time** (*float*⁵⁵⁵) – Number of seconds on. Defaults to 1 second.
- **off_time** (*float*⁵⁵⁶) – Number of seconds off. Defaults to 1 second.
- **fade_in_time** (*float*⁵⁵⁷) – Number of seconds to spend fading in. Defaults to 0. Must be 0 if *pwm* was *False*⁵⁵⁸ when the class was constructed (*ValueError*⁵⁵⁹ will be raised if not).
- **fade_out_time** (*float*⁵⁶⁰) – Number of seconds to spend fading out. Defaults to 0. Must be 0 if *pwm* was *False*⁵⁶¹ when the class was constructed (*ValueError*⁵⁶² will be raised if not).
- **n** (*int*⁵⁶³ or *None*) – Number of times to blink; *None*⁵⁶⁴ (the default) means forever.
- **background** (*bool*⁵⁶⁵) – If *True*⁵⁶⁶, start a background thread to continue blinking and return immediately. If *False*⁵⁶⁷, only return when the blink is finished (warning: the default value of *n* will result in this method never returning).

off (**args*)

If no arguments are specified, turn all the LEDs off. If arguments are specified, they must be the indexes of the LEDs you wish to turn off. For example:

```
from gpiozero import LEDBoard

leds = LEDBoard(2, 3, 4, 5)
leds.on()          # turn on all LEDs
leds.off(0)        # turn off the first LED (pin 2)
leds.off(-1)       # turn off the last LED (pin 5)
leds.off(1, 2)     # turn off the middle LEDs (pins 3 and 4)
leds.on()          # turn on all LEDs
```

If *blink()* (page 158) is currently active, it will be stopped first.

Parameters

args (*int*⁵⁶⁸) – The index(es) of the LED(s) to turn off. If no indexes are specified turn off all LEDs.

on (**args*)

If no arguments are specified, turn all the LEDs on. If arguments are specified, they must be the indexes of the LEDs you wish to turn on. For example:

```
from gpiozero import LEDBoard

leds = LEDBoard(2, 3, 4, 5)
leds.on(0)         # turn on the first LED (pin 2)
leds.on(-1)        # turn on the last LED (pin 5)
```

(continues on next page)

(continued from previous page)

```

leds.on(1, 2) # turn on the middle LEDs (pins 3 and 4)
leds.off()    # turn off all LEDs
leds.on()     # turn on all LEDs

```

If `blink()` (page 158) is currently active, it will be stopped first.

Parameters

args (`int`⁵⁶⁹) – The index(es) of the LED(s) to turn on. If no indexes are specified turn on all LEDs.

pulse (`fade_in_time=1, fade_out_time=1, n=None, background=True`)

Make all LEDs fade in and out repeatedly. Note that this method will only work if the `pwm` parameter was `True`⁵⁷⁰ at construction time.

Parameters

- **fade_in_time** (`float`⁵⁷¹) – Number of seconds to spend fading in. Defaults to 1.
- **fade_out_time** (`float`⁵⁷²) – Number of seconds to spend fading out. Defaults to 1.
- **n** (`int`⁵⁷³ or `None`) – Number of times to blink; `None`⁵⁷⁴ (the default) means forever.
- **background** (`bool`⁵⁷⁵) – If `True`⁵⁷⁶ (the default), start a background thread to continue blinking and return immediately. If `False`⁵⁷⁷, only return when the blink is finished (warning: the default value of `n` will result in this method never returning).

toggle (`*args`)

If no arguments are specified, toggle the state of all LEDs. If arguments are specified, they must be the indexes of the LEDs you wish to toggle. For example:

```

from gpiozero import LEDBoard

leds = LEDBoard(2, 3, 4, 5)
leds.toggle(0)    # turn on the first LED (pin 2)
leds.toggle(-1)   # turn on the last LED (pin 5)
leds.toggle()     # turn the first and last LED off, and the
                  # middle pair on

```

If `blink()` (page 158) is currently active, it will be stopped first.

Parameters

args (`int`⁵⁷⁸) – The index(es) of the LED(s) to toggle. If no indexes are specified toggle the state of all LEDs.

17.1.2 LEDBarGraph

class gpiozero.LEDBarGraph(*args, **kwargs)

Extends [LEDCollection](#) (page 186) to control a line of LEDs representing a bar graph. Positive values (0 to 1) light the LEDs from first to last. Negative values (-1 to 0) light the LEDs from last to first.

The following example demonstrates turning on the first two and last two LEDs in a board containing five LEDs attached to GPIOs 2 through 6:

```
from gpiozero import LEDBarGraph
from time import sleep

graph = LEDBarGraph(2, 3, 4, 5, 6)
graph.value = 2/5 # Light the first two LEDs only
sleep(1)
graph.value = -2/5 # Light the last two LEDs only
sleep(1)
graph.off()
```

As with all other output devices, [source](#) (page 161) and [values](#) (page 161) are supported:

```
from gpiozero import LEDBarGraph, MCP3008
from signal import pause

graph = LEDBarGraph(2, 3, 4, 5, 6, pwm=True)
pot = MCP3008(channel=0)

graph.source = pot

pause()
```

544 <https://docs.python.org/3.9/library/functions.html#bool>
545 <https://docs.python.org/3.9/library/constants.html#True>
546 <https://docs.python.org/3.9/library/constants.html#False>
547 <https://docs.python.org/3.9/library/functions.html#bool>
548 <https://docs.python.org/3.9/library/constants.html#True>
549 <https://docs.python.org/3.9/library/constants.html#False>
550 <https://docs.python.org/3.9/library/functions.html#bool>
551 <https://docs.python.org/3.9/library/constants.html#False>
552 <https://docs.python.org/3.9/library/constants.html#None>
553 <https://docs.python.org/3.9/library/constants.html#True>
554 <https://docs.python.org/3.9/library/stdtypes.html#list>
555 <https://docs.python.org/3.9/library/functions.html#float>
556 <https://docs.python.org/3.9/library/functions.html#float>
557 <https://docs.python.org/3.9/library/functions.html#float>
558 <https://docs.python.org/3.9/library/constants.html#False>
559 <https://docs.python.org/3.9/library/exceptions.html#ValueError>
560 <https://docs.python.org/3.9/library/functions.html#float>
561 <https://docs.python.org/3.9/library/constants.html#False>
562 <https://docs.python.org/3.9/library/exceptions.html#ValueError>
563 <https://docs.python.org/3.9/library/functions.html#int>
564 <https://docs.python.org/3.9/library/constants.html#None>
565 <https://docs.python.org/3.9/library/functions.html#bool>
566 <https://docs.python.org/3.9/library/constants.html#True>
567 <https://docs.python.org/3.9/library/constants.html#False>
568 <https://docs.python.org/3.9/library/functions.html#int>
569 <https://docs.python.org/3.9/library/functions.html#int>
570 <https://docs.python.org/3.9/library/constants.html#True>
571 <https://docs.python.org/3.9/library/functions.html#float>
572 <https://docs.python.org/3.9/library/functions.html#float>
573 <https://docs.python.org/3.9/library/functions.html#int>
574 <https://docs.python.org/3.9/library/constants.html#None>
575 <https://docs.python.org/3.9/library/functions.html#bool>
576 <https://docs.python.org/3.9/library/constants.html#True>
577 <https://docs.python.org/3.9/library/constants.html#False>
578 <https://docs.python.org/3.9/library/functions.html#int>

Parameters

- ***pins** – Specify the GPIO pins that the LEDs of the bar graph are attached to. See [Pin Numbering](#) (page 3) for valid pin numbers. You can designate as many pins as necessary.
- **pwm** ([bool](#)⁵⁷⁹) – If [True](#)⁵⁸⁰, construct [PWMLED](#) (page 127) instances for each pin. If [False](#)⁵⁸¹ (the default), construct regular [LED](#) (page 125) instances. This parameter can only be specified as a keyword parameter.
- **active_high** ([bool](#)⁵⁸²) – If [True](#)⁵⁸³ (the default), the `on()` method will set all the associated pins to HIGH. If [False](#)⁵⁸⁴, the `on()` method will set all pins to LOW (the `off()` method always does the opposite). This parameter can only be specified as a keyword parameter.
- **initial_value** ([float](#)⁵⁸⁵) – The initial [value](#) (page 161) of the graph given as a float between -1 and +1. Defaults to 0.0. This parameter can only be specified as a keyword parameter.
- **pin_factory** ([Factory](#) (page 226) or `None`) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

property `lit_count`

The number of LEDs on the bar graph actually lit up. Note that just like [value](#) (page 161), this can be negative if the LEDs are lit from last to first.

property `source`

The iterable to use as a source of values for [value](#) (page 161).

property `value`

The value of the LED bar graph. When no LEDs are lit, the value is 0. When all LEDs are lit, the value is 1. Values between 0 and 1 light LEDs linearly from first to last. Values between 0 and -1 light LEDs linearly from last to first.

To light a particular number of LEDs, simply divide that number by the number of LEDs. For example, if your graph contains 3 LEDs, the following will light the first:

```
from gpiozero import LEDBarGraph

graph = LEDBarGraph(12, 16, 19)
graph.value = 1/3
```

Note: Setting value to -1 will light all LEDs. However, querying it subsequently will return 1 as both representations are the same in hardware. The readable range of [value](#) (page 161) is effectively $-1 < \text{value} \leq 1$.

property `values`

An infinite iterator of values read from [value](#) (page 161).

⁵⁷⁹ <https://docs.python.org/3.9/library/functions.html#bool>

⁵⁸⁰ <https://docs.python.org/3.9/library/constants.html#True>

⁵⁸¹ <https://docs.python.org/3.9/library/constants.html#False>

⁵⁸² <https://docs.python.org/3.9/library/functions.html#bool>

⁵⁸³ <https://docs.python.org/3.9/library/constants.html#True>

⁵⁸⁴ <https://docs.python.org/3.9/library/constants.html#False>


⁵⁸⁵ <https://docs.python.org/3.9/library/functions.html#float>

17.1.3 LEDCharDisplay


class gpiozero.LEDCharDisplay (*args, **kwargs)

Extends *LEDCollection* (page 186) for a multi-segment LED display.

Multi-segment LED displays⁵⁸⁶ typically have 7 pins (labelled “a” through “g”) representing 7 LEDs layed out in a figure-of-8 fashion. Frequently, an eighth pin labelled “dp” is included for a trailing decimal-point:

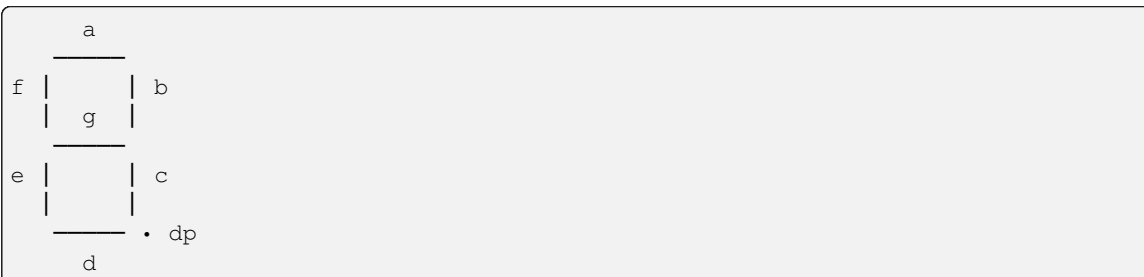

Other common layouts are 9, 14, and 16 segment displays which include additional segments permitting more accurate renditions of alphanumerics. For example:

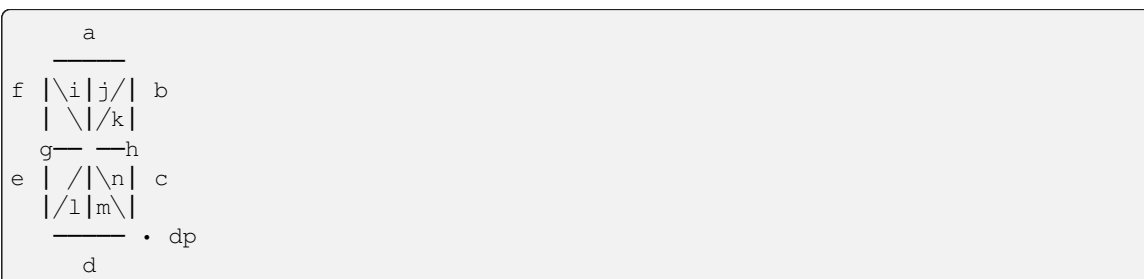

Such displays have either a common anode, or common cathode pin. This class defaults to the latter; when using a common anode display *active_high* should be set to *False*⁵⁸⁷.

Instances of this class can be used to display characters or control individual LEDs on the display. For example:

```
from gpiozero import LEDCharDisplay

char = LEDCharDisplay(4, 5, 6, 7, 8, 9, 10, active_high=False)
char.value = 'C'
```

If the class is constructed with 7 or 14 segments, a default *font* (page 163) will be loaded, mapping some ASCII characters to typical layouts. In other cases, the default mapping will simply assign “ ” (space) to all LEDs off. You can assign your own mapping at construction time or after instantiation.

While the example above shows the display with a *str*⁵⁸⁸ value, theoretically the *font* can map any value that can be the key in a *dict*⁵⁸⁹, so the value of the display can be likewise be any valid key value (e.g. you could map integer digits to LED patterns). That said, there is one exception to this: when *dp* is specified to enable the decimal-point, the *value* (page 163) must be a *str*⁵⁹⁰ as the presence or absence of a “.” suffix indicates whether the *dp* LED is lit.

Parameters

- ***pins** – Specify the GPIO pins that the multi-segment display is attached to. Pins should be in the LED segment order A, B, C, D, E, F, G, and will be named automatically by the class. If a decimal-point pin is present, specify it separately as the *dp* parameter.
- **dp** (*int*⁵⁹¹ or *str*⁵⁹²) – If a decimal-point segment is present, specify it as this named parameter.
- **font** (*dict*⁵⁹³ or *None*) – A mapping of values (typically characters, but may also be numbers) to tuples of LED states. A default mapping for ASCII characters is provided for 7 and 14 segment displays.

- **pwm** (*bool*⁵⁹⁴) – If *True*⁵⁹⁵, construct *PWMLED* (page 127) instances for each pin. If *False*⁵⁹⁶ (the default), construct regular *LED* (page 125) instances.
- **active_high** (*bool*⁵⁹⁷) – If *True*⁵⁹⁸ (the default), the *on()* method will set all the associated pins to HIGH. If *False*⁵⁹⁹, the *on()* method will set all pins to LOW (the *off()* method always does the opposite).
- **initial_value** – The initial value to display. Defaults to space (" ") which typically maps to all LEDs being inactive. If *None*⁶⁰⁰, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on).
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

property font

An *LEDCharFont* (page 165) mapping characters to tuples of LED states. The font is mutable after construction. You can assign a tuple of LED states to a character to modify the font, delete an existing character in the font, or assign a mapping of characters to tuples to replace the entire font.

Note that modifying the *font* (page 163) never alters the underlying LED states. Only assignment to *value* (page 163), or calling the inherited *LEDCollection* (page 186) methods (*on()*, *off()*, etc.) modifies LED states. However, modifying the font may alter the character returned by querying *value* (page 163).

property value

The character the display should show. This is mapped by the current *font* (page 163) to a tuple of LED states which is applied to the underlying LED objects when this attribute is set.

When queried, the current LED states are looked up in the font to determine the character shown. If the current LED states do not correspond to any character in the *font* (page 163), the value is *None*⁶⁰¹.

It is possible for multiple characters in the font to map to the same LED states (e.g. S and 5). In this case, if the font was constructed from an ordered mapping (which is the default), then the first matching mapping will always be returned. This also implies that the value queried need not match the value set.

17.1.4 LEDMultiCharDisplay

class gpiozero.LEDMultiCharDisplay (*args, **kwargs)

Wraps *LEDCharDisplay* (page 162) for multi-character multiplexed⁶⁰² LED character displays.

The class is constructed with a *char* which is an instance of the *LEDCharDisplay* (page 162) class, capable of controlling the LEDs in one character of the display, and an additional set of *pins* that represent the common cathode (or anode) of each character.

⁵⁸⁶ https://en.wikipedia.org/wiki/Seven-segment_display
⁵⁸⁷ <https://docs.python.org/3.9/library/constants.html#False>
⁵⁸⁸ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁵⁸⁹ <https://docs.python.org/3.9/library/stdtypes.html#dict>
⁵⁹⁰ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁵⁹¹ <https://docs.python.org/3.9/library/functions.html#int>
⁵⁹² <https://docs.python.org/3.9/library/stdtypes.html#str>
⁵⁹³ <https://docs.python.org/3.9/library/stdtypes.html#dict>
⁵⁹⁴ <https://docs.python.org/3.9/library/functions.html#bool>
⁵⁹⁵ <https://docs.python.org/3.9/library/constants.html#True>
⁵⁹⁶ <https://docs.python.org/3.9/library/constants.html#False>
⁵⁹⁷ <https://docs.python.org/3.9/library/functions.html#bool>
⁵⁹⁸ <https://docs.python.org/3.9/library/constants.html#True>
⁵⁹⁹ <https://docs.python.org/3.9/library/constants.html#False>
⁶⁰⁰ <https://docs.python.org/3.9/library/constants.html#None>
⁶⁰¹ <https://docs.python.org/3.9/library/constants.html#None>

Warning: You should not attempt to connect the common cathode (or anode) of each character directly to a GPIO. Rather, use a set of transistors (or some other suitable component capable of handling the current of all the segment LEDs simultaneously) to connect the common cathode to ground (or the common anode to the supply) and control those transistors from the GPIOs specified under *pins*.

The *active_high* parameter defaults to `True`⁶⁰³. Note that it only applies to the specified *pins*, which are assumed to be controlling a set of transistors (hence the default). The specified *char* will use its own *active_high* parameter. Finally, *initial_value* defaults to a tuple of *value* (page 163) attribute of the specified display multiplied by the number of *pins* provided.

When the *value* (page 164) is set such that one or more characters in the display differ in value, a background thread is implicitly started to rotate the active character, relying on *persistence of vision*⁶⁰⁴ to display the complete value.

property *plex_delay*

The delay (measured in seconds) in the loop used to switch each character in the multiplexed display on. Defaults to 0.005 seconds which is generally sufficient to provide a “stable” (non-flickery) display.

property *value*

The sequence of values to display.

This can be any sequence containing keys from the *font* (page 163) of the associated character display. For example, if the value consists only of single-character strings, it’s valid to assign a string to this property (as a string is simply a sequence of individual character keys):

```
from gpiozero import LEDCharDisplay, LEDMultiCharDisplay

c = LEDCharDisplay(4, 5, 6, 7, 8, 9, 10)
d = LEDMultiCharDisplay(c, 19, 20, 21, 22)
d.value = 'LEDS'
```

However, things get more complicated if a decimal point is in use as then this class needs to know explicitly where to break the value for use on each character of the display. This can be handled by simply assigning a sequence of strings thus:

```
from gpiozero import LEDCharDisplay, LEDMultiCharDisplay

c = LEDCharDisplay(4, 5, 6, 7, 8, 9, 10)
d = LEDMultiCharDisplay(c, 19, 20, 21, 22)
d.value = ('L.', 'E', 'D', 'S')
```

This is how the value will always be represented when queried (as a tuple of individual values) as it neatly handles dealing with heterogeneous types and the aforementioned decimal point issue.

Note: The value also controls whether a background thread is in use to multiplex the display. When all positions in the value are equal the background thread is disabled and all characters are simultaneously enabled.

⁶⁰² https://en.wikipedia.org/wiki/Multiplexed_display

⁶⁰³ <https://docs.python.org/3.9/library/constants.html#True>

⁶⁰⁴ https://en.wikipedia.org/wiki/Persistence_of_vision

17.1.5 LEDCharFont

class gpiozero.LEDCharFont(*font*)

Contains a mapping of values to tuples of LED states.

This effectively acts as a “font” for *LEDCharDisplay* (page 162), and two default fonts (for 7-segment and 14-segment displays) are shipped with GPIO Zero by default. You can construct your own font instance from a *dict*⁶⁰⁵ which maps values (usually single-character strings) to a tuple of LED states:

```
from gpiozero import LEDCharDisplay, LEDCharFont

my_font = LEDCharFont({
    ' ': (0, 0, 0, 0, 0, 0, 0),
    'D': (1, 1, 1, 1, 1, 1, 0),
    'A': (1, 1, 1, 0, 1, 1, 1),
    'd': (0, 1, 1, 1, 1, 0, 1),
    'a': (1, 1, 1, 1, 1, 0, 1),
})
display = LEDCharDisplay(26, 13, 12, 22, 17, 19, 6, dp=5, font=my_font)
display.value = 'D'
```

Font instances are mutable and can be changed while actively in use by an instance of *LEDCharDisplay* (page 162). However, changing the font will *not* change the state of the LEDs in the display (though it may change the *value* (page 163) of the display when next queried).

Note: Your custom mapping should always include a value (typically space) which represents all the LEDs off. This will usually be the default value for an instance of *LEDCharDisplay* (page 162).

You may also wish to load fonts from a friendly text-based format. A simple parser for such formats (supporting an arbitrary number of segments) is provided by *gpiozero.fonts.load_segment_font()* (page 212).

17.1.6 ButtonBoard

class gpiozero.ButtonBoard(*args, **kwargs)

Extends *CompositeDevice* (page 187) and represents a generic button board or collection of buttons. The *value* (page 166) of the button board is a tuple of all the buttons states. This can be used to control all the LEDs in a *LEDBoard* (page 157) with a *ButtonBoard* (page 165):

```
from gpiozero import LEDBoard, ButtonBoard
from signal import pause

leds = LEDBoard(2, 3, 4, 5)
btns = ButtonBoard(6, 7, 8, 9)
leds.source = btns

pause()
```

Alternatively you could represent the number of pressed buttons with an *LEDBarGraph* (page 160):

```
from gpiozero import LEDBarGraph, ButtonBoard
from statistics import mean
from signal import pause

graph = LEDBarGraph(2, 3, 4, 5)
bb = ButtonBoard(6, 7, 8, 9)
```

(continues on next page)

⁶⁰⁵ <https://docs.python.org/3.9/library/stdtypes.html#dict>

(continued from previous page)

```
graph.source = (mean(values) for values in bb.values)

pause()
```

Parameters

- ***pins** – Specify the GPIO pins that the buttons of the board are attached to. See [Pin Numbering](#) (page 3) for valid pin numbers. You can designate as many pins as necessary.
- **pull_up** (*bool*⁶⁰⁶ or *None*) – If *True*⁶⁰⁷ (the default), the GPIO pins will be pulled high by default. In this case, connect the other side of the buttons to ground. If *False*⁶⁰⁸, the GPIO pins will be pulled low by default. In this case, connect the other side of the buttons to 3V3. If *None*⁶⁰⁹, the pin will be floating, so it must be externally pulled up or down and the *active_state* parameter must be set accordingly.
- **active_state** (*bool*⁶¹⁰ or *None*) – See description under [InputDevice](#) (page 121) for more information.
- **bounce_time** (*float*⁶¹¹) – If *None*⁶¹² (the default), no software bounce compensation will be performed. Otherwise, this is the length of time (in seconds) that the buttons will ignore changes in state after an initial change.
- **hold_time** (*float*⁶¹³) – The length of time (in seconds) to wait after any button is pushed, until executing the *when_held* handler. Defaults to 1.
- **hold_repeat** (*bool*⁶¹⁴) – If *True*⁶¹⁵, the *when_held* handler will be repeatedly executed as long as any buttons remain held, every *hold_time* seconds. If *False*⁶¹⁶ (the default) the *when_held* handler will only be executed once per hold.
- **pin_factory** ([Factory](#) (page 226) or *None*) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).
- ****named_pins** – Specify GPIO pins that buttons of the board are attached to, associating each button with a property name. You can designate as many pins as necessary and use any names, provided they’re not already in use by something else.

wait_for_press (*timeout=None*)

Pause the script until the device is activated, or the timeout is reached.

Parameters

timeout (*float*⁶¹⁷ or *None*) – Number of seconds to wait before proceeding. If this is *None*⁶¹⁸ (the default), then wait indefinitely until the device is active.

wait_for_release (*timeout=None*)

Pause the script until the device is deactivated, or the timeout is reached.

Parameters

timeout (*float*⁶¹⁹ or *None*) – Number of seconds to wait before proceeding. If this is *None*⁶²⁰ (the default), then wait indefinitely until the device is inactive.

property is_pressed

Composite devices are considered “active” if any of their constituent devices have a “truthy” value.

property pressed_time

The length of time (in seconds) that the device has been active for. When the device is inactive, this is *None*⁶²¹.

property value

A *namedtuple*()⁶²² containing a value for each subordinate device. Devices with names will be represented as named elements. Unnamed devices will have a unique name generated for them, and they will appear in the position they appeared in the constructor.

when_pressed

The function to run when the device changes state from inactive to active.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None`⁶²³ (the default) to disable the event.

when_released

The function to run when the device changes state from active to inactive.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that deactivated it will be passed as that parameter.

Set this property to `None`⁶²⁴ (the default) to disable the event.

17.1.7 TrafficLights

class gpiozero.TrafficLights (*args, **kwargs)

Extends `LEDBoard` (page 157) for devices containing red, yellow, and green LEDs.

The following example initializes a device connected to GPIO pins 2, 3, and 4, then lights the amber (yellow) LED attached to GPIO 3:

```
from gpiozero import TrafficLights

traffic = TrafficLights(2, 3, 4)
traffic.amber.on()
```

Parameters

- **red** (`int`⁶²⁵ or `str`⁶²⁶) – The GPIO pin that the red LED is attached to. See *Pin Numbering* (page 3) for valid pin numbers.
- **amber** (`int`⁶²⁷ or `str`⁶²⁸ or `None`) – The GPIO pin that the amber LED is attached to. See *Pin Numbering* (page 3) for valid pin numbers.
- **yellow** (`int`⁶²⁹ or `str`⁶³⁰ or `None`) – The GPIO pin that the yellow LED is attached to. This is merely an alias for the `amber` parameter; you can't specify both `amber` and `yellow`. See *Pin Numbering* (page 3) for valid pin numbers.
- **green** (`int`⁶³¹ or `str`⁶³²) – The GPIO pin that the green LED is attached to. See *Pin Numbering* (page 3) for valid pin numbers.

⁶⁰⁶ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁰⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁶⁰⁸ <https://docs.python.org/3.9/library/constants.html#False>

⁶⁰⁹ <https://docs.python.org/3.9/library/constants.html#None>

⁶¹⁰ <https://docs.python.org/3.9/library/functions.html#bool>

⁶¹¹ <https://docs.python.org/3.9/library/functions.html#float>

⁶¹² <https://docs.python.org/3.9/library/constants.html#None>

⁶¹³ <https://docs.python.org/3.9/library/functions.html#float>

⁶¹⁴ <https://docs.python.org/3.9/library/functions.html#bool>

⁶¹⁵ <https://docs.python.org/3.9/library/constants.html#True>

⁶¹⁶ <https://docs.python.org/3.9/library/constants.html#False>

⁶¹⁷ <https://docs.python.org/3.9/library/functions.html#float>

⁶¹⁸ <https://docs.python.org/3.9/library/constants.html#None>

⁶¹⁹ <https://docs.python.org/3.9/library/functions.html#float>

⁶²⁰ <https://docs.python.org/3.9/library/constants.html#None>

⁶²¹ <https://docs.python.org/3.9/library/constants.html#None>

⁶²² <https://docs.python.org/3.9/library/collections.html#collections.namedtuple>

⁶²³ <https://docs.python.org/3.9/library/constants.html#None>

⁶²⁴ <https://docs.python.org/3.9/library/constants.html#None>

- **pwm** (*bool*⁶³³) – If *True*⁶³⁴, construct *PWMLED* (page 127) instances to represent each LED. If *False*⁶³⁵ (the default), construct regular *LED* (page 125) instances.
- **initial_value** (*bool*⁶³⁶ or *None*) – If *False*⁶³⁷ (the default), all LEDs will be off initially. If *None*⁶³⁸, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁶³⁹, the device will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

red

The red *LED* (page 125) or *PWMLED* (page 127).

amber

The amber *LED* (page 125) or *PWMLED* (page 127). Note that this attribute will not be present when the instance is constructed with the *yellow* keyword parameter.

yellow

The yellow *LED* (page 125) or *PWMLED* (page 127). Note that this attribute will only be present when the instance is constructed with the *yellow* keyword parameter.

green

The green *LED* (page 125) or *PWMLED* (page 127).

17.1.8 TrafficLightsBuzzer

class gpiozero.**TrafficLightsBuzzer** (*args, **kwargs)

Extends *CompositeOutputDevice* (page 186) and is a generic class for HATs with traffic lights, a button and a buzzer.

Parameters

- **lights** (*TrafficLights* (page 167)) – An instance of *TrafficLights* (page 167) representing the traffic lights of the HAT.
- **buzzer** (*Buzzer* (page 131)) – An instance of *Buzzer* (page 131) representing the buzzer on the HAT.
- **button** (*Button* (page 105)) – An instance of *Button* (page 105) representing the button on the HAT.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

lights

The *TrafficLights* (page 167) instance passed as the *lights* parameter.

⁶²⁵ <https://docs.python.org/3.9/library/functions.html#int>
⁶²⁶ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁶²⁷ <https://docs.python.org/3.9/library/functions.html#int>
⁶²⁸ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁶²⁹ <https://docs.python.org/3.9/library/functions.html#int>
⁶³⁰ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁶³¹ <https://docs.python.org/3.9/library/functions.html#int>
⁶³² <https://docs.python.org/3.9/library/stdtypes.html#str>
⁶³³ <https://docs.python.org/3.9/library/functions.html#bool>
⁶³⁴ <https://docs.python.org/3.9/library/constants.html#True>
⁶³⁵ <https://docs.python.org/3.9/library/constants.html#False>
⁶³⁶ <https://docs.python.org/3.9/library/functions.html#bool>
⁶³⁷ <https://docs.python.org/3.9/library/constants.html#False>
⁶³⁸ <https://docs.python.org/3.9/library/constants.html#None>
⁶³⁹ <https://docs.python.org/3.9/library/constants.html#True>

buzzer

The *Buzzer* (page 131) instance passed as the *buzzer* parameter.

button

The *Button* (page 105) instance passed as the *button* parameter.

17.1.9 PiHutXmasTree

class gpiozero.PiHutXmasTree (*args, **kwargs)

Extends *LEDBoard* (page 157) for [The Pi Hut's Xmas board](#)⁶⁴⁰: a 3D Christmas tree board with 24 red LEDs and a white LED as a star on top.

The 24 red LEDs can be accessed through the attributes *led0*, *led1*, *led2*, and so on. The white star LED is accessed through the *star* (page 169) attribute. Alternatively, as with all descendents of *LEDBoard* (page 157), you can treat the instance as a sequence of LEDs (the first element is the *star* (page 169)).

The Xmas Tree board pins are fixed and therefore there's no need to specify them when constructing this class. The following example turns all the LEDs on one at a time:

```
from gpiozero import PiHutXmasTree
from time import sleep

tree = PiHutXmasTree()

for light in tree:
    light.on()
    sleep(1)
```

The following example turns the star LED on and sets all the red LEDs to flicker randomly:

```
from gpiozero import PiHutXmasTree
from gpiozero.tools import random_values
from signal import pause

tree = PiHutXmasTree(pwm=True)

tree.star.on()

for led in tree[1:]:
    led.source_delay = 0.1
    led.source = random_values()

pause()
```

Parameters

- **pwm** (*bool*⁶⁴¹) – If *True*⁶⁴², construct *PWMLED* (page 127) instances for each pin. If *False*⁶⁴³ (the default), construct regular *LED* (page 125) instances.
- **initial_value** (*bool*⁶⁴⁴ or *None*) – If *False*⁶⁴⁵ (the default), all LEDs will be off initially. If *None*⁶⁴⁶, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁶⁴⁷, the device will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

star

Returns the *LED* (page 125) or *PWMLED* (page 127) representing the white star on top of the tree.

`led0, led1, led2, ...`

Returns the [LED](#) (page 125) or [PWMLLED](#) (page 127) representing one of the red LEDs. There are actually 24 of these properties named `led0`, `led1`, and so on but for the sake of brevity we represent all 24 under this section.

17.1.10 LedBorg

class `gpiozero.LedBorg` (*args, **kwargs)

Extends [RGBLED](#) (page 128) for the [PiBorg LedBorg](#)⁶⁴⁸: an add-on board containing a very bright RGB LED.

The LedBorg pins are fixed and therefore there's no need to specify them when constructing this class. The following example turns the LedBorg purple:

```
from gpiozero import LedBorg

led = LedBorg()
led.color = (1, 0, 1)
```

Parameters

- **initial_value** ([Color](#)⁶⁴⁹ or [tuple](#)⁶⁵⁰) – The initial color for the LedBorg. Defaults to black (0, 0, 0).
- **pwm** ([bool](#)⁶⁵¹) – If [True](#)⁶⁵² (the default), construct [PWMLLED](#) (page 127) instances for each component of the LedBorg. If [False](#)⁶⁵³, construct regular [LED](#) (page 125) instances, which prevents smooth color graduations.
- **pin_factory** ([Factory](#) (page 226) or [None](#)) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

17.1.11 PiLiter

class `gpiozero.PiLiter` (*args, **kwargs)

Extends [LEDBoard](#) (page 157) for the [Ciseco Pi-LITER](#)⁶⁵⁴: a strip of 8 very bright LEDs.

The Pi-LITER pins are fixed and therefore there's no need to specify them when constructing this class. The following example turns on all the LEDs of the Pi-LITER:

```
from gpiozero import PiLiter

lite = PiLiter()
lite.on()
```

Parameters

⁶⁴⁰ <https://thepihut.com/xmas>
⁶⁴¹ <https://docs.python.org/3.9/library/functions.html#bool>
⁶⁴² <https://docs.python.org/3.9/library/constants.html#True>
⁶⁴³ <https://docs.python.org/3.9/library/constants.html#False>
⁶⁴⁴ <https://docs.python.org/3.9/library/functions.html#bool>
⁶⁴⁵ <https://docs.python.org/3.9/library/constants.html#False>
⁶⁴⁶ <https://docs.python.org/3.9/library/constants.html#None>
⁶⁴⁷ <https://docs.python.org/3.9/library/constants.html#True>
⁶⁴⁸ <https://www.piborg.org/ledborg>
⁶⁴⁹ https://colorzero.readthedocs.io/en/latest/api_color.html#colorzero.Color
⁶⁵⁰ <https://docs.python.org/3.9/library/stdtypes.html#tuple>
⁶⁵¹ <https://docs.python.org/3.9/library/functions.html#bool>
⁶⁵² <https://docs.python.org/3.9/library/constants.html#True>
⁶⁵³ <https://docs.python.org/3.9/library/constants.html#False>

- **pwm** (*bool*⁶⁵⁵) – If *True*⁶⁵⁶, construct *PWMLED* (page 127) instances for each pin. If *False*⁶⁵⁷ (the default), construct regular *LED* (page 125) instances.
- **initial_value** (*bool*⁶⁵⁸ or *None*) – If *False*⁶⁵⁹ (the default), all LEDs will be off initially. If *None*⁶⁶⁰, each LED will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁶⁶¹, the each LED will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

17.1.12 PiLiterBarGraph

class gpiozero.**PiLiterBarGraph** (*args, **kwargs)

Extends *LEDBarGraph* (page 160) to treat the *Ciseco Pi-LITEr*⁶⁶² as an 8-segment bar graph.

The Pi-LITEr pins are fixed and therefore there's no need to specify them when constructing this class. The following example sets the graph value to 0.5:

```
from gpiozero import PiLiterBarGraph

graph = PiLiterBarGraph()
graph.value = 0.5
```

Parameters

- **pwm** (*bool*⁶⁶³) – If *True*⁶⁶⁴, construct *PWMLED* (page 127) instances for each pin. If *False*⁶⁶⁵ (the default), construct regular *LED* (page 125) instances.
- **initial_value** (*float*⁶⁶⁶) – The initial value of the graph given as a float between -1 and +1. Defaults to 0.0.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

17.1.13 PiTraffic

class gpiozero.**PiTraffic** (*args, **kwargs)

Extends *TrafficLights* (page 167) for the *Low Voltage Labs PI-TRAFFIC*⁶⁶⁷ vertical traffic lights board when attached to GPIO pins 9, 10, and 11.

There's no need to specify the pins if the PI-TRAFFIC is connected to the default pins (9, 10, 11). The following example turns on the amber LED on the PI-TRAFFIC:

⁶⁵⁴ <http://shop.ciseco.co.uk/pi-liter-8-led-strip-for-the-raspberry-pi/>
⁶⁵⁵ <https://docs.python.org/3.9/library/functions.html#bool>
⁶⁵⁶ <https://docs.python.org/3.9/library/constants.html#True>
⁶⁵⁷ <https://docs.python.org/3.9/library/constants.html#False>
⁶⁵⁸ <https://docs.python.org/3.9/library/functions.html#bool>
⁶⁵⁹ <https://docs.python.org/3.9/library/constants.html#False>
⁶⁶⁰ <https://docs.python.org/3.9/library/constants.html#None>
⁶⁶¹ <https://docs.python.org/3.9/library/constants.html#True>
⁶⁶² <http://shop.ciseco.co.uk/pi-liter-8-led-strip-for-the-raspberry-pi/>
⁶⁶³ <https://docs.python.org/3.9/library/functions.html#bool>
⁶⁶⁴ <https://docs.python.org/3.9/library/constants.html#True>
⁶⁶⁵ <https://docs.python.org/3.9/library/constants.html#False>
⁶⁶⁶ <https://docs.python.org/3.9/library/functions.html#float>

```
from gpiozero import PiTraffic

traffic = PiTraffic()
traffic.amber.on()
```

To use the PI-TRAFFIC board when attached to a non-standard set of pins, simply use the parent class, *TrafficLights* (page 167).

Parameters

- **pwm** (*bool*⁶⁶⁸) – If *True*⁶⁶⁹, construct *PWMLED* (page 127) instances to represent each LED. If *False*⁶⁷⁰ (the default), construct regular *LED* (page 125) instances.
- **initial_value** (*bool*⁶⁷¹) – If *False*⁶⁷² (the default), all LEDs will be off initially. If *None*⁶⁷³, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁶⁷⁴, the device will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

17.1.14 PiStop

class gpiozero.PiStop (*args, **kwargs)

Extends *TrafficLights* (page 167) for the *PiHardware Pi-Stop*⁶⁷⁵: a vertical traffic lights board.

The following example turns on the amber LED on a Pi-Stop connected to location A+:

```
from gpiozero import PiStop

traffic = PiStop('A+')
traffic.amber.on()
```

Parameters

- **location** (*str*⁶⁷⁶) – The *location*⁶⁷⁷ on the GPIO header to which the Pi-Stop is connected. Must be one of: A, A+, B, B+, C, D.
- **pwm** (*bool*⁶⁷⁸) – If *True*⁶⁷⁹, construct *PWMLED* (page 127) instances to represent each LED. If *False*⁶⁸⁰ (the default), construct regular *LED* (page 125) instances.
- **initial_value** (*bool*⁶⁸¹) – If *False*⁶⁸² (the default), all LEDs will be off initially. If *None*⁶⁸³, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁶⁸⁴, the device will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

⁶⁶⁷ <http://lowvoltage-labs.com/products/pi-traffic/>

⁶⁶⁸ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁶⁹ <https://docs.python.org/3.9/library/constants.html#True>

⁶⁷⁰ <https://docs.python.org/3.9/library/constants.html#False>

⁶⁷¹ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁷² <https://docs.python.org/3.9/library/constants.html#False>

⁶⁷³ <https://docs.python.org/3.9/library/constants.html#None>

⁶⁷⁴ <https://docs.python.org/3.9/library/constants.html#True>

17.1.15 FishDish

class gpiozero.FishDish (*args, **kwargs)

Extends *CompositeOutputDevice* (page 186) for the *Pi Supply FishDish*⁶⁸⁵: traffic light LEDs, a button and a buzzer.

The FishDish pins are fixed and therefore there's no need to specify them when constructing this class. The following example waits for the button to be pressed on the FishDish, then turns on all the LEDs:

```
from gpiozero import FishDish

fish = FishDish()
fish.button.wait_for_press()
fish.lights.on()
```

Parameters

- **pwm** (*bool*⁶⁸⁶) – If *True*⁶⁸⁷, construct *PWMLED* (page 127) instances to represent each LED. If *False*⁶⁸⁸ (the default), construct regular *LED* (page 125) instances.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

17.1.16 TrafficHat

class gpiozero.TrafficHat (*args, **kwargs)

Extends *CompositeOutputDevice* (page 186) for the *Pi Supply Traffic HAT*⁶⁸⁹: a board with traffic light LEDs, a button and a buzzer.

The Traffic HAT pins are fixed and therefore there's no need to specify them when constructing this class. The following example waits for the button to be pressed on the Traffic HAT, then turns on all the LEDs:

```
from gpiozero import TrafficHat

hat = TrafficHat()
hat.button.wait_for_press()
hat.lights.on()
```

Parameters

- **pwm** (*bool*⁶⁹⁰) – If *True*⁶⁹¹, construct *PWMLED* (page 127) instances to represent each LED. If *False*⁶⁹² (the default), construct regular *LED* (page 125) instances.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

⁶⁷⁵ <https://pihw.wordpress.com/meltwaters-pi-hardware-kits/pi-stop/>

⁶⁷⁶ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁶⁷⁷ https://github.com/PiHw/Pi-Stop/blob/master/markdown_source/markdown/Discover-PiStop.md

⁶⁷⁸ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁷⁹ <https://docs.python.org/3.9/library/constants.html#True>

⁶⁸⁰ <https://docs.python.org/3.9/library/constants.html#False>

⁶⁸¹ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁸² <https://docs.python.org/3.9/library/constants.html#False>

⁶⁸³ <https://docs.python.org/3.9/library/constants.html#None>

⁶⁸⁴ <https://docs.python.org/3.9/library/constants.html#True>

⁶⁸⁵ <https://www.pi-supply.com/product/fish-dish-raspberry-pi-led-buzzer-board/>

⁶⁸⁶ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁸⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁶⁸⁸ <https://docs.python.org/3.9/library/constants.html#False>

17.1.17 TrafficpHat

class gpiozero.TrafficpHat (*args, **kwargs)

Extends *TrafficLights* (page 167) for the Pi Supply Traffic pHAT⁶⁹³: a small board with traffic light LEDs.

The Traffic pHAT pins are fixed and therefore there's no need to specify them when constructing this class. The following example then turns on all the LEDs:

```
from gpiozero import TrafficpHat
phat = TrafficpHat()
phat.red.on()
phat.blink()
```

Parameters

- **pwm** (*bool*⁶⁹⁴) – If *True*⁶⁹⁵, construct *PWMLED* (page 127) instances to represent each LED. If *False*⁶⁹⁶ (the default), construct regular *LED* (page 125) instances.
- **initial_value** (*bool*⁶⁹⁷ or *None*) – If *False*⁶⁹⁸ (the default), all LEDs will be off initially. If *None*⁶⁹⁹, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁷⁰⁰, the device will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

17.1.18 JamHat

class gpiozero.JamHat (*args, **kwargs)

Extends *CompositeOutputDevice* (page 186) for the ModMyPi JamHat⁷⁰¹ board.

There are 6 LEDs, two buttons and a tonal buzzer. The pins are fixed. Usage:

```
from gpiozero import JamHat

hat = JamHat()

hat.button_1.wait_for_press()
hat.lights_1.on()
hat.buzzer.play('C4')
hat.button_2.wait_for_press()
hat.off()
```

Parameters

- **pwm** (*bool*⁷⁰²) – If *True*⁷⁰³, construct *PWMLED* (page 127) instances to represent each LED on the board. If *False*⁷⁰⁴ (the default), construct regular *LED* (page 125) instances.

⁶⁸⁹ <https://uk.pi-supply.com/products/traffic-hat-for-raspberry-pi>

⁶⁹⁰ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁹¹ <https://docs.python.org/3.9/library/constants.html#True>

⁶⁹² <https://docs.python.org/3.9/library/constants.html#False>

⁶⁹³ <http://pisupp.ly/trafficphat>

⁶⁹⁴ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁹⁵ <https://docs.python.org/3.9/library/constants.html#True>

⁶⁹⁶ <https://docs.python.org/3.9/library/constants.html#False>

⁶⁹⁷ <https://docs.python.org/3.9/library/functions.html#bool>

⁶⁹⁸ <https://docs.python.org/3.9/library/constants.html#False>

⁶⁹⁹ <https://docs.python.org/3.9/library/constants.html#None>

⁷⁰⁰ <https://docs.python.org/3.9/library/constants.html#True>

- **pin_factory** ([Factory](#) (page 226) or *None*) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

lights_1, lights_2

Two [LEDBoard](#) (page 157) instances representing the top (`lights_1`) and bottom (`lights_2`) rows of LEDs on the JamHat.

red, yellow, green

[LED](#) (page 125) or [PWMLLED](#) (page 127) instances representing the red, yellow, and green LEDs along the top row.

button_1, button_2

The left (`button_1`) and right (`button_2`) [Button](#) (page 105) objects on the JamHat.

buzzer

The [TonalBuzzer](#) (page 133) at the bottom right of the JamHat.

off()

Turns all the LEDs off and stops the buzzer.

on()

Turns all the LEDs on and makes the buzzer play its mid tone.

17.1.19 Pibrella

class `gpiozero.Pibrella` (*args, **kwargs)

Extends [CompositeOutputDevice](#) (page 186) for the Cyntech/Pimoroni [Pibrella](#)⁷⁰⁵ board.

The Pibrella board comprises 3 LEDs, a button, a tonal buzzer, four general purpose input channels, and four general purpose output channels (with LEDs).

This class exposes the LEDs, button and buzzer.

Usage:

```
from gpiozero import Pibrella

pb = Pibrella()

pb.button.wait_for_press()
pb.lights.on()
pb.buzzer.play('A4')
pb.off()
```

The four input and output channels are exposed so you can create GPIO Zero devices using these pins without looking up their respective pin numbers:

```
from gpiozero import Pibrella, LED, Button

pb = Pibrella()
btn = Button(pb.inputs.a, pull_up=False)
led = LED(pb.outputs.e)

btn.when_pressed = led.on
```

Parameters

⁷⁰¹ <https://thepihut.com/products/jam-hat>

⁷⁰² <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁰³ <https://docs.python.org/3.9/library/constants.html#True>

⁷⁰⁴ <https://docs.python.org/3.9/library/constants.html#False>

- **pwm** (*bool*⁷⁰⁶) – If *True*⁷⁰⁷, construct *PWMLED* (page 127) instances to represent each LED on the board, otherwise if *False*⁷⁰⁸ (the default), construct regular *LED* (page 125) instances.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

lights

TrafficLights (page 167) instance representing the three LEDs

red, amber, green

LED (page 125) or *PWMLED* (page 127) instances representing the red, amber, and green LEDs

button

The red *Button* (page 105) object on the Pibrella

buzzer

A *TonalBuzzer* (page 133) object representing the buzzer

inputs

A *namedtuple* ()⁷⁰⁹ of the input pin numbers

a, b, c, d

outputs

A *namedtuple* ()⁷¹⁰ of the output pin numbers

e, f, g, h

off()

Turns all the LEDs off and stops the buzzer.

on()

Turns all the LEDs on and makes the buzzer play its mid tone.

17.1.20 Robot

class gpiozero.**Robot** (*args, **kwargs)

Extends *CompositeDevice* (page 187) to represent a generic dual-motor robot.

This class is constructed with two motor instances representing the left and right wheels of the robot respectively. For example, if the left motor's controller is connected to GPIOs 4 and 14, while the right motor's controller is connected to GPIOs 17 and 18 then the following example will drive the robot forward:

```
from gpiozero import Robot

robot = Robot(left=Motor(4, 14), right=Motor(17, 18))
robot.forward()
```

Parameters

- **left** (*Motor* (page 134) or *PhaseEnableMotor* (page 136)) – A *Motor* (page 134) or a *PhaseEnableMotor* (page 136) for the left wheel of the robot.
- **right** (*Motor* (page 134) or *PhaseEnableMotor* (page 136)) – A *Motor* (page 134) or a *PhaseEnableMotor* (page 136) for the right wheel of the robot.

⁷⁰⁵ <http://www.pibrella.com/>

⁷⁰⁶ <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁰⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁷⁰⁸ <https://docs.python.org/3.9/library/constants.html#False>

⁷⁰⁹ <https://docs.python.org/3.9/library/collections.html#collections.namedtuple>

⁷¹⁰ <https://docs.python.org/3.9/library/collections.html#collections.namedtuple>

- **pin_factory** ([Factory](#) (page 226) or *None*) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

left_motor

The [Motor](#) (page 134) on the left of the robot.

right_motor

The [Motor](#) (page 134) on the right of the robot.

backward (*speed=1, *, curve_left=0, curve_right=0*)

Drive the robot backward by running both motors backward.

Parameters

- **speed** ([float](#)⁷¹¹) – Speed at which to drive the motors, as a value between 0 (stopped) and 1 (full speed). The default is 1.
- **curve_left** ([float](#)⁷¹²) – The amount to curve left while moving backwards, by driving the left motor at a slower speed. Maximum *curve_left* is 1, the default is 0 (no curve). This parameter can only be specified as a keyword parameter, and is mutually exclusive with *curve_right*.
- **curve_right** ([float](#)⁷¹³) – The amount to curve right while moving backwards, by driving the right motor at a slower speed. Maximum *curve_right* is 1, the default is 0 (no curve). This parameter can only be specified as a keyword parameter, and is mutually exclusive with *curve_left*.

forward (*speed=1, *, curve_left=0, curve_right=0*)

Drive the robot forward by running both motors forward.

Parameters

- **speed** ([float](#)⁷¹⁴) – Speed at which to drive the motors, as a value between 0 (stopped) and 1 (full speed). The default is 1.
- **curve_left** ([float](#)⁷¹⁵) – The amount to curve left while moving forwards, by driving the left motor at a slower speed. Maximum *curve_left* is 1, the default is 0 (no curve). This parameter can only be specified as a keyword parameter, and is mutually exclusive with *curve_right*.
- **curve_right** ([float](#)⁷¹⁶) – The amount to curve right while moving forwards, by driving the right motor at a slower speed. Maximum *curve_right* is 1, the default is 0 (no curve). This parameter can only be specified as a keyword parameter, and is mutually exclusive with *curve_left*.

left (*speed=1*)

Make the robot turn left by running the right motor forward and left motor backward.

Parameters

- **speed** ([float](#)⁷¹⁷) – Speed at which to drive the motors, as a value between 0 (stopped) and 1 (full speed). The default is 1.

reverse ()

Reverse the robot's current motor directions. If the robot is currently running full speed forward, it will run full speed backward. If the robot is turning left at half-speed, it will turn right at half-speed. If the robot is currently stopped it will remain stopped.

right (*speed=1*)

Make the robot turn right by running the left motor forward and right motor backward.

Parameters

- **speed** ([float](#)⁷¹⁸) – Speed at which to drive the motors, as a value between 0 (stopped) and 1 (full speed). The default is 1.

stop()

Stop the robot.

property value

Represents the motion of the robot as a tuple of (left_motor_speed, right_motor_speed) with (-1, -1) representing full speed backwards, (1, 1) representing full speed forwards, and (0, 0) representing stopped.

17.1.21 PhaseEnableRobot

class gpiozero.PhaseEnableRobot (left=None, right=None, pwm=True, pin_factory=None, *args)

Deprecated alias of *Robot* (page 176). The *Robot* (page 176) class can now be constructed directly with *Motor* (page 134) or *PhaseEnableMotor* (page 136) classes.

17.1.22 RyanteckRobot

class gpiozero.RyanteckRobot (*args, **kwargs)

Extends *Robot* (page 176) for the *Ryanteck motor controller board*⁷¹⁹.

The Ryanteck MCB pins are fixed and therefore there's no need to specify them when constructing this class. The following example drives the robot forward:

```
from gpiozero import RyanteckRobot

robot = RyanteckRobot()
robot.forward()
```

Parameters

- **pwm** (*bool*⁷²⁰) – If *True*⁷²¹ (the default), construct *PWMOutputDevice* (page 142) instances for the motor controller pins, allowing both direction and variable speed control. If *False*⁷²², construct *DigitalOutputDevice* (page 141) instances, allowing only direction control.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

⁷¹¹ <https://docs.python.org/3.9/library/functions.html#float>

⁷¹² <https://docs.python.org/3.9/library/functions.html#float>

⁷¹³ <https://docs.python.org/3.9/library/functions.html#float>

⁷¹⁴ <https://docs.python.org/3.9/library/functions.html#float>

⁷¹⁵ <https://docs.python.org/3.9/library/functions.html#float>

⁷¹⁶ <https://docs.python.org/3.9/library/functions.html#float>

⁷¹⁷ <https://docs.python.org/3.9/library/functions.html#float>

⁷¹⁸ <https://docs.python.org/3.9/library/functions.html#float>

⁷¹⁹ <https://uk.pi-supply.com/products/ryanteck-rtk-000-001-motor-controller-board-kit-raspberry-pi>

⁷²⁰ <https://docs.python.org/3.9/library/functions.html#bool>

⁷²¹ <https://docs.python.org/3.9/library/constants.html#True>

⁷²² <https://docs.python.org/3.9/library/constants.html#False>

17.1.23 CamJamKitRobot

class gpiozero.CamJamKitRobot (*args, **kwargs)

Extends *Robot* (page 176) for the *CamJam #3 EduKit*⁷²³ motor controller board.

The CamJam robot controller pins are fixed and therefore there's no need to specify them when constructing this class. The following example drives the robot forward:

```
from gpiozero import CamJamKitRobot

robot = CamJamKitRobot()
robot.forward()
```

Parameters

- **pwm** (*bool*⁷²⁴) – If *True*⁷²⁵ (the default), construct *PWMOutputDevice* (page 142) instances for the motor controller pins, allowing both direction and variable speed control. If *False*⁷²⁶, construct *DigitalOutputDevice* (page 141) instances, allowing only direction control.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

17.1.24 PololuDRV8835Robot

class gpiozero.PololuDRV8835Robot (*args, **kwargs)

Extends *Robot* (page 176) for the *Pololu DRV8835 Dual Motor Driver Kit*⁷²⁷.

The Pololu DRV8835 pins are fixed and therefore there's no need to specify them when constructing this class. The following example drives the robot forward:

```
from gpiozero import PololuDRV8835Robot

robot = PololuDRV8835Robot()
robot.forward()
```

Parameters

- **pwm** (*bool*⁷²⁸) – If *True*⁷²⁹ (the default), construct *PWMOutputDevice* (page 142) instances for the motor controller's enable pins, allowing both direction and variable speed control. If *False*⁷³⁰, construct *DigitalOutputDevice* (page 141) instances, allowing only direction control.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

⁷²³ http://camjam.me/?page_id=1035

⁷²⁴ <https://docs.python.org/3.9/library/functions.html#bool>

⁷²⁵ <https://docs.python.org/3.9/library/constants.html#True>

⁷²⁶ <https://docs.python.org/3.9/library/constants.html#False>

⁷²⁷ <https://www.pololu.com/product/2753>

⁷²⁸ <https://docs.python.org/3.9/library/functions.html#bool>

⁷²⁹ <https://docs.python.org/3.9/library/constants.html#True>

⁷³⁰ <https://docs.python.org/3.9/library/constants.html#False>

17.1.25 Energenie

class gpiozero.Energenie (*args, **kwargs)

Extends *Device* (page 199) to represent an *Energenie socket*⁷³¹ controller.

This class is constructed with a socket number and an optional initial state (defaults to *False*⁷³², meaning off). Instances of this class can be used to switch peripherals on and off. For example:

```
from gpiozero import Energenie

lamp = Energenie(1)
lamp.on()
```

Parameters

- **socket** (*int*⁷³³) – Which socket this instance should control. This is an integer number between 1 and 4.
- **initial_value** (*bool*⁷³⁴ or *None*) – The initial state of the socket. As Energenie sockets provide no means of reading their state, you may provide an initial state for the socket, which will be set upon construction. This defaults to *False*⁷³⁵ which will switch the socket off. Specifying *None*⁷³⁶ will not set any initial state nor transmit any control signal to the device.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

off()

Turns the socket off.

on()

Turns the socket on.

property socket

Returns the socket number.

property value

Returns *True*⁷³⁷ if the socket is on and *False*⁷³⁸ if the socket is off. Setting this property changes the state of the socket. Returns *None*⁷³⁹ only when constructed with *initial_value* set to *None*⁷⁴⁰ and neither *on()* (page 180) nor *off()* (page 180) have been called since construction.

⁷³¹ <https://energenie4u.co.uk/index.php/catalogue/product/ENER002-2PI>

⁷³² <https://docs.python.org/3.9/library/constants.html#False>

⁷³³ <https://docs.python.org/3.9/library/functions.html#int>

⁷³⁴ <https://docs.python.org/3.9/library/functions.html#bool>

⁷³⁵ <https://docs.python.org/3.9/library/constants.html#False>

⁷³⁶ <https://docs.python.org/3.9/library/constants.html#None>

⁷³⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁷³⁸ <https://docs.python.org/3.9/library/constants.html#False>

⁷³⁹ <https://docs.python.org/3.9/library/constants.html#None>

⁷⁴⁰ <https://docs.python.org/3.9/library/constants.html#None>

17.1.26 StatusZero

class gpiozero.StatusZero (*args, **kwargs)

Extends [LEDBoard](#) (page 157) for The Pi Hut's [STATUS Zero](#)⁷⁴¹: a Pi Zero sized add-on board with three sets of red/green LEDs to provide a status indicator.

The following example designates the first strip the label “wifi” and the second “raining”, and turns them green and red respectfully:

```
from gpiozero import StatusZero

status = StatusZero('wifi', 'raining')
status.wifi.green.on()
status.raining.red.on()
```

Each designated label will contain two [LED](#) (page 125) objects named “red” and “green”.

Parameters

- ***labels** ([str](#)⁷⁴²) – Specify the names of the labels you wish to designate the strips to. You can list up to three labels. If no labels are given, three strips will be initialised with names ‘one’, ‘two’, and ‘three’. If some, but not all strips are given labels, any remaining strips will not be initialised.
- **pwm** ([bool](#)⁷⁴³) – If [True](#)⁷⁴⁴, construct [PWMLED](#) (page 127) instances to represent each LED. If [False](#)⁷⁴⁵ (the default), construct regular [LED](#) (page 125) instances.
- **initial_value** ([bool](#)⁷⁴⁶) – If [False](#)⁷⁴⁷ (the default), all LEDs will be off initially. If [None](#)⁷⁴⁸, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If [True](#)⁷⁴⁹, the device will be switched on initially.
- **pin_factory** ([Factory](#) (page 226) or [None](#)) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

your-label-here, your-label-here, ...

This entry represents one of the three labelled attributes supported on the STATUS Zero board. It is an [LEDBoard](#) (page 157) which contains:

red

The [LED](#) (page 125) or [PWMLED](#) (page 127) representing the red LED next to the label.

green

The [LED](#) (page 125) or [PWMLED](#) (page 127) representing the green LED next to the label.

⁷⁴¹ <https://thepihut.com/statuszero>

⁷⁴² <https://docs.python.org/3.9/library/stdtypes.html#str>

⁷⁴³ <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁴⁴ <https://docs.python.org/3.9/library/constants.html#True>

⁷⁴⁵ <https://docs.python.org/3.9/library/constants.html#False>

⁷⁴⁶ <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁴⁷ <https://docs.python.org/3.9/library/constants.html#False>

⁷⁴⁸ <https://docs.python.org/3.9/library/constants.html#None>

⁷⁴⁹ <https://docs.python.org/3.9/library/constants.html#True>

17.1.27 StatusBoard

class gpiozero.StatusBoard(*args, **kwargs)

Extends *CompositeOutputDevice* (page 186) for The Pi Hut’s STATUS⁷⁵⁰ board: a HAT sized add-on board with five sets of red/green LEDs and buttons to provide a status indicator with additional input.

The following example designates the first strip the label “wifi” and the second “raining”, turns the wifi green and then activates the button to toggle its lights when pressed:

```
from gpiozero import StatusBoard

status = StatusBoard('wifi', 'raining')
status.wifi.lights.green.on()
status.wifi.button.when_pressed = status.wifi.lights.toggle
```

Each designated label will contain a “lights” *LEDBoard* (page 157) containing two *LED* (page 125) objects named “red” and “green”, and a *Button* (page 105) object named “button”.

Parameters

- ***labels** (*str*⁷⁵¹) – Specify the names of the labels you wish to designate the strips to. You can list up to five labels. If no labels are given, five strips will be initialised with names ‘one’ to ‘five’. If some, but not all strips are given labels, any remaining strips will not be initialised.
- **pwm** (*bool*⁷⁵²) – If *True*⁷⁵³, construct *PWMLED* (page 127) instances to represent each LED. If *False*⁷⁵⁴ (the default), construct regular *LED* (page 125) instances.
- **initial_value** (*bool*⁷⁵⁵) – If *False*⁷⁵⁶ (the default), all LEDs will be off initially. If *None*⁷⁵⁷, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁷⁵⁸, the device will be switched on initially.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

your-label-here, your-label-here, ...

This entry represents one of the five labelled attributes supported on the STATUS board. It is an *CompositeOutputDevice* (page 186) which contains:

lights

A *LEDBoard* (page 157) representing the lights next to the label. It contains:

red

The *LED* (page 125) or *PWMLED* (page 127) representing the red LED next to the label.

green

The *LED* (page 125) or *PWMLED* (page 127) representing the green LED next to the label.

button

A *Button* (page 105) representing the button next to the label.

⁷⁵⁰ <https://thepihut.com/status>

⁷⁵¹ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁷⁵² <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁵³ <https://docs.python.org/3.9/library/constants.html#True>

⁷⁵⁴ <https://docs.python.org/3.9/library/constants.html#False>

⁷⁵⁵ <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁵⁶ <https://docs.python.org/3.9/library/constants.html#False>

⁷⁵⁷ <https://docs.python.org/3.9/library/constants.html#None>

⁷⁵⁸ <https://docs.python.org/3.9/library/constants.html#True>

17.1.28 SnowPi

class gpiozero.SnowPi (*args, **kwargs)

Extends [LEDBoard](#) (page 157) for the [Ryanteck SnowPi](#)⁷⁵⁹ board.

The SnowPi pins are fixed and therefore there's no need to specify them when constructing this class. The following example turns on the eyes, sets the nose pulsing, and the arms blinking:

```
from gpiozero import SnowPi

snowman = SnowPi(pwm=True)
snowman.eyes.on()
snowman.nose.pulse()
snowman.arms.blink()
```

Parameters

- **pwm** ([bool](#)⁷⁶⁰) – If [True](#)⁷⁶¹, construct [PWMLLED](#) (page 127) instances to represent each LED. If [False](#)⁷⁶² (the default), construct regular [LED](#) (page 125) instances.
- **initial_value** ([bool](#)⁷⁶³) – If [False](#)⁷⁶⁴ (the default), all LEDs will be off initially. If [None](#)⁷⁶⁵, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If [True](#)⁷⁶⁶, the device will be switched on initially.
- **pin_factory** ([Factory](#) (page 226) or [None](#)) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

arms

A [LEDBoard](#) (page 157) representing the arms of the snow man. It contains the following attributes:

left, right

Two [LEDBoard](#) (page 157) objects representing the left and right arms of the snow-man. They contain:

top, middle, bottom

The [LED](#) (page 125) or [PWMLLED](#) (page 127) down the snow-man's arms.

eyes

A [LEDBoard](#) (page 157) representing the eyes of the snow-man. It contains:

left, right

The [LED](#) (page 125) or [PWMLLED](#) (page 127) for the snow-man's eyes.

nose

The [LED](#) (page 125) or [PWMLLED](#) (page 127) for the snow-man's nose.

⁷⁵⁹ <https://ryanteck.uk/raspberry-pi/114-snowpi-the-gpio-snowman-for-raspberry-pi-0635648608303.html>

⁷⁶⁰ <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁶¹ <https://docs.python.org/3.9/library/constants.html#True>

⁷⁶² <https://docs.python.org/3.9/library/constants.html#False>

⁷⁶³ <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁶⁴ <https://docs.python.org/3.9/library/constants.html#False>

⁷⁶⁵ <https://docs.python.org/3.9/library/constants.html#None>

⁷⁶⁶ <https://docs.python.org/3.9/library/constants.html#True>

17.1.29 PumpkinPi

class gpiozero.PumpkinPi (*args, **kwargs)

Extends [LEDBoard](#) (page 157) for the [ModMyPi PumpkinPi](#)⁷⁶⁷ board.

There are twelve LEDs connected up to individual pins, so for the PumpkinPi the pins are fixed. For example:

```
from gpiozero import PumpkinPi

pumpkin = PumpkinPi(pwm=True)
pumpkin.sides.pulse()
pumpkin.off()
```

Parameters

- **pwm** (*bool*⁷⁶⁸) – If *True*⁷⁶⁹, construct [PWMLED](#) (page 127) instances to represent each LED. If *False*⁷⁷⁰ (the default), construct regular [LED](#) (page 125) instances
- **initial_value** (*bool*⁷⁷¹ or *None*) – If *False*⁷⁷² (the default), all LEDs will be off initially. If *None*⁷⁷³, each device will be left in whatever state the pin is found in when configured for output (warning: this can be on). If *True*⁷⁷⁴, the device will be switched on initially.
- **pin_factory** ([Factory](#) (page 226) or *None*) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

sides

A [LEDBoard](#) (page 157) representing the LEDs around the edge of the pumpkin. It contains:

left, right

Two [LEDBoard](#) (page 157) instances representing the LEDs on the left and right sides of the pumpkin. They each contain:

top, midtop, middle, midbottom, bottom

Each [LED](#) (page 125) or [PWMLED](#) (page 127) around the specified side of the pumpkin.

eyes

A [LEDBoard](#) (page 157) representing the eyes of the pumpkin. It contains:

left, right

The [LED](#) (page 125) or [PWMLED](#) (page 127) for each of the pumpkin's eyes.

17.2 Base Classes

The classes in the sections above are derived from a series of base classes, some of which are effectively abstract. The classes form the (partial) hierarchy displayed in the graph below:

⁷⁶⁷ <https://www.modmypi.com/halloween-pumpkin-programmable-kit>

⁷⁶⁸ <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁶⁹ <https://docs.python.org/3.9/library/constants.html#True>


⁷⁷⁰ <https://docs.python.org/3.9/library/constants.html#False>

⁷⁷¹ <https://docs.python.org/3.9/library/functions.html#bool>


⁷⁷² <https://docs.python.org/3.9/library/constants.html#False>

⁷⁷³ <https://docs.python.org/3.9/library/constants.html#None>

⁷⁷⁴ <https://docs.python.org/3.9/library/constants.html#True>

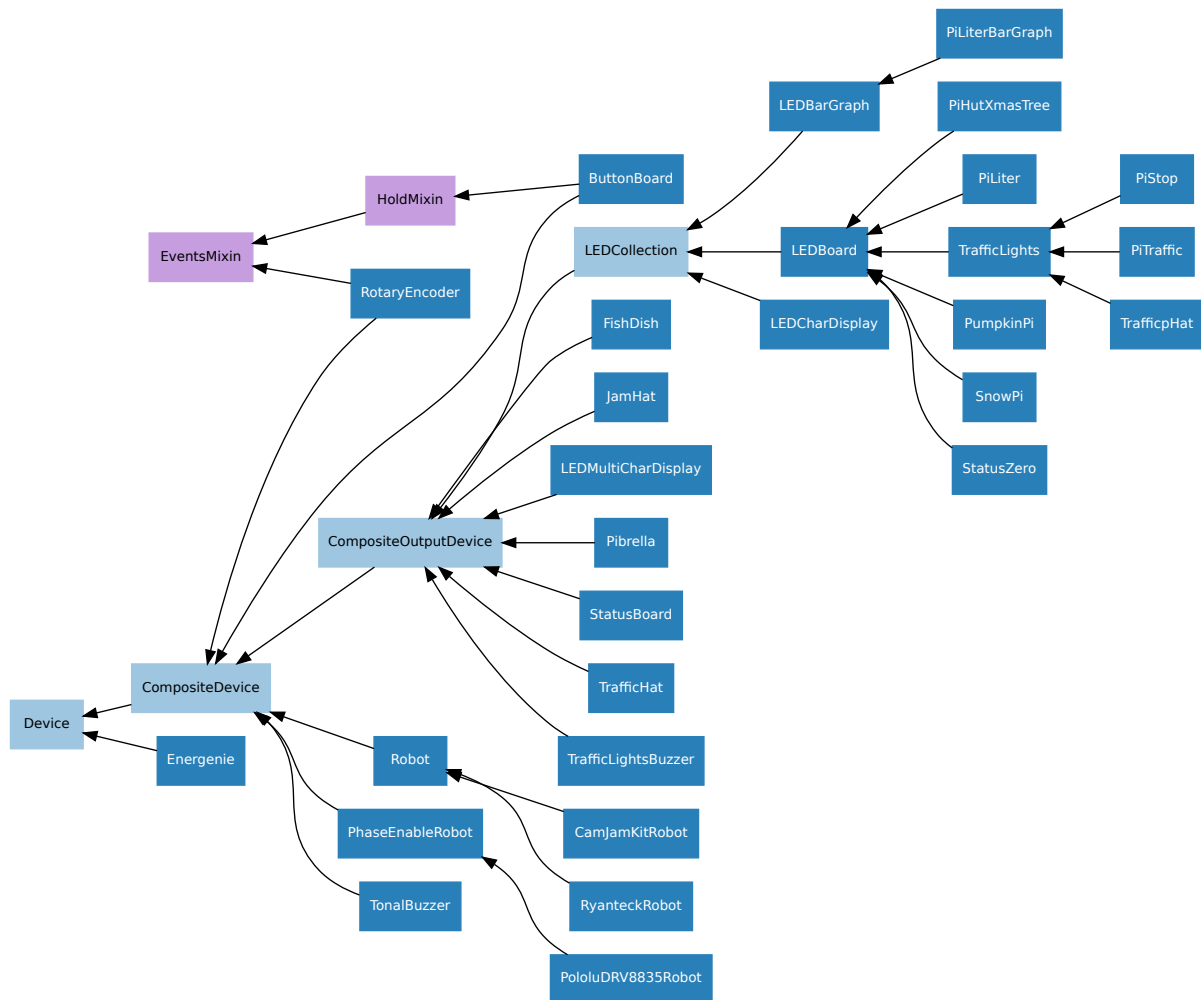

For composite devices, the following chart shows which devices are composed of which other devices:

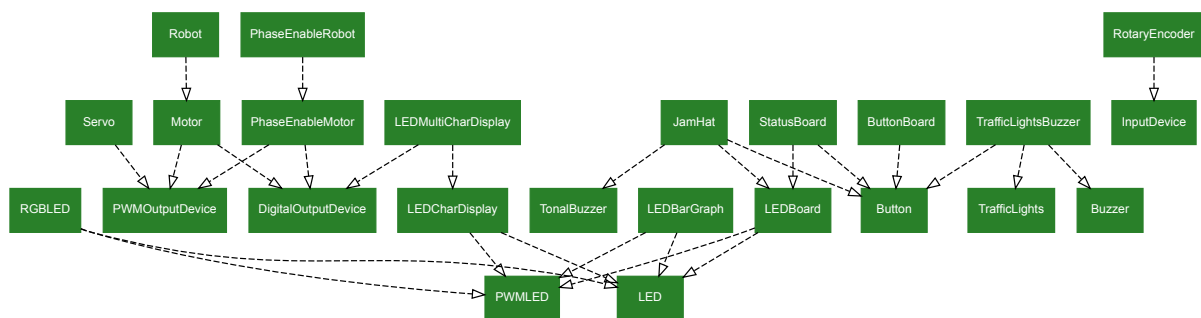

The following sections document these base classes for advanced users that wish to construct classes for their own devices.

17.2.1 LEDCollection

class gpiozero.LEDCollection (*args, **kwargs)

Extends *CompositeOutputDevice* (page 186). Abstract base class for *LEDBoard* (page 157) and *LEDBarGraph* (page 160).

property is_lit

Composite devices are considered “active” if any of their constituent devices have a “truthy” value.

property leds

A flat tuple of all LEDs contained in this collection (and all sub-collections).

17.2.2 CompositeOutputDevice

class gpiozero.CompositeOutputDevice (*args, **kwargs)

Extends *CompositeDevice* (page 187) with *on()* (page 186), *off()* (page 186), and *toggle()* (page 186) methods for controlling subordinate output devices. Also extends *value* (page 186) to be writeable.

Parameters

- ***args** (*Device* (page 199)) – The un-named devices that belong to the composite device. The *value* (page 199) attributes of these devices will be represented within the composite device’s tuple *value* (page 186) in the order specified here.
- **_order** (*list*⁷⁷⁵ or *None*) – If specified, this is the order of named items specified by keyword arguments (to ensure that the *value* (page 186) tuple is constructed with a specific order). All keyword arguments *must* be included in the collection. If omitted, an alphabetically sorted order will be selected for keyword arguments.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).
- ****kwargs** (*Device* (page 199)) – The named devices that belong to the composite device. These devices will be accessible as named attributes on the resulting device, and their *value* (page 186) attributes will be accessible as named elements of the composite device’s tuple *value* (page 186).

off()

Turn all the output devices off.

on()

Turn all the output devices on.

toggle()

Toggle all the output devices. For each device, if it’s on, turn it off; if it’s off, turn it on.

property value

A tuple containing a value for each subordinate device. This property can also be set to update the state of all subordinate output devices.

⁷⁷⁵ <https://docs.python.org/3.9/library/stdtypes.html#list>

17.2.3 CompositeDevice

class gpiozero.CompositeDevice (*args, **kwargs)

Extends *Device* (page 199). Represents a device composed of multiple devices like simple HATs, H-bridge motor controllers, robots composed of multiple motors, etc.

The constructor accepts subordinate devices as positional or keyword arguments. Positional arguments form unnamed devices accessed by treating the composite device as a container, while keyword arguments are added to the device as named (read-only) attributes.

For example:

```
>>> from gpiozero import *
>>> d = CompositeDevice(LED(2), LED(3), LED(4), btn=Button(17))
>>> d[0]
<gpiozero.LED object on pin GPIO2, active_high=True, is_active=False>
>>> d[1]
<gpiozero.LED object on pin GPIO3, active_high=True, is_active=False>
>>> d[2]
<gpiozero.LED object on pin GPIO4, active_high=True, is_active=False>
>>> d.btn
<gpiozero.Button object on pin GPIO17, pull_up=True, is_active=False>
>>> d.value
CompositeDeviceValue(device_0=False, device_1=False, device_2=False, btn=False)
```

Parameters

- ***args** (*Device* (page 199)) – The un-named devices that belong to the composite device. The *value* (page 188) attributes of these devices will be represented within the composite device’s tuple *value* (page 188) in the order specified here.
- **_order** (*list*⁷⁷⁶ or *None*) – If specified, this is the order of named items specified by keyword arguments (to ensure that the *value* (page 188) tuple is constructed with a specific order). All keyword arguments *must* be included in the collection. If omitted, an alphabetically sorted order will be selected for keyword arguments.
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).
- ****kwargs** (*Device* (page 199)) – The named devices that belong to the composite device. These devices will be accessible as named attributes on the resulting device, and their *value* (page 188) attributes will be accessible as named elements of the composite device’s tuple *value* (page 188).

close()

Shut down the device and release all associated resources (such as GPIO pins).

This method is idempotent (can be called on an already closed device without any side-effects). It is primarily intended for interactive use at the command line. It disables the device and releases its pin(s) for use by another device.

You can attempt to do this simply by deleting an object, but unless you’ve cleaned up all references to the object this may not work (even if you’ve cleaned up all references, there’s still no guarantee the garbage collector will actually delete the object at that point). By contrast, the close method provides a means of ensuring that the object is shut down.

For example, if you have a breadboard with a buzzer connected to pin 16, but then wish to attach an LED instead:

```
>>> from gpiozero import *
>>> bz = Buzzer(16)
>>> bz.on()
```

(continues on next page)

(continued from previous page)

```
>>> bz.off()
>>> bz.close()
>>> led = LED(16)
>>> led.blink()
```

Device (page 199) descendants can also be used as context managers using the `with`⁷⁷⁷ statement. For example:

```
>>> from gpiozero import *
>>> with Buzzer(16) as bz:
...     bz.on()
...
>>> with LED(16) as led:
...     led.on()
...
```

property closed

Returns `True`⁷⁷⁸ if the device is closed (see the `close()` (page 187) method). Once a device is closed you can no longer use any other methods or properties to control or query the device.

```
property is_active
```

Composite devices are considered “active” if any of their constituent devices have a “truthy” value.

```
property namedtuple
```

The `namedtuple()` ⁷⁷⁹ type constructed to represent the value of the composite device. The `value` (page 188) attribute returns values of this type.

property value

A `namedtuple()`⁷⁸⁰ containing a value for each subordinate device. Devices with names will be represented as named elements. Unnamed devices will have a unique name generated for them, and they will appear in the position they appeared in the constructor.

⁷⁷⁶ <https://docs.python.org/3.9/library/stdtypes.html#list>

⁷⁷⁷ https://docs.python.org/3.9/reference/compound_stmts.html#with

778 <https://docs.python.org/3.9/library/constants.html#True>

⁷⁷⁹ <https://docs.python.org/3.9/library/collections.html#collections.namedtuple>

⁷⁸⁰ <https://docs.python.org/3.9/library/collections.html#collections.namedtuple>

API - INTERNAL DEVICES

GPIO Zero also provides several “internal” devices which represent facilities provided by the operating system itself. These can be used to react to things like the time of day, or whether a server is available on the network.

These devices provide an API similar to and compatible with GPIO devices so that internal device events can trigger changes to GPIO output devices the way input devices can. In the same way a *Button* (page 105) object is *active* when it's pressed, and can be used to trigger other devices when its state changes, a *TimeOfDay* (page 190) object is *active* during a particular time period.

Consider the following code in which a *Button* (page 105) object is used to control an *LED* (page 125) object:

```
from gpiozero import LED, Button
from signal import pause

led = LED(2)
btn = Button(3)

btn.when_pressed = led.on
btn.when_released = led.off

pause()
```

Now consider the following example in which a *TimeOfDay* (page 190) object is used to control an *LED* (page 125) using the same method:

```
from gpiozero import LED, TimeOfDay
from datetime import time
from signal import pause

led = LED(2)
tod = TimeOfDay(time(9), time(10))

tod.when_activated = led.on
tod.when_deactivated = led.off

pause()
```

Here, rather than the LED being controlled by the press of a button, it's controlled by the time. When the time reaches 09:00AM, the LED comes on, and at 10:00AM it goes off.

Like the *Button* (page 105) object, internal devices like the *TimeOfDay* (page 190) object has *value* (page 190), *values*, *is_active* (page 190), *when_activated* (page 190) and *when_deactivated* (page 191) attributes, so alternative methods using the other paradigms would also work.

Note: Note that although the constructor parameter `pin_factory` is available for internal devices, and is required to be valid, the pin factory chosen will not make any practical difference. Reading a remote Pi's CPU temperature, for example, is not currently possible.

18.1 Regular Classes

The following classes are intended for general use with the devices they are named after. All classes in this section are concrete (not abstract).

18.1.1 TimeOfDay

class gpiozero.TimeOfDay(*args, **kwargs)

Extends [PolledInternalDevice](#) (page 196) to provide a device which is active when the computer's clock indicates that the current time is between *start_time* and *end_time* (inclusive) which are [time](#)⁷⁸¹ instances.

The following example turns on a lamp attached to an [Energenie](#) (page 180) plug between 07:00AM and 08:00AM:

```
from gpiozero import TimeOfDay, Energenie
from datetime import time
from signal import pause

lamp = Energenie(1)
morning = TimeOfDay(time(7), time(8))

morning.when_activated = lamp.on
morning.when_deactivated = lamp.off

pause()
```

Note that *start_time* may be greater than *end_time*, indicating a time period which crosses midnight.

Parameters

- **start_time** ([time](#)⁷⁸²) – The time from which the device will be considered active.
- **end_time** ([time](#)⁷⁸³) – The time after which the device will be considered inactive.
- **utc** ([bool](#)⁷⁸⁴) – If [True](#)⁷⁸⁵ (the default), a naive UTC time will be used for the comparison rather than a local time-zone reading.
- **event_delay** ([float](#)⁷⁸⁶) – The number of seconds between file reads (defaults to 10 seconds).
- **pin_factory** ([Factory](#) (page 226) or *None*) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

property end_time

The time of day after which the device will be considered inactive.

property is_active

Returns [True](#)⁷⁸⁷ if the device is currently active and [False](#)⁷⁸⁸ otherwise. This property is usually derived from [value](#) (page 190). Unlike [value](#) (page 190), this is *always* a boolean.

property start_time

The time of day after which the device will be considered active.

property utc

If [True](#)⁷⁸⁹, use a naive UTC time reading for comparison instead of a local timezone reading.

property value

Returns 1 when the system clock reads between [start_time](#) (page 190) and [end_time](#) (page 190), and 0 otherwise. If [start_time](#) (page 190) is greater than [end_time](#) (page 190) (indicating a period that crosses midnight), then this returns 1 when the current time is greater than [start_time](#) (page 190) or less than [end_time](#) (page 190).

when_activated

The function to run when the device changes state from inactive to active (time reaches *start_time*).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None` (the default) to disable the event.

when_deactivated

The function to run when the device changes state from active to inactive (time reaches *end_time*).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None` (the default) to disable the event.

18.1.2 PingServer

class `gpiozero.PingServer` (*args, **kwargs)

Extends `PolledInternalDevice` (page 196) to provide a device which is active when a *host* (domain name or IP address) can be pinged.

The following example lights an LED while `google.com` is reachable:

```
from gpiozero import PingServer, LED
from signal import pause

google = PingServer('google.com')
led = LED(4)

google.when_activated = led.on
google.when_deactivated = led.off

pause()
```

Parameters

- **host** (`str`⁷⁸⁰) – The hostname or IP address to attempt to ping.
- **event_delay** (`float`⁷⁹¹) – The number of seconds between pings (defaults to 10 seconds).
- **pin_factory** (`Factory` (page 226) or `None`) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

property host

The hostname or IP address to test whenever *value* (page 191) is queried.

property is_active

Returns `True`⁷⁹² if the device is currently active and `False`⁷⁹³ otherwise. This property is usually derived from *value* (page 191). Unlike *value* (page 191), this is *always* a boolean.

⁷⁸¹ <https://docs.python.org/3.9/library/datetime.html#datetime.time>

⁷⁸² <https://docs.python.org/3.9/library/datetime.html#datetime.time>

⁷⁸³ <https://docs.python.org/3.9/library/datetime.html#datetime.time>

⁷⁸⁴ <https://docs.python.org/3.9/library/functions.html#bool>

⁷⁸⁵ <https://docs.python.org/3.9/library/constants.html#True>

⁷⁸⁶ <https://docs.python.org/3.9/library/functions.html#float>

⁷⁸⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁷⁸⁸ <https://docs.python.org/3.9/library/constants.html#False>

⁷⁸⁹ <https://docs.python.org/3.9/library/constants.html#True>

property value

Returns 1 if the host returned a single ping, and 0 otherwise.

when_activated

The function to run when the device changes state from inactive (host unresponsive) to active (host responsive).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None` (the default) to disable the event.

when_deactivated

The function to run when the device changes state from inactive (host responsive) to active (host unresponsive).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to `None` (the default) to disable the event.

18.1.3 CPUTemperature

class gpiozero.CPUTemperature (*args, **kwargs)

Extends *PolledInternalDevice* (page 196) to provide a device which is active when the CPU temperature exceeds the *threshold* value.

The following example plots the CPU's temperature on an LED bar graph:

```
from gpiozero import LEDBarGraph, CPUTemperature
from signal import pause

# Use minimums and maximums that are closer to "normal" usage so the
# bar graph is a bit more "lively"
cpu = CPUTemperature(min_temp=50, max_temp=90)

print(f'Initial temperature: {cpu.temperature}C')

graph = LEDBarGraph(5, 6, 13, 19, 25, pwm=True)
graph.source = cpu

pause()
```

Parameters

- **sensor_file** (*str*⁷⁹⁰) – The file from which to read the temperature. This defaults to the sysfs file `/sys/class/thermal/thermal_zone0/temp`. Whatever file is specified is expected to contain a single line containing the temperature in milli-degrees celsius.
- **min_temp** (*float*⁷⁹¹) – The temperature at which *value* (page 193) will read 0.0. This defaults to 0.0.
- **max_temp** (*float*⁷⁹²) – The temperature at which *value* (page 193) will read 1.0. This defaults to 100.0.

⁷⁹⁰ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁷⁹¹ <https://docs.python.org/3.9/library/functions.html#float>

⁷⁹² <https://docs.python.org/3.9/library/constants.html#True>

⁷⁹³ <https://docs.python.org/3.9/library/constants.html#False>

- **threshold** (*float*⁷⁹⁷) – The temperature above which the device will be considered “active”. (see *is_active* (page 193)). This defaults to 80.0.
- **event_delay** (*float*⁷⁹⁸) – The number of seconds between file reads (defaults to 5 seconds).
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

property **is_active**

Returns *True*⁷⁹⁹ when the CPU *temperature* (page 193) exceeds the *threshold*.

property **temperature**

Returns the current CPU temperature in degrees celsius.

property **value**

Returns the current CPU temperature as a value between 0.0 (representing the *min_temp* value) and 1.0 (representing the *max_temp* value). These default to 0.0 and 100.0 respectively, hence *value* (page 193) is *temperature* (page 193) divided by 100 by default.

when_activated

The function to run when the device changes state from inactive to active (temperature reaches *threshold*).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None* (the default) to disable the event.

when_deactivated

The function to run when the device changes state from active to inactive (temperature drops below *threshold*).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None* (the default) to disable the event.

18.1.4 LoadAverage

class gpiozero.**LoadAverage** (*args, **kwargs)

Extends *PolledInternalDevice* (page 196) to provide a device which is active when the CPU load average exceeds the *threshold* value.

The following example plots the load average on an LED bar graph:

```
from gpiozero import LEDBarGraph, LoadAverage
from signal import pause

la = LoadAverage(min_load_average=0, max_load_average=2)
graph = LEDBarGraph(5, 6, 13, 19, 25, pwm=True)

graph.source = la

pause()
```

⁷⁹⁴ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁷⁹⁵ <https://docs.python.org/3.9/library/functions.html#float>

⁷⁹⁶ <https://docs.python.org/3.9/library/functions.html#float>

⁷⁹⁷ <https://docs.python.org/3.9/library/functions.html#float>

⁷⁹⁸ <https://docs.python.org/3.9/library/functions.html#float>

⁷⁹⁹ <https://docs.python.org/3.9/library/constants.html#True>

Parameters

- **load_average_file** (*str*⁸⁰⁰) – The file from which to read the load average. This defaults to the proc file `/proc/loadavg`. Whatever file is specified is expected to contain three space-separated load averages at the beginning of the file, representing 1 minute, 5 minute and 15 minute averages respectively.
- **min_load_average** (*float*⁸⁰¹) – The load average at which *value* (page 194) will read 0.0. This defaults to 0.0.
- **max_load_average** (*float*⁸⁰²) – The load average at which *value* (page 194) will read 1.0. This defaults to 1.0.
- **threshold** (*float*⁸⁰³) – The load average above which the device will be considered “active”. (see *is_active* (page 194)). This defaults to 0.8.
- **minutes** (*int*⁸⁰⁴) – The number of minutes over which to average the load. Must be 1, 5 or 15. This defaults to 5.
- **event_delay** (*float*⁸⁰⁵) – The number of seconds between file reads (defaults to 10 seconds).
- **pin_factory** (*Factory* (page 226) or *None*) – See *API - Pins* (page 221) for more information (this is an advanced feature which most users can ignore).

property `is_active`

Returns *True*⁸⁰⁶ when the *load_average* (page 194) exceeds the *threshold*.

property `load_average`

Returns the current load average.

property `value`

Returns the current load average as a value between 0.0 (representing the *min_load_average* value) and 1.0 (representing the *max_load_average* value). These default to 0.0 and 1.0 respectively.

when_activated

The function to run when the device changes state from inactive to active (load average reaches *threshold*).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None* (the default) to disable the event.

when_deactivated

The function to run when the device changes state from active to inactive (load average drops below *threshold*).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None* (the default) to disable the event.

⁸⁰⁰ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁸⁰¹ <https://docs.python.org/3.9/library/functions.html#float>

⁸⁰² <https://docs.python.org/3.9/library/functions.html#float>

⁸⁰³ <https://docs.python.org/3.9/library/functions.html#float>

⁸⁰⁴ <https://docs.python.org/3.9/library/functions.html#int>

⁸⁰⁵ <https://docs.python.org/3.9/library/functions.html#float>

⁸⁰⁶ <https://docs.python.org/3.9/library/constants.html#True>

18.1.5 DiskUsage

class gpiozero.DiskUsage(*args, **kwargs)

Extends [PolledInternalDevice](#) (page 196) to provide a device which is active when the disk space used exceeds the *threshold* value.

The following example plots the disk usage on an LED bar graph:

```
from gpiozero import LEDBarGraph, DiskUsage
from signal import pause

disk = DiskUsage()

print(f'Current disk usage: {disk.usage}%')

graph = LEDBarGraph(5, 6, 13, 19, 25, pwm=True)
graph.source = disk

pause()
```

Parameters

- **filesystem** ([str](#)⁸⁰⁷) – A path within the filesystem for which the disk usage needs to be computed. This defaults to /, which is the root filesystem.
- **threshold** ([float](#)⁸⁰⁸) – The disk usage percentage above which the device will be considered “active” (see [is_active](#) (page 195)). This defaults to 90.0.
- **event_delay** ([float](#)⁸⁰⁹) – The number of seconds between file reads (defaults to 30 seconds).
- **pin_factory** ([Factory](#) (page 226) or *None*) – See [API - Pins](#) (page 221) for more information (this is an advanced feature which most users can ignore).

property is_active

Returns [True](#)⁸¹⁰ when the disk [usage](#) (page 195) exceeds the *threshold*.

property usage

Returns the current disk usage in percentage.

property value

Returns the current disk usage as a value between 0.0 and 1.0 by dividing [usage](#) (page 195) by 100.

when_activated

The function to run when the device changes state from inactive to active (disk usage reaches *threshold*).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None* (the default) to disable the event.

when_deactivated


The function to run when the device changes state from active to inactive (disk usage drops below *threshold*).

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None* (the default) to disable the event.

18.2 Base Classes

The classes in the sections above are derived from a series of base classes, some of which are effectively abstract. The classes form the (partial) hierarchy displayed in the graph below (abstract classes are shaded lighter than concrete classes):

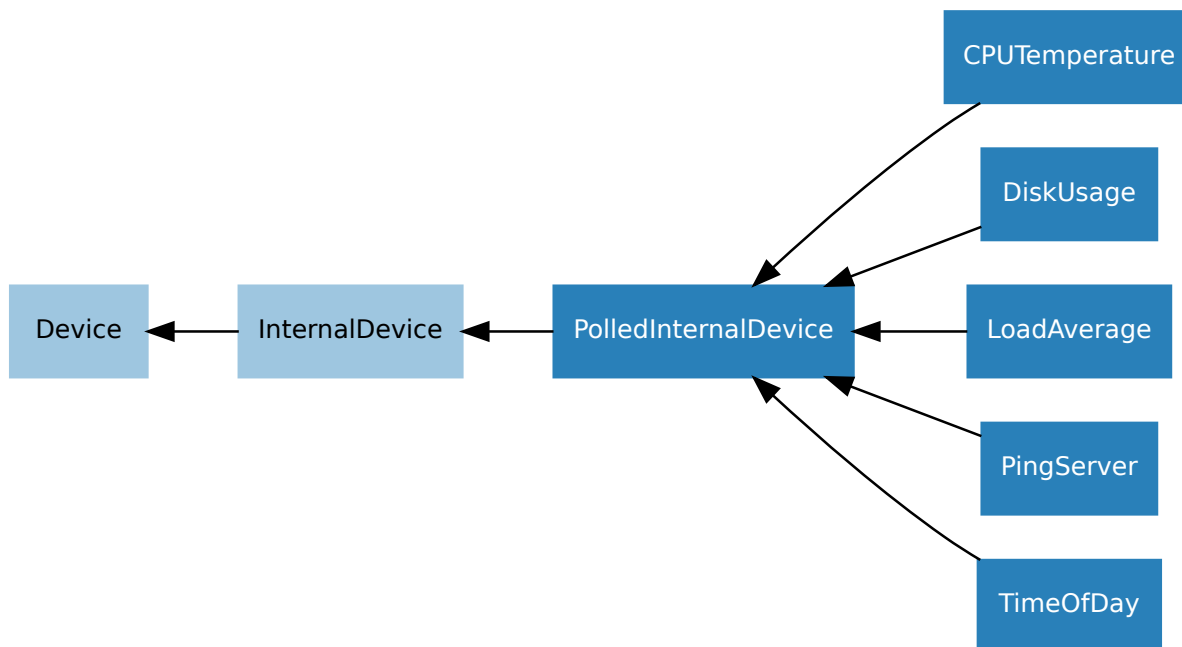

The following sections document these base classes for advanced users that wish to construct classes for their own devices.

18.2.1 PolledInternalDevice

class `gpiozero.PolledInternalDevice` (**args*, ***kwargs*)

Extends `InternalDevice` (page 196) to provide a background thread to poll internal devices that lack any other mechanism to inform the instance of changes.

18.2.2 InternalDevice

class `gpiozero.InternalDevice` (**args*, ***kwargs*)

Extends `Device` (page 199) to provide a basis for devices which have no specific hardware representation. These are effectively pseudo-devices and usually represent operating system services like the internal clock, file systems or network facilities.

⁸⁰⁷ <https://docs.python.org/3.9/library/stdtypes.html#str>
⁸⁰⁸ <https://docs.python.org/3.9/library/functions.html#float>
⁸⁰⁹ <https://docs.python.org/3.9/library/functions.html#float>
⁸¹⁰ <https://docs.python.org/3.9/library/constants.html#True>


API - GENERIC CLASSES

The GPIO Zero class hierarchy is quite extensive. It contains several base classes (most of which are documented in their corresponding chapters):

- *Device* (page 199) is the root of the hierarchy, implementing base functionality like `close()` (page 199) and context manager handlers.
- *GPIODevice* (page 122) represents individual devices that attach to a single GPIO pin
- *SPIDevice* (page 154) represents devices that communicate over an SPI interface (implemented as four GPIO pins)
- *InternalDevice* (page 196) represents devices that are entirely internal to the Pi (usually operating system related services)
- *CompositeDevice* (page 187) represents devices composed of multiple other devices like HATs

There are also several *mixin classes*⁸¹¹ for adding important functionality at numerous points in the hierarchy, which is illustrated below (mixin classes are represented in purple, while abstract classes are shaded lighter):

⁸¹¹ <https://en.wikipedia.org/wiki/Mixin>

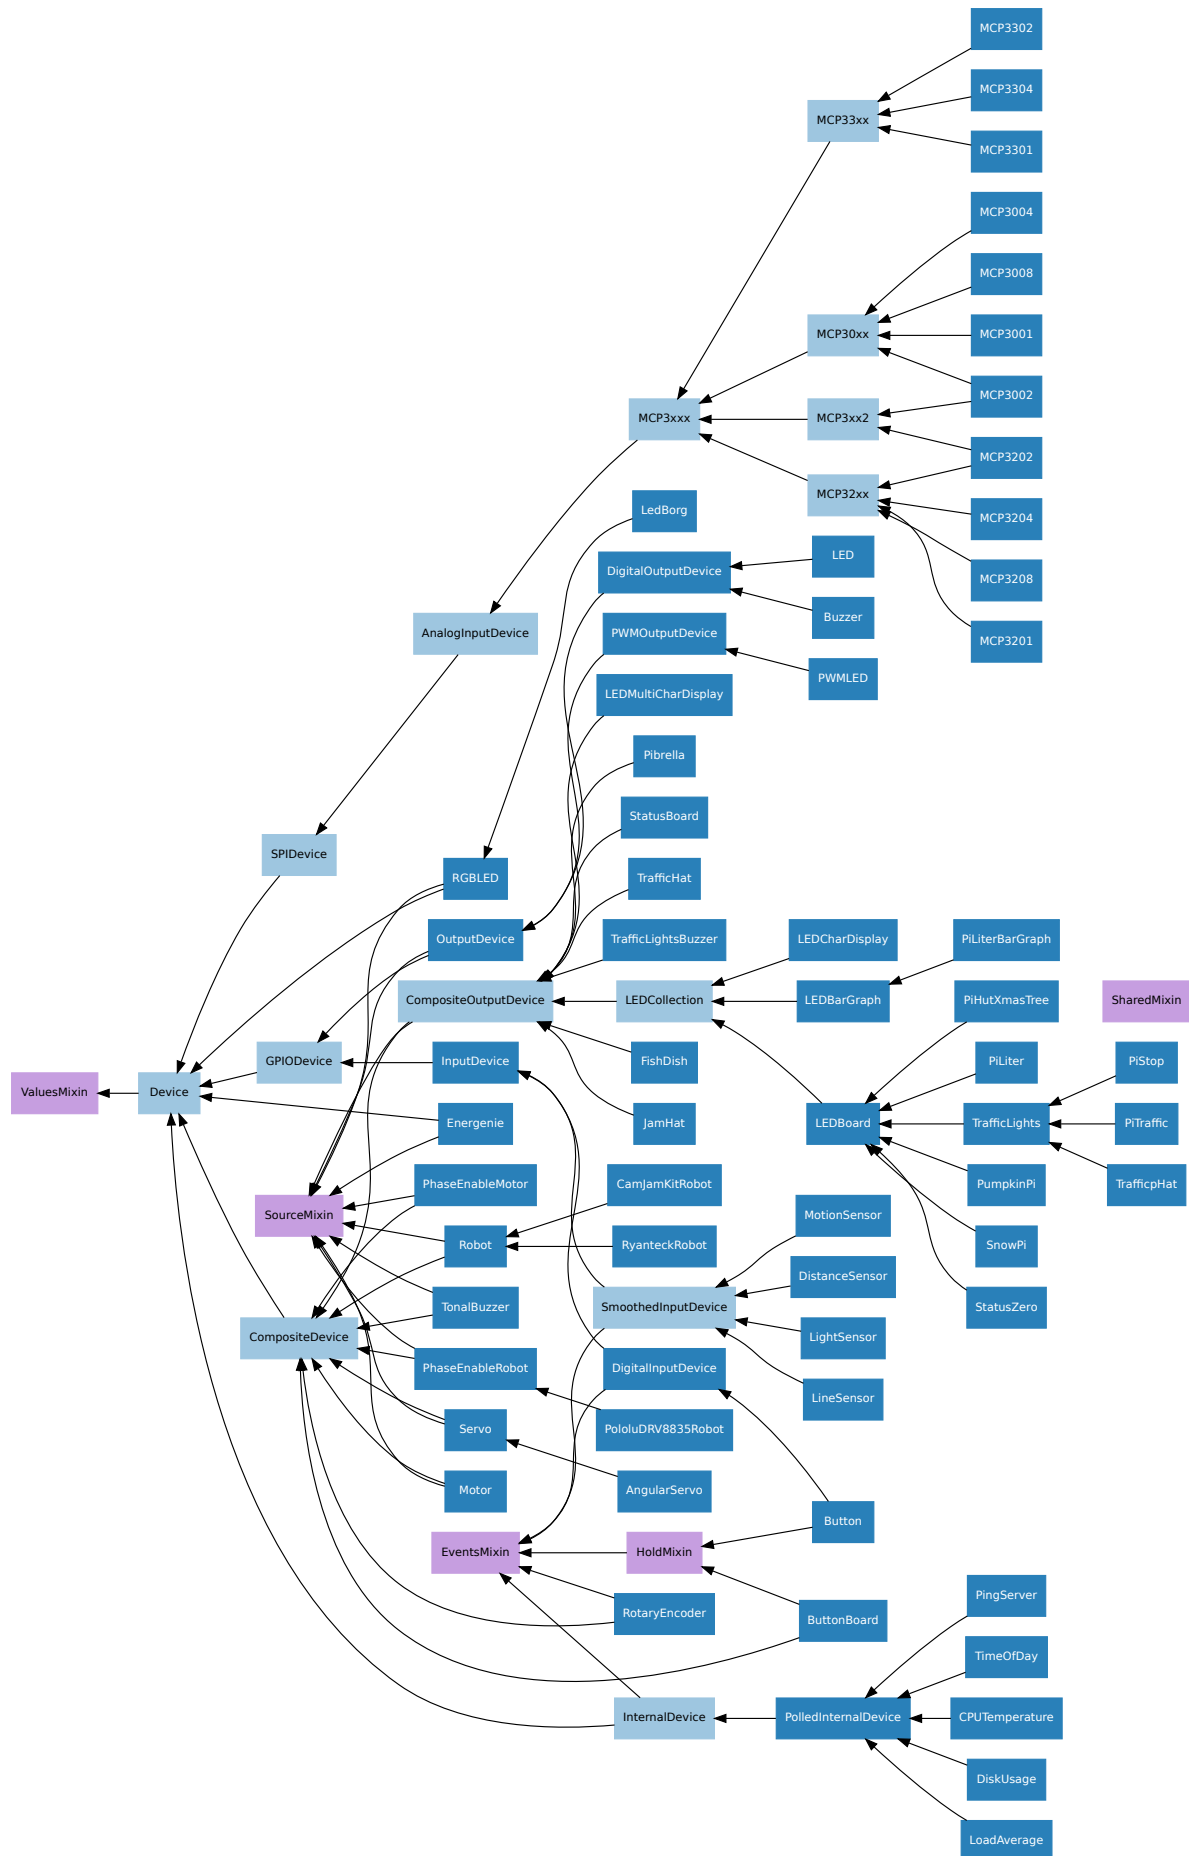

19.1 Device

class gpiozero.Device (*args, **kwargs)

Represents a single device of any type; GPIO-based, SPI-based, I2C-based, etc. This is the base class of the device hierarchy. It defines the basic services applicable to all devices (specifically the `is_active` (page 199) property, the `value` (page 199) property, and the `close()` (page 199) method).

pin_factory

This attribute exists at both a class level (representing the default pin factory used to construct devices when no `pin_factory` parameter is specified), and at an instance level (representing the pin factory that the device was constructed with).

The pin factory provides various facilities to the device including allocating pins, providing low level interfaces (e.g. SPI), and clock facilities (querying and calculating elapsed times).

close()

Shut down the device and release all associated resources (such as GPIO pins).

This method is idempotent (can be called on an already closed device without any side-effects). It is primarily intended for interactive use at the command line. It disables the device and releases its pin(s) for use by another device.

You can attempt to do this simply by deleting an object, but unless you've cleaned up all references to the object this may not work (even if you've cleaned up all references, there's still no guarantee the garbage collector will actually delete the object at that point). By contrast, the `close` method provides a means of ensuring that the object is shut down.

For example, if you have a breadboard with a buzzer connected to pin 16, but then wish to attach an LED instead:

```
>>> from gpiozero import *
>>> bz = Buzzer(16)
>>> bz.on()
>>> bz.off()
>>> bz.close()
>>> led = LED(16)
>>> led.blink()
```

`Device` (page 199) descendents can also be used as context managers using the `with`⁸¹² statement. For example:

```
>>> from gpiozero import *
>>> with Buzzer(16) as bz:
...     bz.on()
...
>>> with LED(16) as led:
...     led.on()
...
...
>>>
```

property closed

Returns `True`⁸¹³ if the device is closed (see the `close()` (page 199) method). Once a device is closed you can no longer use any other methods or properties to control or query the device.

property is_active

Returns `True`⁸¹⁴ if the device is currently active and `False`⁸¹⁵ otherwise. This property is usually derived from `value` (page 199). Unlike `value` (page 199), this is *always* a boolean.

property value

Returns a value representing the device's state. Frequently, this is a boolean value, or a number between 0 and 1 but some devices use larger ranges (e.g. -1 to +1) and composite devices usually use tuples to return the states of all their subordinate components.

19.2 ValuesMixin

class gpiozero.ValuesMixin(...)

Adds a *values* (page 200) property to the class which returns an infinite generator of readings from the *value* (page 199) property. There is rarely a need to use this mixin directly as all base classes in GPIO Zero include it.

Note: Use this mixin *first* in the parent class list.

property values

An infinite iterator of values read from *value*.

19.3 SourceMixin

class gpiozero.SourceMixin(...)

Adds a *source* (page 200) property to the class which, given an iterable or a *ValuesMixin* (page 200) descendent, sets *value* (page 199) to each member of that iterable until it is exhausted. This mixin is generally included in novel output devices to allow their state to be driven from another device.

Note: Use this mixin *first* in the parent class list.

property source

The iterable to use as a source of values for *value*.

property source_delay

The delay (measured in seconds) in the loop used to read values from *source* (page 200). Defaults to 0.01 seconds which is generally sufficient to keep CPU usage to a minimum while providing adequate responsiveness.

19.4 SharedMixin

class gpiozero.SharedMixin(...)

This mixin marks a class as “shared”. In this case, the meta-class (GPIOMeta) will use *_shared_key()* (page 200) to convert the constructor arguments to an immutable key, and will check whether any existing instances match that key. If they do, they will be returned by the constructor instead of a new instance. An internal reference counter is used to determine how many times an instance has been “constructed” in this way.

When *close()* (page 199) is called, an internal reference counter will be decremented and the instance will only close when it reaches zero.

classmethod *_shared_key*(*args, **kwargs)

This is called with the constructor arguments to generate a unique key (which must be storable in a *dict*⁸¹⁶ and, thus, immutable and hashable) representing the instance that can be shared. This must be overridden by descendents.

⁸¹² https://docs.python.org/3.9/reference/compound_stmts.html#with

⁸¹³ <https://docs.python.org/3.9/library/constants.html#True>

⁸¹⁴ <https://docs.python.org/3.9/library/constants.html#True>

⁸¹⁵ <https://docs.python.org/3.9/library/constants.html#False>

⁸¹⁶ <https://docs.python.org/3.9/library/stdtypes.html#dict>

19.5 EventsMixin

class gpiozero.EventsMixin(...)

Adds edge-detected `when_activated()` (page 201) and `when_deactivated()` (page 201) events to a device based on changes to the `is_active` (page 199) property common to all devices. Also adds `wait_for_active()` (page 201) and `wait_for_inactive()` (page 201) methods for level-waiting.

Note: Note that this mixin provides no means of actually firing its events; call `_fire_events()` in subclasses when device state changes to trigger the events. This should also be called once at the end of initialization to set initial states.

wait_for_active (timeout=None)

Pause the script until the device is activated, or the timeout is reached.

Parameters

timeout (*float*⁸¹⁷ or *None*) – Number of seconds to wait before proceeding. If this is *None*⁸¹⁸ (the default), then wait indefinitely until the device is active.

wait_for_inactive (timeout=None)

Pause the script until the device is deactivated, or the timeout is reached.

Parameters

timeout (*float*⁸¹⁹ or *None*) – Number of seconds to wait before proceeding. If this is *None*⁸²⁰ (the default), then wait indefinitely until the device is inactive.

property active_time

The length of time (in seconds) that the device has been active for. When the device is inactive, this is *None*⁸²¹.

property inactive_time

The length of time (in seconds) that the device has been inactive for. When the device is active, this is *None*⁸²².

when_activated

The function to run when the device changes state from inactive to active.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated it will be passed as that parameter.

Set this property to *None*⁸²³ (the default) to disable the event.

when_deactivated

The function to run when the device changes state from active to inactive.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that deactivated it will be passed as that parameter.

Set this property to *None*⁸²⁴ (the default) to disable the event.

⁸¹⁷ <https://docs.python.org/3.9/library/functions.html#float>

⁸¹⁸ <https://docs.python.org/3.9/library/constants.html#None>

⁸¹⁹ <https://docs.python.org/3.9/library/functions.html#float>

⁸²⁰ <https://docs.python.org/3.9/library/constants.html#None>

⁸²¹ <https://docs.python.org/3.9/library/constants.html#None>

⁸²² <https://docs.python.org/3.9/library/constants.html#None>

⁸²³ <https://docs.python.org/3.9/library/constants.html#None>

⁸²⁴ <https://docs.python.org/3.9/library/constants.html#None>

19.6 HoldMixin

class gpiozero.HoldMixin(...)

Extends *EventsMixin* (page 201) to add the *when_held* (page 202) event and the machinery to fire that event repeatedly (when *hold_repeat* (page 202) is `True`⁸²⁵) at intervals defined by *hold_time* (page 202).

property held_time

The length of time (in seconds) that the device has been held for. This is counted from the first execution of the *when_held* (page 202) event rather than when the device activated, in contrast to *active_time* (page 201). If the device is not currently held, this is `None`⁸²⁶.

property hold_repeat

If `True`⁸²⁷, *when_held* (page 202) will be executed repeatedly with *hold_time* (page 202) seconds between each invocation.

property hold_time

The length of time (in seconds) to wait after the device is activated, until executing the *when_held* (page 202) handler. If *hold_repeat* (page 202) is `True`, this is also the length of time between invocations of *when_held* (page 202).

property is_held

When `True`⁸²⁸, the device has been active for at least *hold_time* (page 202) seconds.

when_held

The function to run when the device has remained active for *hold_time* (page 202) seconds.

This can be set to a function which accepts no (mandatory) parameters, or a Python function which accepts a single mandatory parameter (with as many optional parameters as you like). If the function accepts a single mandatory parameter, the device that activated will be passed as that parameter.

Set this property to `None`⁸²⁹ (the default) to disable the event.

⁸²⁵ <https://docs.python.org/3.9/library/constants.html#True>

⁸²⁶ <https://docs.python.org/3.9/library/constants.html#None>

⁸²⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁸²⁸ <https://docs.python.org/3.9/library/constants.html#True>

⁸²⁹ <https://docs.python.org/3.9/library/constants.html#None>

API - DEVICE SOURCE TOOLS

GPIO Zero includes several utility routines which are intended to be used with the *Source/Values* (page 61) attributes common to most devices in the library. These utility routines are in the `tools` module of GPIO Zero and are typically imported as follows:

```
from gpiozero.tools import scaled, negated, all_values
```

Given that *source* (page 200) and *values* (page 200) deal with infinite iterators, another excellent source of utilities is the `itertools`⁸³⁰ module in the standard library.

20.1 Single source conversions

`gpiozero.tools.absoluted(values)`

Returns *values* with all negative elements negated (so that they're positive). For example:

```
from gpiozero import PWMLED, Motor, MCP3008
from gpiozero.tools import absoluted, scaled
from signal import pause

led = PWMLED(4)
motor = Motor(22, 27)
pot = MCP3008(channel=0)

motor.source = scaled(pot, -1, 1)
led.source = absoluted(motor)

pause()
```

`gpiozero.tools.booleanized(values, min_value, max_value, hysteresis=0)`

Returns True for each item in *values* between *min_value* and *max_value*, and False otherwise. *hysteresis* can optionally be used to add *hysteresis*⁸³¹ which prevents the output value rapidly flipping when the input value is fluctuating near the *min_value* or *max_value* thresholds. For example, to light an LED only when a potentiometer is between $\frac{1}{4}$ and $\frac{3}{4}$ of its full range:

```
from gpiozero import LED, MCP3008
from gpiozero.tools import booleanized
from signal import pause

led = LED(4)
pot = MCP3008(channel=0)

led.source = booleanized(pot, 0.25, 0.75)

pause()
```

⁸³⁰ <https://docs.python.org/3.9/library/itertools.html#module-itertools>

`gpiozero.tools.clamped` (*values*, *output_min*=0, *output_max*=1)

Returns *values* clamped from *output_min* to *output_max*, i.e. any items less than *output_min* will be returned as *output_min* and any items larger than *output_max* will be returned as *output_max* (these default to 0 and 1 respectively). For example:

```
from gpiozero import PWMLED, MCP3008
from gpiozero.tools import clamped
from signal import pause

led = PWMLED(4)
pot = MCP3008(channel=0)

led.source = clamped(pot, 0.5, 1.0)

pause()
```

`gpiozero.tools.inverted` (*values*, *input_min*=0, *input_max*=1)

Returns the inversion of the supplied values (*input_min* becomes *input_max*, *input_max* becomes *input_min*, *input_min* + 0.1 becomes *input_max* - 0.1, etc.). All items in *values* are assumed to be between *input_min* and *input_max* (which default to 0 and 1 respectively), and the output will be in the same range. For example:

```
from gpiozero import MCP3008, PWMLED
from gpiozero.tools import inverted
from signal import pause

led = PWMLED(4)
pot = MCP3008(channel=0)

led.source = inverted(pot)

pause()
```

`gpiozero.tools.negated` (*values*)

Returns the negation of the supplied values (`True`⁸³² becomes `False`⁸³³, and `False`⁸³⁴ becomes `True`⁸³⁵). For example:

```
from gpiozero import Button, LED
from gpiozero.tools import negated
from signal import pause

led = LED(4)
btn = Button(17)

led.source = negated(btn)

pause()
```

`gpiozero.tools.post_delayed` (*values*, *delay*)

Waits for *delay* seconds after returning each item from *values*.

`gpiozero.tools.post_periodic_filtered` (*values*, *repeat_after*, *block*)

After every *repeat_after* items, blocks the next *block* items from *values*. Note that unlike `pre_periodic_filtered()` (page 205), *repeat_after* can't be 0. For example, to block every tenth item read from an ADC:

⁸³¹ <https://en.wikipedia.org/wiki/Hysteresis>

⁸³² <https://docs.python.org/3.9/library/constants.html#True>

⁸³³ <https://docs.python.org/3.9/library/constants.html#False>

⁸³⁴ <https://docs.python.org/3.9/library/constants.html#False>

⁸³⁵ <https://docs.python.org/3.9/library/constants.html#True>


```
from gpiozero import MCP3008
from gpiozero.tools import post_periodic_filtered

adc = MCP3008(channel=0)

for value in post_periodic_filtered(adc, 9, 1):
    print(value)
```

`gpiozero.tools.pre_delayed(values, delay)`

Waits for *delay* seconds before returning each item from *values*.

`gpiozero.tools.pre_periodic_filtered(values, block, repeat_after)`

Blocks the first *block* items from *values*, repeating the block after every *repeat_after* items, if *repeat_after* is non-zero. For example, to discard the first 50 values read from an ADC:

```
from gpiozero import MCP3008
from gpiozero.tools import pre_periodic_filtered

adc = MCP3008(channel=0)

for value in pre_periodic_filtered(adc, 50, 0):
    print(value)
```

Or to only display every even item read from an ADC:

```
from gpiozero import MCP3008
from gpiozero.tools import pre_periodic_filtered

adc = MCP3008(channel=0)

for value in pre_periodic_filtered(adc, 1, 1):
    print(value)
```

`gpiozero.tools.quantized(values, steps, input_min=0, input_max=1)`

Returns *values* quantized to *steps* increments. All items in *values* are assumed to be between *input_min* and *input_max* (which default to 0 and 1 respectively), and the output will be in the same range.

For example, to quantize values between 0 and 1 to 5 “steps” (0.0, 0.25, 0.5, 0.75, 1.0):

```
from gpiozero import PWMLED, MCP3008
from gpiozero.tools import quantized
from signal import pause

led = PWMLED(4)
pot = MCP3008(channel=0)

led.source = quantized(pot, 4)

pause()
```

`gpiozero.tools.queued(values, qsize)`

Queues up readings from *values* (the number of readings queued is determined by *qsize*) and begins yielding values only when the queue is full. For example, to “cascade” values along a sequence of LEDs:

```
from gpiozero import LEDBoard, Button
from gpiozero.tools import queued
from signal import pause

leds = LEDBoard(5, 6, 13, 19, 26)
btn = Button(17)
```

(continues on next page)

(continued from previous page)

```
for i in range(4):
    leds[i].source = queued(leds[i + 1], 5)
    leds[i].source_delay = 0.01

leds[4].source = btn

pause()
```

`gpiozero.tools.smoothed` (*values*, *qsize*, *average*=<function mean>)

Queues up readings from *values* (the number of readings queued is determined by *qsize*) and begins yielding the *average* of the last *qsize* values when the queue is full. The larger the *qsize*, the more the values are smoothed. For example, to smooth the analog values read from an ADC:

```
from gpiozero import MCP3008
from gpiozero.tools import smoothed

adc = MCP3008(channel=0)

for value in smoothed(adc, 5):
    print(value)
```

`gpiozero.tools.scaled` (*values*, *output_min*, *output_max*, *input_min*=0, *input_max*=1)

Returns *values* scaled from *output_min* to *output_max*, assuming that all items in *values* lie between *input_min* and *input_max* (which default to 0 and 1 respectively). For example, to control the direction of a motor (which is represented as a value between -1 and 1) using a potentiometer (which typically provides values between 0 and 1):

```
from gpiozero import Motor, MCP3008
from gpiozero.tools import scaled
from signal import pause

motor = Motor(20, 21)
pot = MCP3008(channel=0)

motor.source = scaled(pot, -1, 1)

pause()
```

Warning: If *values* contains elements that lie outside *input_min* to *input_max* (inclusive) then the function will not produce values that lie within *output_min* to *output_max* (inclusive).

20.2 Combining sources

`gpiozero.tools.all_values` (**values*)

Returns the [logical conjunction](#)⁸³⁶ of all supplied values (the result is only `True`⁸³⁷ if and only if all input values are simultaneously `True`⁸³⁸). One or more *values* can be specified. For example, to light an [LED](#) (page 125) only when *both* buttons are pressed:

```
from gpiozero import LED, Button
from gpiozero.tools import all_values
from signal import pause

led = LED(4)
btn1 = Button(20)
btn2 = Button(21)
```

(continues on next page)

(continued from previous page)

```
led.source = all_values(btn1, btn2)

pause()
```

`gpiozero.tools.any_values(*values)`

Returns the [logical disjunction](#)⁸³⁹ of all supplied values (the result is `True`⁸⁴⁰ if any of the input values are currently `True`⁸⁴¹). One or more *values* can be specified. For example, to light an [LED](#) (page 125) when *any* button is pressed:

```
from gpiozero import LED, Button
from gpiozero.tools import any_values
from signal import pause

led = LED(4)
btn1 = Button(20)
btn2 = Button(21)

led.source = any_values(btn1, btn2)

pause()
```

`gpiozero.tools.averaged(*values)`

Returns the mean of all supplied values. One or more *values* can be specified. For example, to light a [PWMLED](#) (page 127) as the average of several potentiometers connected to an [MCP3008](#) (page 149) ADC:

```
from gpiozero import MCP3008, PWMLED
from gpiozero.tools import averaged
from signal import pause

pot1 = MCP3008(channel=0)
pot2 = MCP3008(channel=1)
pot3 = MCP3008(channel=2)
led = PWMLED(4)

led.source = averaged(pot1, pot2, pot3)

pause()
```

`gpiozero.tools.multiplied(*values)`

Returns the product of all supplied values. One or more *values* can be specified. For example, to light a [PWMLED](#) (page 127) as the product (i.e. multiplication) of several potentiometers connected to an [MCP3008](#) (page 149) ADC:

```
from gpiozero import MCP3008, PWMLED
from gpiozero.tools import multiplied
from signal import pause

pot1 = MCP3008(channel=0)
pot2 = MCP3008(channel=1)
pot3 = MCP3008(channel=2)
led = PWMLED(4)

led.source = multiplied(pot1, pot2, pot3)
```

(continues on next page)

⁸³⁶ https://en.wikipedia.org/wiki/Logical_conjunction

⁸³⁷ <https://docs.python.org/3.9/library/constants.html#True>

⁸³⁸ <https://docs.python.org/3.9/library/constants.html#True>

⁸³⁹ https://en.wikipedia.org/wiki/Logical_disjunction

⁸⁴⁰ <https://docs.python.org/3.9/library/constants.html#True>

⁸⁴¹ <https://docs.python.org/3.9/library/constants.html#True>

(continued from previous page)

```
pause()
```

`gpiozero.tools.summed(*values)`

Returns the sum of all supplied values. One or more *values* can be specified. For example, to light a [PWMLED](#) (page 127) as the (scaled) sum of several potentiometers connected to an [MCP3008](#) (page 149) ADC:

```
from gpiozero import MCP3008, PWMLED
from gpiozero.tools import summed, scaled
from signal import pause

pot1 = MCP3008(channel=0)
pot2 = MCP3008(channel=1)
pot3 = MCP3008(channel=2)
led = PWMLED(4)

led.source = scaled(summed(pot1, pot2, pot3), 0, 1, 0, 3)

pause()
```

`gpiozero.tools.zip_values(*devices)`

Provides a source constructed from the values of each item, for example:

```
from gpiozero import MCP3008, Robot
from gpiozero.tools import zip_values
from signal import pause

robot = Robot(left=(4, 14), right=(17, 18))

left = MCP3008(0)
right = MCP3008(1)

robot.source = zip_values(left, right)

pause()
```

`zip_values(left, right)` is equivalent to `zip(left.values, right.values)`.

20.3 Artificial sources

`gpiozero.tools.alternating_values(initial_value=False)`

Provides an infinite source of values alternating between `True`⁸⁴² and `False`⁸⁴³, starting with *initial_value* (which defaults to `False`⁸⁴⁴). For example, to produce a flashing LED:

```
from gpiozero import LED
from gpiozero.tools import alternating_values
from signal import pause

red = LED(2)

red.source_delay = 0.5
red.source = alternating_values()

pause()
```

⁸⁴² <https://docs.python.org/3.9/library/constants.html#True>

⁸⁴³ <https://docs.python.org/3.9/library/constants.html#False>

⁸⁴⁴ <https://docs.python.org/3.9/library/constants.html#False>

`gpiozero.tools.cos_values (period=360)`

Provides an infinite source of values representing a cosine wave (from -1 to +1) which repeats every *period* values. For example, to produce a “siren” effect with a couple of LEDs that repeats once a second:

```
from gpiozero import PWMLED
from gpiozero.tools import cos_values, scaled_half, inverted
from signal import pause

red = PWMLED(2)
blue = PWMLED(3)

red.source_delay = 0.01
blue.source_delay = red.source_delay
red.source = scaled_half(cos_values(100))
blue.source = inverted(red)

pause()
```

If you require a different range than -1 to +1, see [`scaled\(\)`](#) (page 206).

`gpiozero.tools.ramping_values (period=360)`

Provides an infinite source of values representing a triangle wave (from 0 to 1 and back again) which repeats every *period* values. For example, to pulse an LED once a second:

```
from gpiozero import PWMLED
from gpiozero.tools import ramping_values
from signal import pause

red = PWMLED(2)

red.source_delay = 0.01
red.source = ramping_values(100)

pause()
```

If you require a wider range than 0 to 1, see [`scaled\(\)`](#) (page 206).

`gpiozero.tools.random_values ()`

Provides an infinite source of random values between 0 and 1. For example, to produce a “flickering candle” effect with an LED:

```
from gpiozero import PWMLED
from gpiozero.tools import random_values
from signal import pause

led = PWMLED(4)

led.source = random_values()

pause()
```

If you require a wider range than 0 to 1, see [`scaled\(\)`](#) (page 206).

`gpiozero.tools.sin_values (period=360)`

Provides an infinite source of values representing a sine wave (from -1 to +1) which repeats every *period* values. For example, to produce a “siren” effect with a couple of LEDs that repeats once a second:

```
from gpiozero import PWMLED
from gpiozero.tools import sin_values, scaled_half, inverted
from signal import pause

red = PWMLED(2)
```

(continues on next page)

(continued from previous page)

```
blue = PWMLED(3)

red.source_delay = 0.01
blue.source_delay = red.source_delay
red.source = scaled_half(sin_values(100))
blue.source = inverted(red)

pause()
```

If you require a different range than -1 to +1, see [*scaled\(\)*](#) (page 206).

API - FONTS

GPIO Zero includes a concept of “fonts” which is somewhat different to that you may be familiar with. While a typical printing font determines how a particular character is rendered on a page, a GPIO Zero font determines how a particular character is rendered by a series of lights, like LED segments (e.g. with `LEDCharDisplay` (page 162) or `LEDMultiCharDisplay` (page 163)).

As a result, GPIO Zero’s fonts are quite crude affairs, being little more than mappings of characters to tuples of LED states. Still, it helps to have a “friendly” format for creating such fonts, and in this module the library provides several routines for this purpose.

The module itself is typically imported as follows:

```
from gpiozero import fonts
```

21.1 Font Parsing

`gpiozero.fonts.load_font_7seg(filename_or_obj)`

Given a filename or a file-like object, parse it as an font definition for a 7-segment display⁸⁴⁵, returning a `dict`⁸⁴⁶ suitable for use with `LEDCharDisplay` (page 162).

The file-format is a simple text-based format in which blank and #-prefixed lines are ignored. All other lines are assumed to be groups of character definitions which are cells of 3x3 characters laid out as follows:

```
Ca
fgb
edc
```

Where C is the character being defined, and a-g define the states of the LEDs for that position. a, d, and g are on if they are “_”. b, c, e, and f are on if they are “|”. Any other character in these positions is considered off. For example, you might define the following characters:

```
. 0_ 1. 2_ 3_ 4. 5_ 6_ 7_ 8_ 9_
... |.| ..| ._| |_| |_. |_. ..| |_| |_|
... |_| ..| |_. ._| ..| ._| |_| ..| |_| ._|
```

In the example above, empty locations are marked with “.” but could mostly be left as spaces. However, the first item defines the space (“ ”) character and needs *some* non-space characters in its definition as the parser also strips empty columns (as typically occur between character definitions). This is also why the definition for “1” must include something to fill the middle column.

`gpiozero.fonts.load_font_14seg(filename_or_obj)`

Given a filename or a file-like object, parse it as a font definition for a 14-segment display⁸⁴⁷, returning a `dict`⁸⁴⁸ suitable for use with `LEDCharDisplay` (page 162).

⁸⁴⁵ https://en.wikipedia.org/wiki/Seven-segment_display

⁸⁴⁶ <https://docs.python.org/3.9/library/stdtypes.html#dict>

The file-format is a simple text-based format in which blank and #-prefixed lines are ignored. All other lines are assumed to be groups of character definitions which are cells of 5x5 characters laid out as follows:

```
X.a..
fijkb
.g.h.
elmnc
..d..
```

Where X is the character being defined, and a-n define the states of the LEDs for that position. a, d, g, and h are on if they are “-”. b, c, e, f, j, and m are on if they are “|”. i and n are on if they are “/”. Finally, k and l are on if they are “/”. Any other character in these positions is considered off. For example, you might define the following characters:

```
.... 0--- 1.. 2--- 3--- 4 5--- 6--- 7---. 8--- 9---
..... | / | / | | | | | / | | | |
..... | / | | --- -- ---| --- |--- | --- ---|
..... | / | | | --- | | | | | | | |
..... --- --- --- --- --- ---
```

In the example above, several locations have extraneous characters. For example, the “/” in the center of the “0” definition, or the “-” in the middle of the “8”. These locations are ignored, but filled in nonetheless to make the shape more obvious.

These extraneous locations could equally well be left as spaces. However, the first item defines the space (“ ”) character and needs *some* non-space characters in its definition as the parser also strips empty columns (as typically occur between character definitions) and verifies that definitions are 5 columns wide and 5 rows high.

This also explains why place-holder characters (“.”) have been inserted at the top of the definition of the “1” character. Otherwise the parser will strip these empty columns and decide the definition is invalid (as the result is only 3 columns wide).

`gpizero.fonts.load_segment_font(filename_or_obj, width, height, pins)`

A generic function for parsing segment font definition files.

If you’re working with “standard” 7-segment⁸⁴⁹ or 14-segment⁸⁵⁰ displays you *don’t* want this function; see `load_font_7seg()` (page 211) or `load_font_14seg()` (page 211) instead. However, if you are working with another style of segmented display and wish to construct a parser for a custom format, this is the function you want.

The `filename_or_obj` parameter is simply the file-like object or filename to load. This is typically passed in from the calling function.

The `width` and `height` parameters give the width and height in characters of each character definition. For example, these are 3 and 3 for 7-segment displays. Finally, `pins` is a list of tuples that defines the position of each pin definition in the character array, and the character that marks that position “active”.

For example, for 7-segment displays this function is called as follows:

```
load_segment_font(filename_or_obj, width=3, height=3, pins=[
    (1, '_'), (5, '|'), (8, '|'), (7, '_'),
    (6, '|'), (3, '|'), (4, '_')])
```

This dictates that each character will be defined by a 3x3 character grid which will be converted into a nine-character string like so:

```
012
345 ==> '012345678'
678
```

⁸⁴⁷ https://en.wikipedia.org/wiki/Fourteen-segment_display

⁸⁴⁸ <https://docs.python.org/3.9/library/stdtypes.html#dict>

Position 0 is always assumed to be the character being defined. The *pins* list then specifies: the first pin is the character at position 1 which will be “on” when that character is “_”. The second pin is the character at position 5 which will be “on” when that character is “l”, and so on.

⁸⁴⁹ https://en.wikipedia.org/wiki/Seven-segment_display

⁸⁵⁰ https://en.wikipedia.org/wiki/Fourteen-segment_display

API - TONES

GPIO Zero includes a *Tone* (page 215) class intended for use with the *TonalBuzzer* (page 133). This class is in the `tones` module of GPIO Zero and is typically imported as follows:

```
from gpiozero.tones import Tone
```

22.1 Tone

class `gpiozero.tones.Tone` (*value=None*, *, *frequency=None*, *midi=None*, *note=None*)

Represents a frequency of sound in a variety of musical notations.

Tone (page 215) class can be used with the *TonalBuzzer* (page 133) class to easily represent musical tones. The class can be constructed in a variety of ways. For example as a straight frequency in *Hz*⁸⁵¹ (which is the internal storage format), as an integer MIDI note, or as a string representation of a musical note.

All the following constructors are equivalent ways to construct the typical tuning note, *concert A*⁸⁵² at 440Hz, which is MIDI note #69:

```
>>> from gpiozero.tones import Tone
>>> Tone(440.0)
>>> Tone(69)
>>> Tone('A4')
```

If you do not want the constructor to guess which format you are using (there is some ambiguity between frequencies and MIDI notes at the bottom end of the frequencies, from 128Hz down), you can use one of the explicit constructors, *from_frequency()* (page 216), *from_midi()* (page 216), or *from_note()* (page 216), or you can specify a keyword argument when constructing:

```
>>> Tone.from_frequency(440)
>>> Tone.from_midi(69)
>>> Tone.from_note('A4')
>>> Tone(frequency=440)
>>> Tone(midi=69)
>>> Tone(note='A4')
```

Several attributes are provided to permit conversion to any of the supported construction formats: *frequency* (page 216), *midi* (page 216), and *note* (page 216). Methods are provided to step *up()* (page 216) or *down()* (page 215) to adjacent MIDI notes.

Warning: Currently *Tone* (page 215) derives from *float*⁸⁵³ and can be used as a floating point number in most circumstances (addition, subtraction, etc). This part of the API is not yet considered “stable”; i.e. we may decide to enhance / change this behaviour in future versions.

down (*n=1*)

Return the [Tone](#) (page 215) *n* semi-tones below this frequency (*n* defaults to 1).

classmethod from_frequency (*freq*)

Construct a [Tone](#) (page 215) from a frequency specified in [Hz](#)⁸⁵⁴ which must be a positive floating-point value in the range $0 < \text{freq} \leq 20000$.

classmethod from_midi (*midi_note*)

Construct a [Tone](#) (page 215) from a MIDI note, which must be an integer in the range 0 to 127. For reference, A4 ([concert A](#)⁸⁵⁵ typically used for tuning) is MIDI note #69.

classmethod from_note (*note*)

Construct a [Tone](#) (page 215) from a musical note which must consist of a capital letter A through G, followed by an optional semi-tone modifier (“b” for flat, “#” for sharp, or their Unicode equivalents), followed by an octave number (0 through 9).

For example [concert A](#)⁸⁵⁶, the typical tuning note at 440Hz, would be represented as “A4”. One semi-tone above this would be “A#4” or alternatively “Bb4”. Unicode representations of sharp and flat are also accepted.

up (*n=1*)

Return the [Tone](#) (page 215) *n* semi-tones above this frequency (*n* defaults to 1).

property frequency

Return the frequency of the tone in [Hz](#)⁸⁵⁷.

property midi

Return the (nearest) MIDI note to the tone’s frequency. This will be an integer number in the range 0 to 127. If the frequency is outside the range represented by MIDI notes (which is approximately 8Hz to 12.5KHz) [ValueError](#)⁸⁵⁸ exception will be raised.

property note

Return the (nearest) note to the tone’s frequency. This will be a string in the form accepted by [from_note\(\)](#) (page 216). If the frequency is outside the range represented by this format (“A0” is approximately 27.5Hz, and “G9” is approximately 12.5Khz) a [ValueError](#)⁸⁵⁹ exception will be raised.

⁸⁵¹ <https://en.wikipedia.org/wiki/Hertz>

⁸⁵² https://en.wikipedia.org/wiki/Concert_pitch

⁸⁵³ <https://docs.python.org/3.9/library/functions.html#float>

⁸⁵⁴ <https://en.wikipedia.org/wiki/Hertz>

⁸⁵⁵ https://en.wikipedia.org/wiki/Concert_pitch

⁸⁵⁶ https://en.wikipedia.org/wiki/Concert_pitch

⁸⁵⁷ <https://en.wikipedia.org/wiki/Hertz>

⁸⁵⁸ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁸⁵⁹ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

API - PI INFORMATION

The GPIO Zero library also contains a database of information about the various revisions of the Raspberry Pi computer. This is used internally to raise warnings when non-physical pins are used, or to raise exceptions when pull-downs are requested on pins with physical pull-up resistors attached. The following functions and classes can be used to query this database:

23.1 pi_info

`gpiozero.pi_info (revision=None)`

Deprecated function for retrieving information about a *revision* of the Raspberry Pi. If you wish to retrieve information about the board that your script is running on, please query the `Factory.board_info` (page 227) property like so:

```
>>> from gpiozero import Device
>>> Device.ensure_pin_factory()
>>> Device.pin_factory.board_info
PiBoardInfo(revision='a02082', model='3B', pcb_revision='1.2',
released='2016Q1', soc='BCM2837', manufacturer='Sony', memory=1024,
storage='MicroSD', usb=4, usb3=0, ethernet=1, eth_speed=100, wifi=True,
bluetooth=True, csi=1, dsi=1, headers=..., board=...)
```

To obtain information for a specific Raspberry Pi board revision, use the `PiBoardInfo.from_revision()` constructor.

Parameters

revision (*str*⁸⁶⁰) – The revision of the Pi to return information about. If this is omitted or `None`⁸⁶¹ (the default), then the library will attempt to determine the model of Pi it is running on and return information about that.

23.2 PiBoardInfo

```
class gpiozero.PiBoardInfo (revision, model, pcb_revision, released, soc, manufacturer, memory,
                             storage, usb, usb3, ethernet, eth_speed, wifi, bluetooth, csi, dsi, headers,
                             board)
```

⁸⁶⁰ <https://docs.python.org/3.9/library/stdtypes.html#str>

⁸⁶¹ <https://docs.python.org/3.9/library/constants.html#None>

23.3 HeaderInfo

class gpiozero.HeaderInfo (name, rows, columns, pins)

This class is a `namedtuple()`⁸⁶² derivative used to represent information about a pin header on a board. The object can be used in a format string with various custom specifications:

```
from gpiozero.pins.native import NativeFactory

factory = NativeFactory()
j8 = factory.board_info.headers['J8']
print(f'{j8}')
print(f'{j8:full}')
p1 = factory.board_info.headers['P1']
print(f'{p1:col2}')
print(f'{p1:row1}')
```

“color” and “mono” can be prefixed to format specifications to force the use of [ANSI color codes](#)⁸⁶³. If neither is specified, ANSI codes will only be used if stdout is detected to be a tty. “rev” can be added to output the row or column in reverse order:

```
# force use of ANSI codes
j8 = factory.board_info.headers['J8']
print(f'{j8:color row2}')
# force plain ASCII
print(f'{j8:mono row2}')
# output in reverse order
print(f'{j8:color rev row1}')
```

The following attributes are defined:

pprint (color=None)

Pretty-print a diagram of the header pins.

If *color* is `None`⁸⁶⁴ (the default, the diagram will include ANSI color codes if stdout is a color-capable terminal). Otherwise *color* can be set to `True`⁸⁶⁵ or `False`⁸⁶⁶ to force color or monochrome output.

name

The name of the header, typically as it appears silk-screened on the board (e.g. “P1” or “J8”).

rows

The number of rows on the header.

columns

The number of columns on the header.

pins

A dictionary mapping physical pin numbers to [PinInfo](#) (page 219) tuples.

⁸⁶² <https://docs.python.org/3.9/library/collections.html#collections.namedtuple>

⁸⁶³ https://en.wikipedia.org/wiki/ANSI_escape_code

⁸⁶⁴ <https://docs.python.org/3.9/library/constants.html#None>

⁸⁶⁵ <https://docs.python.org/3.9/library/constants.html#True>

⁸⁶⁶ <https://docs.python.org/3.9/library/constants.html#False>

23.4 PinInfo

class `gpiozero.PinInfo` (*number, name, names, pull, row, col, interfaces*)

This class is a `namedtuple()`⁸⁶⁷ derivative used to represent information about a pin present on a GPIO header. The following attributes are defined:

number

An integer containing the physical pin number on the header (starting from 1 in accordance with convention).

name

A string describing the function of the pin. Some common examples include “GND” (for pins connecting to ground), “3V3” (for pins which output 3.3 volts), “GPIO9” (for GPIO9 in the board’s numbering scheme), etc.

names

A set of all the names that can be used to identify this pin with `BoardInfo.find_pin()`. The *name* (page 219) attribute is the “typical” name for this pin, and will be one of the values in this set.

When “gpio” is in *interfaces* (page 219), these names can be used with *Factory.pin()* (page 226) to construct a *Pin* (page 227) instance representing this pin.

pull

A string indicating the fixed pull of the pin, if any. This is a blank string if the pin has no fixed pull, but may be “up” in the case of pins typically used for I2C such as GPIO2 and GPIO3 on a Raspberry Pi.

row

An integer indicating on which row the pin is physically located in the header (1-based)

col

An integer indicating in which column the pin is physically located in the header (1-based)

interfaces

A `dict`⁸⁶⁸ mapping interfaces that this pin can be a part of to the description of that pin in that interface (e.g. “i2c” might map to “I2C0 SDA”). Typical keys are “gpio”, “spi”, “i2c”, “uart”, “pwm”, “smi”, and “dpi”.

pull_up

Deprecated variant of *pull* (page 219).

function

Deprecated alias of *name* (page 219).

⁸⁶⁷ <https://docs.python.org/3.9/library/collections.html#collections.namedtuple>


⁸⁶⁸ <https://docs.python.org/3.9/library/stdtypes.html#dict>

API - PINS

As of release 1.1, the GPIO Zero library can be roughly divided into two things: pins and the devices that are connected to them. The majority of the documentation focuses on devices as pins are below the level that most users are concerned with. However, some users may wish to take advantage of the capabilities of alternative GPIO implementations or (in future) use GPIO extender chips. This is the purpose of the pins portion of the library.

When you construct a device, you pass in a pin specification. This is passed to a pin *Factory* (page 226) which turns it into a *Pin* (page 227) implementation. The default factory can be queried (and changed) with *Device.pin_factory* (page 199). However, all classes (even internal devices) accept a *pin_factory* keyword argument to their constructors permitting the factory to be overridden on a per-device basis (the reason for allowing per-device factories is made apparent in the *Configuring Remote GPIO* (page 45) chapter).

This is illustrated in the following flow-chart:

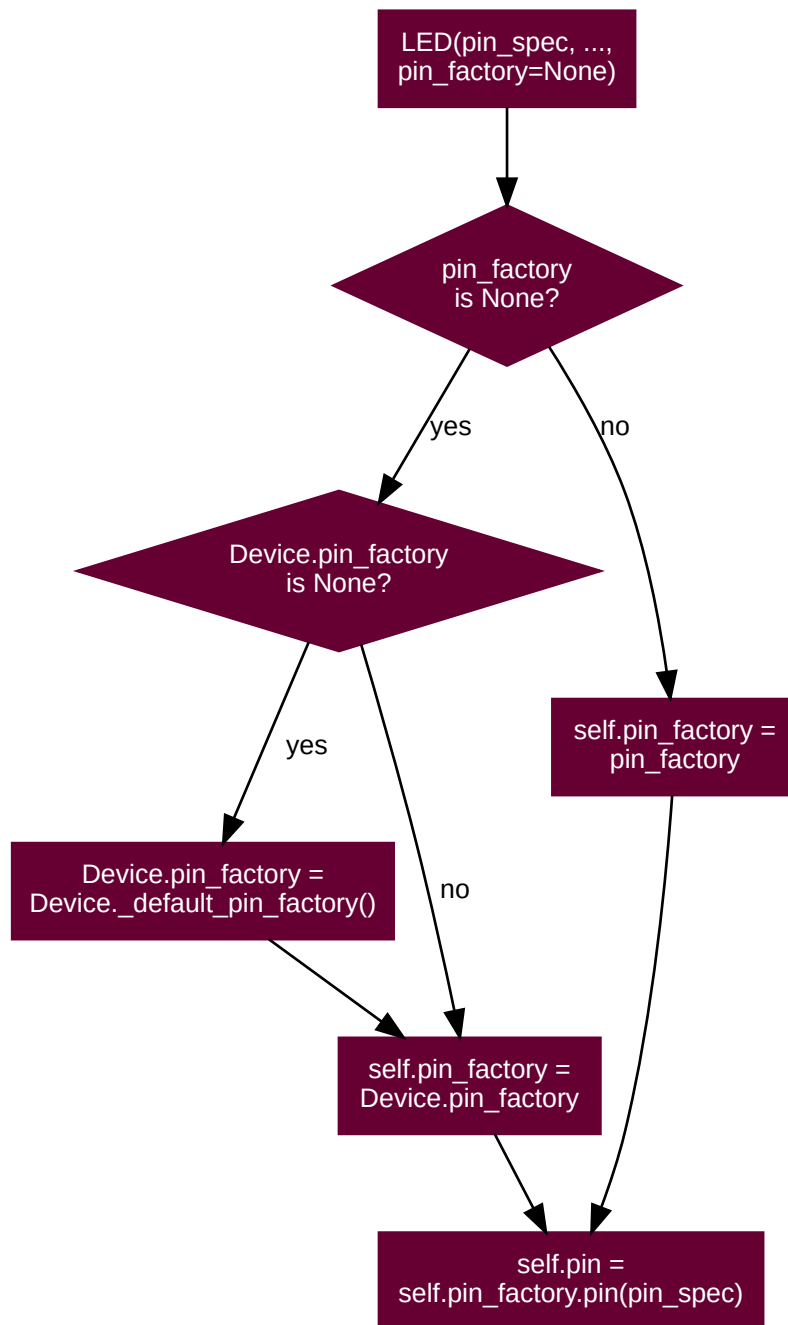

The default factory is constructed when the first device is initialised; if no default factory can be constructed (e.g. because no GPIO implementations are installed, or all of them fail to load for whatever reason), a *BadPinFactory* (page 240) exception will be raised at construction time.

After importing gpiozero, until constructing a gpiozero device, the pin factory is `None`⁸⁶⁹, but at the point of first construction the default pin factory will come into effect:

```

pi@raspberrypi:~ $ python3
Python 3.7.3 (default, Apr  3 2019, 05:39:12)
[GCC 8.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>> from gpiozero import Device, LED
>>> print(Device.pin_factory)
None
>>> led = LED(2)
  
```

(continues on next page)

⁸⁶⁹ <https://docs.python.org/3.9/library/constants.html#None>

(continued from previous page)

```
>>> Device.pin_factory
<gpiozero.pins.rpigpio.RPiGPIOFactory object at 0xb667ae30>
>>> led.pin_factory
<gpiozero.pins.rpigpio.RPiGPIOFactory object at 0xb6323530>
```

As above, on a Raspberry Pi with the RPi.GPIO library installed, (assuming no environment variables are set), the default pin factory will be *RPiGPIOFactory* (page 235).

On a PC (with no pin libraries installed and no environment variables set), importing will work but attempting to create a device will raise *BadPinFactory* (page 240):

```
ben@magicman:~ $ python3
Python 3.6.8 (default, Aug 20 2019, 17:12:48)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>> from gpiozero import Device, LED
>>> print(Device.pin_factory)
None
>>> led = LED(2)
...
BadPinFactory: Unable to load any default pin factory!
```

24.1 Changing the pin factory

The default pin factory can be replaced by specifying a value for the *GPIOZERO_PIN_FACTORY* (page 77) environment variable. For example:

```
pi@raspberrypi:~ $ GPIOZERO_PIN_FACTORY=native python3
Python 3.7.3 (default, Apr 3 2019, 05:39:12)
[GCC 8.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>> from gpiozero import Device
>>> Device._default_pin_factory()
<gpiozero.pins.native.NativeFactory object at 0x762c26b0>
```

To set the *GPIOZERO_PIN_FACTORY* (page 77) for the rest of your session you can **export** this value:

```
pi@raspberrypi:~ $ export GPIOZERO_PIN_FACTORY=native
pi@raspberrypi:~ $ python3
Python 3.7.3 (default, Apr 3 2019, 05:39:12)
[GCC 8.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>> import gpiozero
>>> Device._default_pin_factory()
<gpiozero.pins.native.NativeFactory object at 0x762c26b0>
>>> quit()
pi@raspberrypi:~ $ python3
Python 3.7.3 (default, Apr 3 2019, 05:39:12)
[GCC 8.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>> import gpiozero
>>> Device._default_pin_factory()
<gpiozero.pins.native.NativeFactory object at 0x762c26b0>
```

If you add the **export** command to your `~/ .bashrc` file, you'll set the default pin factory for all future sessions too.

If the environment variable is set, the corresponding pin factory will be used, otherwise each of the four GPIO pin factories will be attempted to be used in turn.

The following values, and the corresponding *Factory* (page 226) and *Pin* (page 227) classes are listed in the table below. Factories are listed in the order that they are tried by default.

Name	Factory class	Pin class
lgpio	<code>gpiozero.pins.lgpio.LGPIOWFactory</code> (page 235)	<code>gpiozero.pins.lgpio.LGPIOPin</code> (page 236)
rpigpio	<code>gpiozero.pins.rpigpio.RPiGPIOWFactory</code> (page 235)	<code>gpiozero.pins.rpigpio.RPiGPIOPin</code> (page 235)
pigpio	<code>gpiozero.pins.pigpio.PiGPIOWFactory</code> (page 236)	<code>gpiozero.pins.pigpio.PiGPIOPin</code> (page 236)
native	<code>gpiozero.pins.native.NativeFactory</code> (page 237)	<code>gpiozero.pins.native.NativePin</code> (page 237)

If you need to change the default pin factory from within a script, either set `Device.pin_factory` (page 199) to the new factory instance to use:

```
from gpiozero.pins.native import NativeFactory
from gpiozero import Device, LED

Device.pin_factory = NativeFactory()

# These will now implicitly use NativePin instead of RPiGPIOPin
led1 = LED(16)
led2 = LED(17)
```

Or use the `pin_factory` keyword parameter mentioned above:

```
from gpiozero.pins.native import NativeFactory
from gpiozero import LED

my_factory = NativeFactory()

# This will use NativePin instead of RPiGPIOPin for led1
# but led2 will continue to use RPiGPIOPin
led1 = LED(16, pin_factory=my_factory)
led2 = LED(17)
```

Certain factories may take default information from additional sources. For example, to default to creating pins with `gpiozero.pins.pigpio.PiGPIOPin` (page 236) on a remote pi called “remote-pi” you can set the `PIGPIO_ADDR` (page 77) environment variable when running your script:

```
$ GPIOZERO_PIN_FACTORY=pigpio PIGPIO_ADDR=remote-pi python3 my_script.py
```

Like the `GPIOZERO_PIN_FACTORY` (page 77) value, these can be exported from your `~/ .bashrc` script too.

Warning: The astute and mischievous reader may note that it is possible to mix factories, e.g. using `RPiGPIOWFactory` (page 235) for one pin, and `NativeFactory` (page 237) for another. This is unsupported, and if it results in your script crashing, your components failing, or your Raspberry Pi turning into an actual raspberry pie, you have only yourself to blame.

Sensible uses of multiple pin factories are given in *Configuring Remote GPIO* (page 45).

24.2 Mock pins

There's also a *MockFactory* (page 237) which generates entirely fake pins. This was originally intended for GPIO Zero developers who wish to write tests for devices without having to have the physical device wired in to their Pi. However, they have also proven useful in developing GPIO Zero scripts without having a Pi to hand. This pin factory will never be loaded by default; it must be explicitly specified, either by setting an environment variable or setting the pin factory within the script. For example:

```
pi@raspberrypi:~ $ GPIOZERO_PIN_FACTORY=mock python3
```

or:

```
from gpiozero import Device, LED
from gpiozero.pins.mock import MockFactory

Device.pin_factory = MockFactory()

led = LED(2)
```

You can create device objects and inspect their value changing as you'd expect:

```
pi@raspberrypi:~ $ GPIOZERO_PIN_FACTORY=mock python3
Python 3.7.3 (default, Apr  3 2019, 05:39:12)
[GCC 8.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>> from gpiozero import LED
>>> led = LED(2)
>>> led.value
0
>>> led.on()
>>> led.value
1
```

You can even control pin state changes to simulate device behaviour:

```
>>> from gpiozero import LED, Button

# Construct a couple of devices attached to mock pins 16 and 17, and link the_
↪ devices
>>> led = LED(17)
>>> btn = Button(16)
>>> led.source = btn

# Initailly the button isn't "pressed" so the LED should be off
>>> led.value
0

# Drive the pin low (this is what would happen electrically when the button is_
↪ pressed)
>>> btn.pin.drive_low()
# The LED is now on
>>> led.value
1

>>> btn.pin.drive_high()
# The button is now "released", so the LED should be off again
>>> led.value
0
```

Several sub-classes of mock pins exist for emulating various other things (pins that do/don't support PWM, pins that are connected together, pins that drive high after a delay, etc), for example, you have to use *MockPWMPin* (page 238) to be able to use devices requiring PWM:

```
pi@raspberrypi:~ $ GPIOZERO_PIN_FACTORY=mock GPIOZERO MOCK_PIN_CLASS=mockpwmpin_
↳python3
```

or:

```
from gpiozero import Device, LED
from gpiozero.pins.mock import MockFactory, MockPWMPin

Device.pin_factory = MockFactory(pin_class=MockPWMPin)

led = LED(2)
```

Interested users are invited to read the [GPIO Zero test suite](#)⁸⁷⁰ for further examples of usage.

24.3 Base classes

`class gpiozero.Factory`

Generates pins and SPI interfaces for devices. This is an abstract base class for pin factories. Descendents *must* override the following methods:

- `ticks()` (page 227)
- `ticks_diff()` (page 227)
- `_get_board_info()`

Descendents *may* override the following methods, if applicable:

- `close()` (page 226)
- `reserve_pins()` (page 226)
- `release_pins()` (page 226)
- `release_all()` (page 226)
- `pin()` (page 226)
- `spi()` (page 227)

`close()`

Closes the pin factory. This is expected to clean up all resources manipulated by the factory. It is typically called at script termination.

`pin(name)`

Creates an instance of a `Pin` (page 227) descendant representing the specified pin.

Warning: Descendents must ensure that pin instances representing the same hardware are identical; i.e. two separate invocations of `pin()` (page 226) for the same pin specification must return the same object.

`release_all(reserver)`

Releases all pin reservations taken out by *reserver*. See `release_pins()` (page 226) for further information).

`release_pins(reserver, *names)`

Releases the reservation of *reserver* against pin *names*. This is typically called during `close()` (page 199) to clean up reservations taken during construction. Releasing a reservation that is not currently held will be silently ignored (to permit clean-up after failed / partial construction).

⁸⁷⁰ <https://github.com/gpiozero/gpiozero/tree/master/tests>

reserve_pins (*requester*, **names*)

Called to indicate that the device reserves the right to use the specified pin *names*. This should be done during device construction. If pins are reserved, you must ensure that the reservation is released by eventually called *release_pins()* (page 226).

spi (***spi_args*)

Returns an instance of an *SPI* (page 230) interface, for the specified SPI *port* and *device*, or for the specified pins (*clock_pin*, *mosi_pin*, *miso_pin*, and *select_pin*). Only one of the schemes can be used; attempting to mix *port* and *device* with pin numbers will raise *SPIBadArgs* (page 240).

ticks ()

Return the current ticks, according to the factory. The reference point is undefined and thus the result of this method is only meaningful when compared to another value returned by this method.

The format of the time is also arbitrary, as is whether the time wraps after a certain duration. Ticks should only be compared using the *ticks_diff()* (page 227) method.

ticks_diff (*later*, *earlier*)

Return the time in seconds between two *ticks()* (page 227) results. The arguments are specified in the same order as they would be in the formula *later - earlier* but the result is guaranteed to be in seconds, and to be positive even if the ticks “wrapped” between calls to *ticks()* (page 227).

property board_info

Returns a *BoardInfo* instance (or derivative) representing the board that instances generated by this factory will be attached to.

class gpiozero.Pin

Abstract base class representing a pin attached to some form of controller, be it GPIO, SPI, ADC, etc.

Descendents should override property getters and setters to accurately represent the capabilities of pins. Descendents *must* override the following methods:

- *_get_info()*
- *_get_function()*
- *_set_function()*
- *_get_state()*

Descendents *may* additionally override the following methods, if applicable:

- *close()* (page 227)
- *output_with_state()* (page 228)
- *input_with_pull()* (page 228)
- *_set_state()*
- *_get_frequency()*
- *_set_frequency()*
- *_get_pull()*
- *_set_pull()*
- *_get_bounce()*
- *_set_bounce()*
- *_get_edges()*
- *_set_edges()*
- *_get_when_changed()*
- *_set_when_changed()*

`close()`

Cleans up the resources allocated to the pin. After this method is called, this *Pin* (page 227) instance may no longer be used to query or control the pin’s state.

`input_with_pull(pull)`

Sets the pin’s function to “input” and specifies an initial pull-up for the pin. By default this is equivalent to performing:

```
pin.function = 'input'
pin.pull = pull
```

However, descendants may override this order to provide the smallest possible delay between configuring the pin for input and pulling the pin up/down (which can be important for avoiding “blips” in some configurations).

`output_with_state(state)`

Sets the pin’s function to “output” and specifies an initial state for the pin. By default this is equivalent to performing:


```
pin.function = 'output'
pin.state = state
```

However, descendants may override this in order to provide the smallest possible delay between configuring the pin for output and specifying an initial value (which can be important for avoiding “blips” in active-low configurations).

property `bounce`

The amount of bounce detection (elimination) currently in use by edge detection, measured in seconds. If bounce detection is not currently in use, this is `None`⁸⁷¹.


For example, if *edges* (page 228) is currently “rising”, *bounce* (page 228) is currently 5/1000 (5ms), then the waveform below will only fire *when_changed* (page 229) on two occasions despite there being three rising edges:

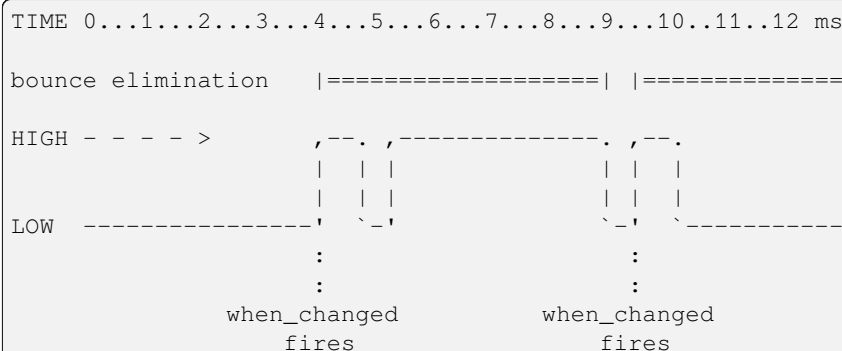

If the pin does not support edge detection, attempts to set this property will raise *PinEdgeDetectUnsupported* (page 242). If the pin supports edge detection, the class must implement bounce detection, even if only in software.

property `edges`

The edge that will trigger execution of the function or bound method assigned to *when_changed* (page 229). This can be one of the strings “both” (the default), “rising”, “falling”, or “none”:

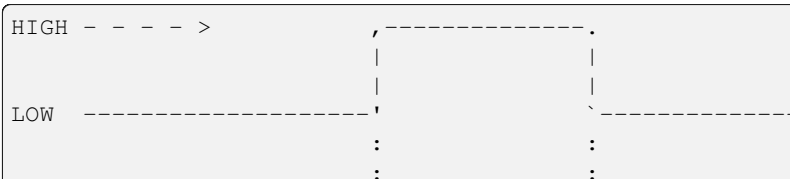

(continues on next page)

(continued from previous page)

Fires when <code>changed</code>	"both"	"both"
when edges is ...	"rising"	"falling"

If the pin does not support edge detection, attempts to set this property will raise `PinEdgeDetectionUnsupported` (page 242).

property frequency

The frequency (in Hz) for the pin's PWM implementation, or `None`⁸⁷² if PWM is not currently in use. This value always defaults to `None`⁸⁷³ and may be changed with certain pin types to activate or deactivate PWM.

If the pin does not support PWM, `PinPWMUnsupported` (page 243) will be raised when attempting to set this to a value other than `None`⁸⁷⁴.

property function

The function of the pin. This property is a string indicating the current function or purpose of the pin. Typically this is the string "input" or "output". However, in some circumstances it can be other strings indicating non-GPIO related functionality.

With certain pin types (e.g. GPIO pins), this attribute can be changed to configure the function of a pin. If an invalid function is specified, for this attribute, `PinInvalidFunction` (page 242) will be raised.

property info

Returns the `PinInfo` (page 219) associated with the pin. This can be used to determine physical properties of the pin, including its location on the header, fixed pulls, and the various specs that can be used to identify it.

property pull

The pull-up state of the pin represented as a string. This is typically one of the strings "up", "down", or "floating" but additional values may be supported by the underlying hardware.

If the pin does not support changing pull-up state (for example because of a fixed pull-up resistor), attempts to set this property will raise `PinFixedPull` (page 242). If the specified value is not supported by the underlying hardware, `PinInvalidPull` (page 242) is raised.

property state

The state of the pin. This is 0 for low, and 1 for high. As a low level view of the pin, no swapping is performed in the case of pull ups (see `pull` (page 229) for more information):

HIGH	- - - - >	,	-----
LOW	-----		

Descendants which implement analog, or analog-like capabilities can return values between 0 and 1. For example, pins implementing PWM (where `frequency` (page 229) is not `None`⁸⁷⁵) return a value between 0.0 and 1.0 representing the current PWM duty cycle.

If a pin is currently configured for input, and an attempt is made to set this attribute, `PinSetInput` (page 242) will be raised. If an invalid value is specified for this attribute, `PinInvalidState` (page 242) will be raised.

property when_changed

A function or bound method to be called when the pin's state changes (more specifically when the edge specified by `edges` (page 228) is detected on the pin). The function or bound method must accept two parameters: the first will report the ticks (from `Factory.ticks()` (page 227)) when the pin's state changed, and the second will report the pin's current state.

Warning: Depending on hardware support, the state is *not guaranteed to be accurate*. For instance, many GPIO implementations will provide an interrupt indicating when a pin's state changed but not what it changed to. In this case the pin driver simply reads the pin's current state to supply this parameter, but the pin's state may have changed *since* the interrupt. Exercise appropriate caution when relying upon this parameter.

If the pin does not support edge detection, attempts to set this property will raise `PinEdgeDetectionUnsupported` (page 242).

class gpiozero.SPI (*args, **kwargs)

Abstract interface for [Serial Peripheral Interface](#)⁸⁷⁶ (SPI) implementations. Descendents *must* override the following methods:

- `transfer()` (page 230)
- `_get_clock_mode()`

Descendents *may* override the following methods, if applicable:

- `read()` (page 230)
- `write()` (page 230)
- `_set_clock_mode()`
- `_get_lsb_first()`
- `_set_lsb_first()`
- `_get_select_high()`
- `_set_select_high()`
- `_get_bits_per_word()`
- `_set_bits_per_word()`

read(n)

Read *n* words of data from the SPI interface, returning them as a sequence of unsigned ints, each no larger than the configured `bits_per_word` (page 230) of the interface.

This method is typically used with read-only devices that feature half-duplex communication. See `transfer()` (page 230) for full duplex communication.

transfer(data)

Write *data* to the SPI interface. *data* must be a sequence of unsigned integer words each of which will fit within the configured `bits_per_word` (page 230) of the interface. The method returns the sequence of words read from the interface while writing occurred (full duplex communication).

The length of the sequence returned dictates the number of words of *data* written to the interface. Each word in the returned sequence will be an unsigned integer no larger than the configured `bits_per_word` (page 230) of the interface.

write(data)

Write *data* to the SPI interface. *data* must be a sequence of unsigned integer words each of which will fit within the configured `bits_per_word` (page 230) of the interface. The method returns the number of words written to the interface (which may be less than or equal to the length of *data*).

This method is typically used with write-only devices that feature half-duplex communication. See `transfer()` (page 230) for full duplex communication.

⁸⁷¹ <https://docs.python.org/3.9/library/constants.html#None>

⁸⁷² <https://docs.python.org/3.9/library/constants.html#None>

⁸⁷³ <https://docs.python.org/3.9/library/constants.html#None>

⁸⁷⁴ <https://docs.python.org/3.9/library/constants.html#None>

⁸⁷⁵ <https://docs.python.org/3.9/library/constants.html#None>

property bits_per_word

Controls the number of bits that make up a word, and thus where the word boundaries appear in the data stream, and the maximum value of a word. Defaults to 8 meaning that words are effectively bytes.

Several implementations do not support non-byte-sized words.

property clock_mode

Presents a value representing the `clock_polarity` (page 231) and `clock_phase` (page 231) attributes combined according to the following table:


mode	polarity (CPOL)	phase (CPHA)
0	False	False
1	False	True
2	True	False
3	True	True

Adjusting this value adjusts both the `clock_polarity` (page 231) and `clock_phase` (page 231) attributes simultaneously.


property clock_phase

The phase of the SPI clock pin. If this is `False`⁸⁷⁷ (the default), data will be read from the MISO pin when the clock pin activates. Setting this to `True`⁸⁷⁸ will cause data to be read from the MISO pin when the clock pin deactivates. On many data sheets this is documented as the CPHA value. Whether the clock edge is rising or falling when the clock is considered activated is controlled by the `clock_polarity` (page 231) attribute (corresponding to CPOL).

The following diagram indicates when data is read when `clock_polarity` (page 231) is `False`⁸⁷⁹, and `clock_phase` (page 231) is `False`⁸⁸⁰ (the default), equivalent to CPHA 0:

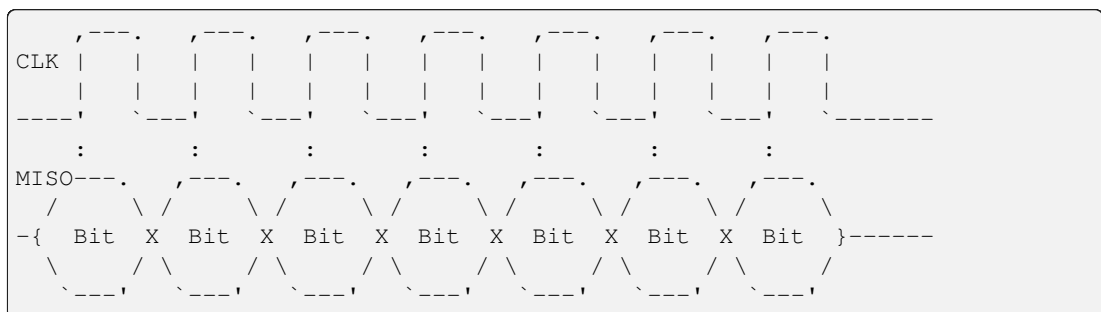


The following diagram indicates when data is read when `clock_polarity` (page 231) is `False`⁸⁸¹, but `clock_phase` (page 231) is `True`⁸⁸², equivalent to CPHA 1:

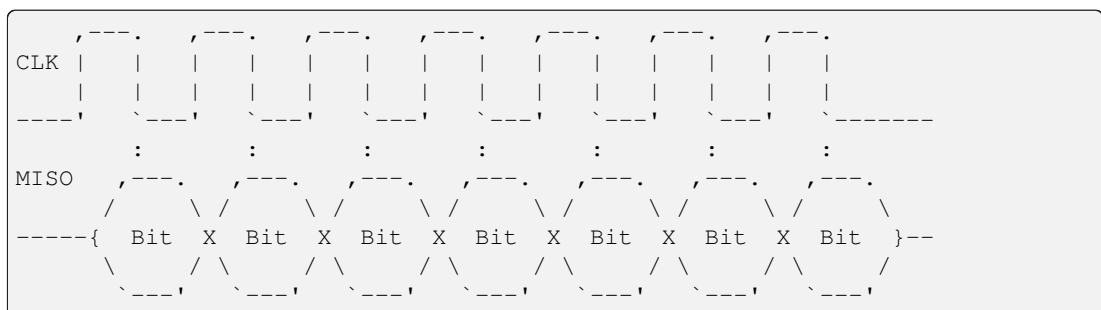


property clock_polarity

The polarity of the SPI clock pin. If this is `False`⁸⁸³ (the default), the clock pin will idle low, and pulse high. Setting this to `True`⁸⁸⁴ will cause the clock pin to idle high, and pulse low. On many data sheets this is documented as the CPOL value.

The following diagram illustrates the waveform when `clock_polarity` (page 231) is `False`⁸⁸⁵ (the default), equivalent to CPOL 0:

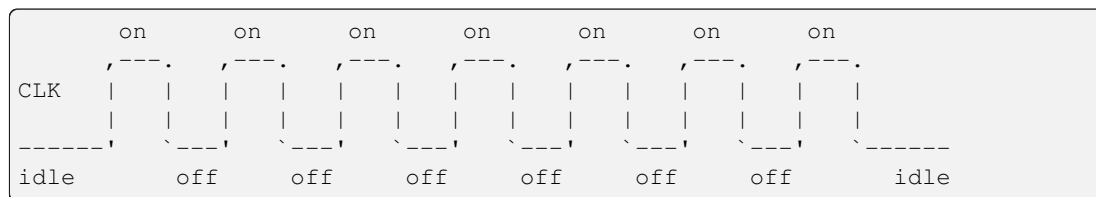


The following diagram illustrates the waveform when `clock_polarity` (page 231) is `True`⁸⁸⁶, equivalent to CPOL 1:

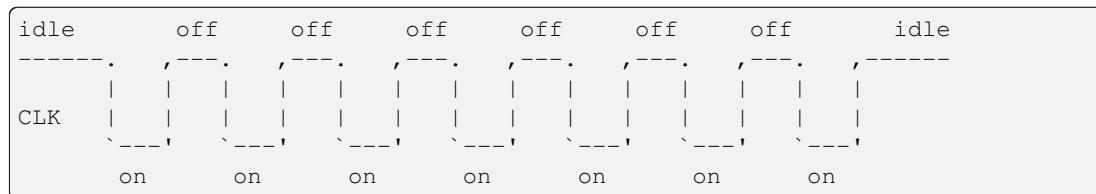


property `lsb_first`

Controls whether words are read and written LSB in (Least Significant Bit first) order. The default is `False`⁸⁸⁷ indicating that words are read and written in MSB (Most Significant Bit first) order. Effectively, this controls the `Bit endianness`⁸⁸⁸ of the connection.

The following diagram shows the a word containing the number 5 (binary 0101) transmitted on MISO with `bits_per_word` (page 230) set to 4, and `clock_mode` (page 231) set to 0, when `lsb_first` (page 232) is `False`⁸⁸⁹ (the default):

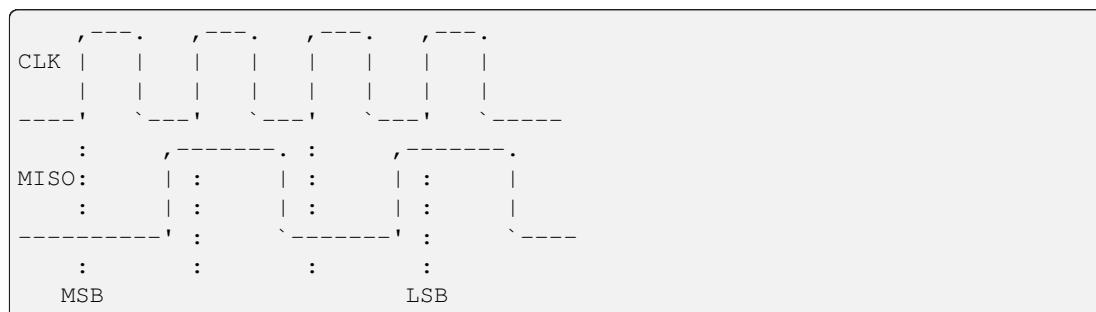

And now with `lsb_first` (page 232) set to `True`⁸⁹⁰ (and all other parameters the same):

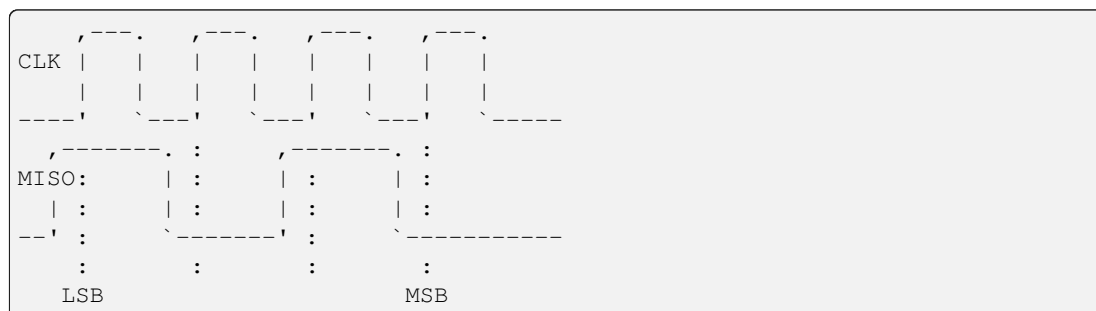

property `rate`


Controls the speed of the SPI interface in Hz (or baud).

Note that most software SPI implementations ignore this property, and will raise `SPIFixedRate` if an attempt is made to set it, as they have no rate control (they simply bit-bang as fast as possible because typically this isn't very fast anyway, and introducing measures to limit the rate would simply slow them down to the point of being useless).


property `select_high`

If `False`⁸⁹¹ (the default), the chip select line is considered active when it is pulled low. When set to `True`⁸⁹², the chip select line is considered active when it is driven high.

The following diagram shows the waveform of the chip select line, and the clock when `clock_polarity` (page 231) is `False`⁸⁹³, and `select_high` (page 232) is `False`⁸⁹⁴ (the default):

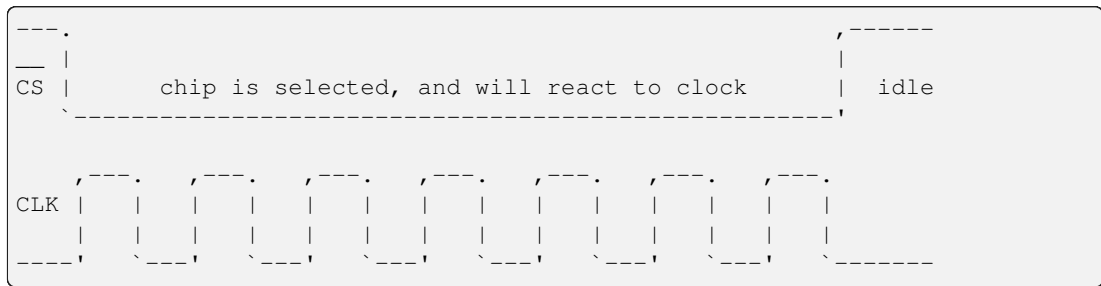

And when `select_high` (page 232) is `True`⁸⁹⁵:

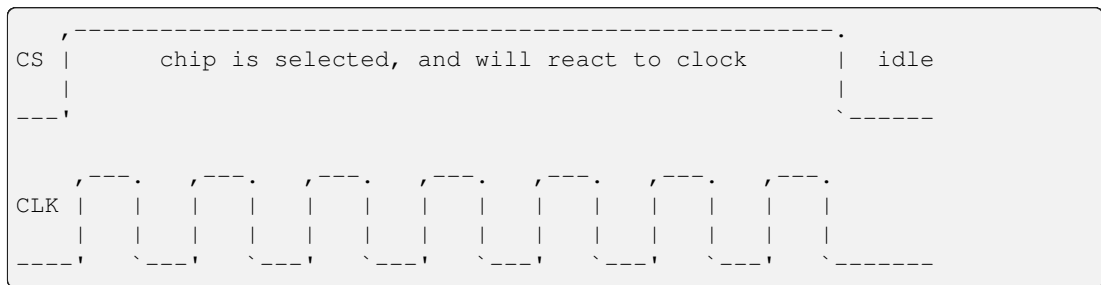

`class gpiozero.pins.pi.PiFactory`

Extends `Factory` (page 226). Abstract base class representing hardware attached to a Raspberry Pi. This forms the base of `LocalPiFactory` (page 234).

`close()`

Closes the pin factory. This is expected to clean up all resources manipulated by the factory. It is typically called at script termination.

`pin(name)`

Creates an instance of a `Pin` descendent representing the specified pin.

Warning: Descendents must ensure that pin instances representing the same hardware are identical; i.e. two separate invocations of `pin()` (page 233) for the same pin specification must return the same object.

⁸⁷⁶ https://en.wikipedia.org/wiki/Serial_Peripheral_Interface_Bus
⁸⁷⁷ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁷⁸ <https://docs.python.org/3.9/library/constants.html#True>
⁸⁷⁹ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁸⁰ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁸¹ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁸² <https://docs.python.org/3.9/library/constants.html#True>
⁸⁸³ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁸⁴ <https://docs.python.org/3.9/library/constants.html#True>
⁸⁸⁵ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁸⁶ <https://docs.python.org/3.9/library/constants.html#True>
⁸⁸⁷ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁸⁸ https://en.wikipedia.org/wiki/Endianness#Bit_endianness
⁸⁸⁹ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁹⁰ <https://docs.python.org/3.9/library/constants.html#True>
⁸⁹¹ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁹² <https://docs.python.org/3.9/library/constants.html#True>
⁸⁹³ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁹⁴ <https://docs.python.org/3.9/library/constants.html#False>
⁸⁹⁵ <https://docs.python.org/3.9/library/constants.html#True>

spi (***spi_args*)

Returns an SPI interface, for the specified SPI *port* and *device*, or for the specified pins (*clock_pin*, *mosi_pin*, *miso_pin*, and *select_pin*). Only one of the schemes can be used; attempting to mix *port* and *device* with pin numbers will raise *SPIBadArgs* (page 240).

If the pins specified match the hardware SPI pins (clock on GPIO11, MOSI on GPIO10, MISO on GPIO9, and chip select on GPIO8 or GPIO7), and the spidev module can be imported, a hardware based interface (using spidev) will be returned. Otherwise, a software based interface will be returned which will use simple bit-banging to communicate.

Both interfaces have the same API, support clock polarity and phase attributes, and can handle half and full duplex communications, but the hardware interface is significantly faster (though for many simpler devices this doesn't matter).

class gpiozero.pins.pi.**PiPin** (*factory*, *info*)

Extends *Pin* (page 227). Abstract base class representing a multi-function GPIO pin attached to a Raspberry Pi. Descendents *must* override the following methods:

- `_get_function()`
- `_set_function()`
- `_get_state()`
- `_call_when_changed()`
- `_enable_event_detect()`
- `_disable_event_detect()`

Descendents *may* additionally override the following methods, if applicable:

- `close()`
- `output_with_state()`
- `input_with_pull()`
- `_set_state()`
- `_get_frequency()`
- `_set_frequency()`
- `_get_pull()`
- `_set_pull()`
- `_get_bounce()`
- `_set_bounce()`
- `_get_edges()`
- `_set_edges()`

property info

Returns the *PinInfo* associated with the pin. This can be used to determine physical properties of the pin, including its location on the header, fixed pulls, and the various specs that can be used to identify it.

class gpiozero.pins.local.**LocalPiFactory**

Extends *PiFactory* (page 233). Abstract base class representing pins attached locally to a Pi. This forms the base class for local-only pin interfaces (*RPiGPIOPin* (page 235), *LGPIOPin* (page 236), and *NativePin* (page 237)).

static ticks()

Return the current ticks, according to the factory. The reference point is undefined and thus the result of this method is only meaningful when compared to another value returned by this method.

The format of the time is also arbitrary, as is whether the time wraps after a certain duration. Ticks should only be compared using the `ticks_diff()` (page 235) method.

static `ticks_diff(later, earlier)`

Return the time in seconds between two `ticks()` (page 234) results. The arguments are specified in the same order as they would be in the formula *later - earlier* but the result is guaranteed to be in seconds, and to be positive even if the ticks “wrapped” between calls to `ticks()` (page 234).

class `gpiozero.pins.local.LocalPiPin(factory, info)`

Extends `PiPin` (page 234). Abstract base class representing a multi-function GPIO pin attached to the local Raspberry Pi.

24.4 RPi.GPIO

class `gpiozero.pins.rpigpio.RPiGPIOFactory`

Extends `LocalPiFactory` (page 234). Uses the `RPi.GPIO`⁸⁹⁶ library to interface to the Pi’s GPIO pins. This is the default pin implementation if the RPi.GPIO library is installed. Supports all features including PWM (via software).

Because this is the default pin implementation you can use it simply by specifying an integer number for the pin in most operations, e.g.:

```
from gpiozero import LED

led = LED(12)
```

However, you can also construct RPi.GPIO pins manually if you wish:

```
from gpiozero.pins.rpigpio import RPiGPIOFactory
from gpiozero import LED

factory = RPiGPIOFactory()
led = LED(12, pin_factory=factory)
```

class `gpiozero.pins.rpigpio.RPiGPIOPin(factory, info)`

Extends `LocalPiPin` (page 235). Pin implementation for the `RPi.GPIO`⁸⁹⁷ library. See `RPiGPIOFactory` (page 235) for more information.

24.5 lgpio

class `gpiozero.pins.lgpio.LGPIOFactory(chip=None)`

Extends `LocalPiFactory` (page 234). Uses the `lgpio`⁸⁹⁸ library to interface to the local computer’s GPIO pins. The `lgpio` library simply talks to Linux gpiochip devices; it is not specific to the Raspberry Pi although this class is currently constructed under the assumption that it is running on a Raspberry Pi.

You can construct `lgpio` pins manually like so:

```
from gpiozero.pins.lgpio import LGPIOFactory
from gpiozero import LED

factory = LGPIOFactory(chip=0)
led = LED(12, pin_factory=factory)
```

⁸⁹⁶ <https://pypi.python.org/pypi/RPi.GPIO>

⁸⁹⁷ <https://pypi.python.org/pypi/RPi.GPIO>

The *chip* parameter to the factory constructor specifies which gpiochip device to attempt to open. It defaults to 0 and thus doesn't normally need to be specified (the example above only includes it for completeness).

The lgpio library relies on access to the `/dev/gpiochip*` devices. If you run into issues, please check that your user has read/write access to the specific gpiochip device you are attempting to open (0 by default).

class gpiozero.pins.lgpio.LGPIOPin (*factory, info*)

Extends *LocalPiPin* (page 235). Pin implementation for the [lgpio](#)⁸⁹⁹ library. See *LGPIOFactory* (page 235) for more information.

24.6 PiGPIO

class gpiozero.pins.pigpio.PiGPIOFactory (*host=None, port=None*)

Extends *PiFactory* (page 233). Uses the [pigpio](#)⁹⁰⁰ library to interface to the Pi's GPIO pins. The pigpio library relies on a daemon (**pigpiod**) to be running as root to provide access to the GPIO pins, and communicates with this daemon over a network socket.

While this does mean only the daemon itself should control the pins, the architecture does have several advantages:

- Pins can be remote controlled from another machine (the other machine doesn't even have to be a Raspberry Pi; it simply needs the [pigpio](#)⁹⁰¹ client library installed on it)
- The daemon supports hardware PWM via the DMA controller
- Your script itself doesn't require root privileges; it just needs to be able to communicate with the daemon

You can construct pigpio pins manually like so:

```
from gpiozero.pins.pigpio import PiGPIOFactory
from gpiozero import LED

factory = PiGPIOFactory()
led = LED(12, pin_factory=factory)
```

This is particularly useful for controlling pins on a remote machine. To accomplish this simply specify the host (and optionally port) when constructing the pin:

```
from gpiozero.pins.pigpio import PiGPIOFactory
from gpiozero import LED

factory = PiGPIOFactory(host='192.168.0.2')
led = LED(12, pin_factory=factory)
```

Note: In some circumstances, especially when playing with PWM, it does appear to be possible to get the daemon into “unusual” states. We would be most interested to hear any bug reports relating to this (it may be a bug in our pin implementation). A workaround for now is simply to restart the **pigpiod** daemon.

class gpiozero.pins.pigpio.PiGPIOPin (*factory, info*)

Extends *PiPin* (page 234). Pin implementation for the [pigpio](#)⁹⁰² library. See *PiGPIOFactory* (page 236) for more information.

⁸⁹⁸ http://abyz.me.uk/lg/py_lgpio.html

⁸⁹⁹ http://abyz.me.uk/lg/py_lgpio.html

⁹⁰⁰ <http://abyz.me.uk/rpi/pigpio/>

⁹⁰¹ <http://abyz.me.uk/rpi/pigpio/>

⁹⁰² <http://abyz.me.uk/rpi/pigpio/>

24.7 Native

class gpiozero.pins.native.**NativeFactory**

Extends [LocalPiFactory](#) (page 234). Uses a built-in pure Python implementation to interface to the Pi's GPIO pins. This is the default pin implementation if no third-party libraries are discovered.

Warning: This implementation does *not* currently support PWM. Attempting to use any class which requests PWM will raise an exception.

You can construct native pin instances manually like so:

```
from gpiozero.pins.native import NativeFactory
from gpiozero import LED

factory = NativeFactory()
led = LED(12, pin_factory=factory)
```

class gpiozero.pins.native.**NativePin** (*factory, info*)

Extends [LocalPiPin](#) (page 235). Native pin implementation. See [NativeFactory](#) (page 237) for more information.

class gpiozero.pins.native.**Native2835Pin** (*factory, info*)

Extends [NativePin](#) (page 237) for Pi hardware prior to the Pi 4 (Pi 0, 1, 2, 3, and 3+).

class gpiozero.pins.native.**Native2711Pin** (*factory, info*)

Extends [NativePin](#) (page 237) for Pi 4 hardware (Pi 4, CM4, Pi 400 at the time of writing).

24.8 Mock

class gpiozero.pins.mock.**MockFactory** (*revision=None, pin_class=None*)

Factory for generating mock pins.

The *revision* parameter specifies what revision of Pi the mock factory pretends to be (this affects the result of the `Factory.board_info` attribute as well as where pull-ups are assumed to be).

The *pin_class* attribute specifies which mock pin class will be generated by the `pin()` (page 237) method by default. This can be changed after construction by modifying the *pin_class* (page 237) attribute.

pin_class

This attribute stores the [MockPin](#) (page 238) class (or descendant) that will be used when constructing pins with the `pin()` (page 237) method (if no *pin_class* parameter is used to override it). It defaults on construction to the value of the *pin_class* parameter in the constructor, or [MockPin](#) (page 238) if that is unspecified.

pin (*name, pin_class=None, **kwargs*)

The `pin` method for [MockFactory](#) (page 237) additionally takes a *pin_class* attribute which can be used to override the class' *pin_class* (page 237) attribute. Any additional keyword arguments will be passed along to the pin constructor (useful with things like [MockConnectedPin](#) (page 238) which expect to be constructed with another pin).

reset ()

Clears the pins and reservations sets. This is primarily useful in test suites to ensure the pin factory is back in a “clean” state before the next set of tests are run.

static ticks()

Return the current ticks, according to the factory. The reference point is undefined and thus the result of this method is only meaningful when compared to another value returned by this method.

The format of the time is also arbitrary, as is whether the time wraps after a certain duration. Ticks should only be compared using the `ticks_diff()` (page 238) method.

static ticks_diff(later, earlier)

Return the time in seconds between two `ticks()` (page 237) results. The arguments are specified in the same order as they would be in the formula *later - earlier* but the result is guaranteed to be in seconds, and to be positive even if the ticks “wrapped” between calls to `ticks()` (page 237).

class gpiozero.pins.mock.MockPin(factory, info)

A mock pin used primarily for testing. This class does *not* support PWM.

class gpiozero.pins.mock.MockPWMPin(factory, info)

This derivative of `MockPin` (page 238) adds PWM support.

class gpiozero.pins.mock.MockConnectedPin(factory, info, input_pin=None)

This derivative of `MockPin` (page 238) emulates a pin connected to another mock pin. This is used in the “real pins” portion of the test suite to check that one pin can influence another.

class gpiozero.pins.mock.MockChargingPin(factory, info, charge_time=0.01)

This derivative of `MockPin` (page 238) emulates a pin which, when set to input, waits a predetermined length of time and then drives itself high (as if attached to, e.g. a typical circuit using an LDR and a capacitor to time the charging rate).

class gpiozero.pins.mock.MockTriggerPin(factory, info, echo_pin=None, echo_time=0.04)

This derivative of `MockPin` (page 238) is intended to be used with another `MockPin` (page 238) to emulate a distance sensor. Set `echo_pin` to the corresponding pin instance. When this pin is driven high it will trigger the echo pin to drive high for the echo time.

class gpiozero.pins.mock.MockSPIDevice(clock_pin, mosi_pin=None, miso_pin=None, select_pin=None, *, clock_polarity=False, clock_phase=False, lsb_first=False, bits_per_word=8, select_high=False, pin_factory=None)

This class is used to test `SPIDevice` implementations. It can be used to mock up the slave side of simple SPI devices, e.g. the MCP3xxx series of ADCs.

Descendants should override the `on_start()` and/or `on_bit()` methods to respond to SPI interface events. The `rx_word()` and `tx_word()` methods can be used facilitate communications within these methods. Such descendants can then be passed as the `spi_class` parameter of the `MockFactory` (page 237) constructor to have instances attached to any SPI interface requested by an `SPIDevice`.

API - EXCEPTIONS

The following exceptions are defined by GPIO Zero. Please note that multiple inheritance is heavily used in the exception hierarchy to make testing for exceptions easier. For example, to capture any exception generated by GPIO Zero's code:

```
from gpiozero import *

led = PWMLed(17)
try:
    led.value = 2
except GPIOZeroError:
    print('A GPIO Zero error occurred')
```

Since all GPIO Zero's exceptions descend from *GPIOZeroError* (page 239), this will work. However, certain specific errors have multiple parents. For example, in the case that an out of range value is passed to *OutputDevice.value* (page 145) you would expect a *ValueError*⁹⁰³ to be raised. In fact, a *OutputDeviceBadValue* (page 242) error will be raised. However, note that this descends from both *GPIOZeroError* (page 239) (indirectly) and from *ValueError*⁹⁰⁴ so you can still do the obvious:

```
from gpiozero import *

led = PWMLed(17)
try:
    led.value = 2
except ValueError:
    print('Bad value specified')
```

25.1 Errors

exception `gpiozero.GPIOZeroError`

Bases: *Exception*⁹⁰⁵

Base class for all exceptions in GPIO Zero

exception `gpiozero.DeviceClosed`

Bases: *GPIOZeroError* (page 239)

Error raised when an operation is attempted on a closed device

exception `gpiozero.BadEventHandler`

Bases: *GPIOZeroError* (page 239), *ValueError*⁹⁰⁶

Error raised when an event handler with an incompatible prototype is specified

⁹⁰³ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹⁰⁴ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹⁰⁵ <https://docs.python.org/3.9/library/exceptions.html#Exception>

⁹⁰⁶ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

exception `gpiozero.BadWaitTime`

Bases: [GPIOZeroError](#) (page 239), [ValueError](#)⁹⁰⁷

Error raised when an invalid wait time is specified

exception `gpiozero.BadQueueLen`

Bases: [GPIOZeroError](#) (page 239), [ValueError](#)⁹⁰⁸

Error raised when non-positive queue length is specified

exception `gpiozero.BadPinFactory`

Bases: [GPIOZeroError](#) (page 239), [ImportError](#)⁹⁰⁹

Error raised when an unknown pin factory name is specified

exception `gpiozero.ZombieThread`

Bases: [GPIOZeroError](#) (page 239), [RuntimeError](#)⁹¹⁰

Error raised when a thread fails to die within a given timeout

exception `gpiozero.CompositeDeviceError`

Bases: [GPIOZeroError](#) (page 239)

Base class for errors specific to the CompositeDevice hierarchy

exception `gpiozero.CompositeDeviceBadName`

Bases: [CompositeDeviceError](#) (page 240), [ValueError](#)⁹¹¹

Error raised when a composite device is constructed with a reserved name

exception `gpiozero.CompositeDeviceBadOrder`

Bases: [CompositeDeviceError](#) (page 240), [ValueError](#)⁹¹²

Error raised when a composite device is constructed with an incomplete order

exception `gpiozero.CompositeDeviceBadDevice`

Bases: [CompositeDeviceError](#) (page 240), [ValueError](#)⁹¹³

Error raised when a composite device is constructed with an object that doesn't inherit from [Device](#) (page 199)

exception `gpiozero.EnergenieSocketMissing`

Bases: [CompositeDeviceError](#) (page 240), [ValueError](#)⁹¹⁴

Error raised when socket number is not specified

exception `gpiozero.EnergenieBadSocket`

Bases: [CompositeDeviceError](#) (page 240), [ValueError](#)⁹¹⁵

Error raised when an invalid socket number is passed to [Energenie](#) (page 180)

exception `gpiozero.SPIError`

Bases: [GPIOZeroError](#) (page 239)

Base class for errors related to the SPI implementation

⁹⁰⁷ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹⁰⁸ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹⁰⁹ <https://docs.python.org/3.9/library/exceptions.html#ImportError>

⁹¹⁰ <https://docs.python.org/3.9/library/exceptions.html#RuntimeError>

⁹¹¹ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹¹² <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹¹³ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹¹⁴ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹¹⁵ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

exception `gpiozero.SPIBadArgs`

Bases: [SPIError](#) (page 240), [ValueError](#)⁹¹⁶

Error raised when invalid arguments are given while constructing *SPIDevice* (page 154)

exception `gpiozero.SPIBadChannel`

Bases: [SPIError](#) (page 240), [ValueError](#)⁹¹⁷

Error raised when an invalid channel is given to an *AnalogInputDevice* (page 153)

exception `gpiozero.SPIFixedClockMode`

Bases: [SPIError](#) (page 240), [AttributeError](#)⁹¹⁸

Error raised when the SPI clock mode cannot be changed

exception `gpiozero.SPIInvalidClockMode`

Bases: [SPIError](#) (page 240), [ValueError](#)⁹¹⁹

Error raised when an invalid clock mode is given to an SPI implementation

exception `gpiozero.SPIFixedBitOrder`

Bases: [SPIError](#) (page 240), [AttributeError](#)⁹²⁰

Error raised when the SPI bit-endianness cannot be changed

exception `gpiozero.SPIFixedSelect`

Bases: [SPIError](#) (page 240), [AttributeError](#)⁹²¹

Error raised when the SPI select polarity cannot be changed

exception `gpiozero.SPIFixedWordSize`

Bases: [SPIError](#) (page 240), [AttributeError](#)⁹²²

Error raised when the number of bits per word cannot be changed

exception `gpiozero.SPIInvalidWordSize`

Bases: [SPIError](#) (page 240), [ValueError](#)⁹²³

Error raised when an invalid (out of range) number of bits per word is specified

exception `gpiozero.GPIODeviceError`

Bases: [GPIOZeroError](#) (page 239)

Base class for errors specific to the GPIODevice hierarchy

exception `gpiozero.GPIODeviceClosed`

Bases: [GPIODeviceError](#) (page 241), [DeviceClosed](#) (page 239)

Deprecated descendent of [DeviceClosed](#) (page 239)

exception `gpiozero.GPIOPinInUse`

Bases: [GPIODeviceError](#) (page 241)

Error raised when attempting to use a pin already in use by another device

exception `gpiozero.GPIOPinMissing`

Bases: [GPIODeviceError](#) (page 241), [ValueError](#)⁹²⁴

Error raised when a pin specification is not given

⁹¹⁶ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹¹⁷ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹¹⁸ <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

⁹¹⁹ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹²⁰ <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

⁹²¹ <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

⁹²² <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

⁹²³ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹²⁴ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

exception `gpiozero.InputDeviceError`

Bases: [GPIODeviceError](#) (page 241)

Base class for errors specific to the InputDevice hierarchy

exception `gpiozero.OutputDeviceError`

Bases: [GPIODeviceError](#) (page 241)

Base class for errors specified to the OutputDevice hierarchy

exception `gpiozero.OutputDeviceBadValue`

Bases: [OutputDeviceError](#) (page 242), [ValueError](#)⁹²⁵

Error raised when value is set to an invalid value

exception `gpiozero.PinError`

Bases: [GPIOZeroError](#) (page 239)

Base class for errors related to pin implementations

exception `gpiozero.PinInvalidFunction`

Bases: [PinError](#) (page 242), [ValueError](#)⁹²⁶

Error raised when attempting to change the function of a pin to an invalid value

exception `gpiozero.PinInvalidState`

Bases: [PinError](#) (page 242), [ValueError](#)⁹²⁷

Error raised when attempting to assign an invalid state to a pin

exception `gpiozero.PinInvalidPull`

Bases: [PinError](#) (page 242), [ValueError](#)⁹²⁸

Error raised when attempting to assign an invalid pull-up to a pin

exception `gpiozero.PinInvalidEdges`

Bases: [PinError](#) (page 242), [ValueError](#)⁹²⁹

Error raised when attempting to assign an invalid edge detection to a pin

exception `gpiozero.PinInvalidBounce`

Bases: [PinError](#) (page 242), [ValueError](#)⁹³⁰

Error raised when attempting to assign an invalid bounce time to a pin

exception `gpiozero.PinSetInput`

Bases: [PinError](#) (page 242), [AttributeError](#)⁹³¹

Error raised when attempting to set a read-only pin

exception `gpiozero.PinFixedPull`

Bases: [PinError](#) (page 242), [AttributeError](#)⁹³²

Error raised when attempting to set the pull of a pin with fixed pull-up

exception `gpiozero.PinEdgeDetectUnsupported`

Bases: [PinError](#) (page 242), [AttributeError](#)⁹³³

Error raised when attempting to use edge detection on unsupported pins

⁹²⁵ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹²⁶ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹²⁷ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹²⁸ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹²⁹ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹³⁰ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹³¹ <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

⁹³² <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

⁹³³ <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

exception gpiozero.PinUnsupported

Bases: [PinError](#) (page 242), [NotImplementedError](#)⁹³⁴

Error raised when attempting to obtain a pin interface on unsupported pins

exception gpiozero.PinSPIUnsupported

Bases: [PinError](#) (page 242), [NotImplementedError](#)⁹³⁵

Error raised when attempting to obtain an SPI interface on unsupported pins

exception gpiozero.PinPWMError

Bases: [PinError](#) (page 242)

Base class for errors related to PWM implementations

exception gpiozero.PinPWMUnsupported

Bases: [PinPWMError](#) (page 243), [AttributeError](#)⁹³⁶

Error raised when attempting to activate PWM on unsupported pins

exception gpiozero.PinPWMFixedValue

Bases: [PinPWMError](#) (page 243), [AttributeError](#)⁹³⁷

Error raised when attempting to initialize PWM on an input pin

exception gpiozero.PinUnknownPi

Bases: [PinError](#) (page 242), [RuntimeError](#)⁹³⁸

Error raised when gpiozero doesn't recognize a revision of the Pi

exception gpiozero.PinMultiplePins

Bases: [PinError](#) (page 242), [RuntimeError](#)⁹³⁹

Error raised when multiple pins support the requested function

exception gpiozero.PinNoPins

Bases: [PinError](#) (page 242), [RuntimeError](#)⁹⁴⁰

Error raised when no pins support the requested function

exception gpiozero.PinInvalidPin

Bases: [PinError](#) (page 242), [ValueError](#)⁹⁴¹

Error raised when an invalid pin specification is provided

25.2 Warnings

exception gpiozero.GPIOZeroWarning

Bases: [Warning](#)⁹⁴²

Base class for all warnings in GPIO Zero

⁹³⁴ <https://docs.python.org/3.9/library/exceptions.html#NotImplementedError>

⁹³⁵ <https://docs.python.org/3.9/library/exceptions.html#NotImplementedError>

⁹³⁶ <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

⁹³⁷ <https://docs.python.org/3.9/library/exceptions.html#AttributeError>

⁹³⁸ <https://docs.python.org/3.9/library/exceptions.html#RuntimeError>

⁹³⁹ <https://docs.python.org/3.9/library/exceptions.html#RuntimeError>

⁹⁴⁰ <https://docs.python.org/3.9/library/exceptions.html#RuntimeError>

⁹⁴¹ <https://docs.python.org/3.9/library/exceptions.html#ValueError>

⁹⁴² <https://docs.python.org/3.9/library/exceptions.html#Warning>

exception `gpiozero.DistanceSensorNoEcho`

Bases: *GPIOZeroWarning* (page 243)

Warning raised when the distance sensor sees no echo at all

exception `gpiozero.SPIWarning`

Bases: *GPIOZeroWarning* (page 243)

Base class for warnings related to the SPI implementation

exception `gpiozero.SPISoftwareFallback`

Bases: *SPIWarning* (page 244)

Warning raised when falling back to the SPI software implementation

exception `gpiozero.PinWarning`

Bases: *GPIOZeroWarning* (page 243)

Base class for warnings related to pin implementations

exception `gpiozero.PinFactoryFallback`

Bases: *PinWarning* (page 244)

Warning raised when a default pin factory fails to load and a fallback is tried

exception `gpiozero.PinNonPhysical`

Bases: *PinWarning* (page 244)

Warning raised when a non-physical pin is specified in a constructor

exception `gpiozero.ThresholdOutOfRange`

Bases: *GPIOZeroWarning* (page 243)

Warning raised when a threshold is out of range specified by min and max values

exception `gpiozero.CallbackSetToNone`

Bases: *GPIOZeroWarning* (page 243)

Warning raised when a callback is set to None when its previous value was None

CHANGELOG

26.1 Release 2.0.1 (2024-02-15)

- Fixed Python 3.12 compatibility, and clarify that 3.9 is the lowest supported version in our CI configuration (#1113⁹⁴³)

26.2 Release 2.0 (2023-09-12)

- Removed Python 2.x support; many thanks to Fangchen Li for a substantial amount of work on this! (#799⁹⁴⁴ #896⁹⁴⁵)
- Removed RPIO pin implementation
- Made `gpiozero.pins.lgpio.LGPIOFactory` (page 235) the default factory; the former default, `gpiozero.pins.rpio.RPiGPIOFactory` (page 235), is now the second place preference
- Added *Backwards Compatibility* (page 87) chapter
- Added `pintest` utility
- Added Raspberry Pi 5 board data

26.3 Release 1.6.2 (2021-03-18)

- Correct docs referring to 1.6.0 as the last version supporting Python 2

Warning: This is the last release to support Python 2
--

26.4 Release 1.6.1 (2021-03-17)

- Fix missing font files for 7-segment displays

⁹⁴³ <https://github.com/gpiozero/gpiozero/issues/1113>

⁹⁴⁴ <https://github.com/gpiozero/gpiozero/issues/799>

⁹⁴⁵ <https://github.com/gpiozero/gpiozero/issues/896>

26.5 Release 1.6.0 (2021-03-14)

- Added *RotaryEncoder* (page 115) class (thanks to Paulo Mateus) (#482⁹⁴⁶, #928⁹⁴⁷)
- Added support for multi-segment character displays with *LEDCharDisplay* (page 162) and *LEDMultiCharDisplay* (page 163) along with “font” support using *LEDCharFont* (page 165) (thanks to Martin O’Hanlon) (#357⁹⁴⁸, #485⁹⁴⁹, #488⁹⁵⁰, #493⁹⁵¹, #930⁹⁵²)
- Added *Pibrella* (page 175) class (thanks to Carl Monk) (#773⁹⁵³, #798⁹⁵⁴)
- Added *TrafficpHat* (page 174) class (thanks to Ryan Walmsley) (#845⁹⁵⁵, #846⁹⁵⁶)
- Added support for the *lgpio*⁹⁵⁷ library as a pin factory (*LGPIOFactory* (page 235)) (thanks to Joan for lg) (#927⁹⁵⁸)
- Allow *Motor* (page 134) to pass *pin_factory* (page 199) to its child *OutputDevice* (page 144) objects (thanks to Yisrael Dov Lebow) (#792⁹⁵⁹)
- Small SPI exception fix (thanks to Maksim Levental) (#762⁹⁶⁰)
- Warn users when using default pin factory for Servos and Distance Sensors (thanks to Sofia Kosovan and Daniele Procida at the EuroPython sprints) (#780⁹⁶¹, #781⁹⁶²)
- Added *pulse_width* (page 138) property to *Servo* (page 137) (suggested by Daniele Procida at the PyCon UK sprints) (#795⁹⁶³, #797⁹⁶⁴)
- Added event-driven functionality to *internal devices* (page 189) (#941⁹⁶⁵)
- Allowed *Energienie* (page 180) sockets preserve their state on construction (thanks to Jack Wearden) (#865⁹⁶⁶)
- Added source tools *scaled_half()* and *scaled_full()*
- Added complete Pi 4 support to *NativeFactory* (page 237) (thanks to Andrew Scheller) (#920⁹⁶⁷, #929⁹⁶⁸, #940⁹⁶⁹)
- Updated add-on boards to use BOARD numbering (#349⁹⁷⁰, #860⁹⁷¹)
- Fixed *ButtonBoard* (page 165) release events (#761⁹⁷²)
- Add ASCII art diagrams to **pinout** for Pi 400 and CM4 (#932⁹⁷³)

⁹⁴⁶ <https://github.com/gpiozero/gpiozero/issues/482>

⁹⁴⁷ <https://github.com/gpiozero/gpiozero/issues/928>

⁹⁴⁸ <https://github.com/gpiozero/gpiozero/issues/357>

⁹⁴⁹ <https://github.com/gpiozero/gpiozero/issues/485>

⁹⁵⁰ <https://github.com/gpiozero/gpiozero/issues/488>

⁹⁵¹ <https://github.com/gpiozero/gpiozero/issues/493>

⁹⁵² <https://github.com/gpiozero/gpiozero/issues/930>

⁹⁵³ <https://github.com/gpiozero/gpiozero/issues/773>

⁹⁵⁴ <https://github.com/gpiozero/gpiozero/issues/798>

⁹⁵⁵ <https://github.com/gpiozero/gpiozero/issues/845>

⁹⁵⁶ <https://github.com/gpiozero/gpiozero/issues/846>

⁹⁵⁷ http://abyz.me.uk/lg/py_lgpio.html

⁹⁵⁸ <https://github.com/gpiozero/gpiozero/issues/927>

⁹⁵⁹ <https://github.com/gpiozero/gpiozero/issues/792>

⁹⁶⁰ <https://github.com/gpiozero/gpiozero/issues/762>

⁹⁶¹ <https://github.com/gpiozero/gpiozero/issues/780>

⁹⁶² <https://github.com/gpiozero/gpiozero/issues/781>

⁹⁶³ <https://github.com/gpiozero/gpiozero/issues/795>

⁹⁶⁴ <https://github.com/gpiozero/gpiozero/issues/797>

⁹⁶⁵ <https://github.com/gpiozero/gpiozero/issues/941>

⁹⁶⁶ <https://github.com/gpiozero/gpiozero/issues/865>

⁹⁶⁷ <https://github.com/gpiozero/gpiozero/issues/920>

⁹⁶⁸ <https://github.com/gpiozero/gpiozero/issues/929>

⁹⁶⁹ <https://github.com/gpiozero/gpiozero/issues/940>

⁹⁷⁰ <https://github.com/gpiozero/gpiozero/issues/349>

⁹⁷¹ <https://github.com/gpiozero/gpiozero/issues/860>

⁹⁷² <https://github.com/gpiozero/gpiozero/issues/761>

⁹⁷³ <https://github.com/gpiozero/gpiozero/issues/932>

- Cleaned up software SPI (thanks to Andrew Scheller and Kyle Morgan) ([#777](#)⁹⁷⁴, [#895](#)⁹⁷⁵, [#900](#)⁹⁷⁶)
- Added USB3 and Ethernet speed attributes to `pi_info()` (page 217)
- Various docs updates

26.6 Release 1.5.1 (2019-06-24)

- Added Raspberry Pi 4 data for `pi_info()` (page 217) and `pinout`
- Minor docs updates

26.7 Release 1.5.0 (2019-02-12)

- Introduced pin event timing to increase accuracy of certain devices such as the HC-SR04 `DistanceSensor` (page 113). ([#664](#)⁹⁷⁷, [#665](#)⁹⁷⁸)
- Further improvements to `DistanceSensor` (page 113) (ignoring missed edges). ([#719](#)⁹⁷⁹)
- Allow `source` to take a device object as well as values or other values. See [Source/Values](#) (page 61). ([#640](#)⁹⁸⁰)
- Added internal device classes `LoadAverage` (page 193) and `DiskUsage` (page 195) (thanks to Jeevan M R for the latter). ([#532](#)⁹⁸¹, [#714](#)⁹⁸²)
- Added support for `colorzero`⁹⁸³ with `RGBLED` (page 128) (this adds a new dependency). ([#655](#)⁹⁸⁴)
- Added `TonalBuzzer` (page 133) with `Tone` (page 215) API for specifying frequencies raw or via MIDI or musical notes. ([#681](#)⁹⁸⁵, [#717](#)⁹⁸⁶)
- Added `PiHutXmasTree` (page 169). ([#502](#)⁹⁸⁷)
- Added `PumpkinPi` (page 184) and `JamHat` (page 174) (thanks to Claire Pollard). ([#680](#)⁹⁸⁸, [#681](#)⁹⁸⁹, [#717](#)⁹⁹⁰)
- Ensured gpiozero can be imported without a valid pin factory set. ([#591](#)⁹⁹¹, [#713](#)⁹⁹²)
- Reduced import time by not computing default pin factory at the point of import. ([#675](#)⁹⁹³, [#722](#)⁹⁹⁴)
- Added support for various pin numbering mechanisms. ([#470](#)⁹⁹⁵)
- `Motor` (page 134) instances now use `DigitalOutputDevice` (page 141) for non-PWM pins.

⁹⁷⁴ <https://github.com/gpiozero/gpiozero/issues/777>

⁹⁷⁵ <https://github.com/gpiozero/gpiozero/issues/895>

⁹⁷⁶ <https://github.com/gpiozero/gpiozero/issues/900>

⁹⁷⁷ <https://github.com/gpiozero/gpiozero/issues/664>

⁹⁷⁸ <https://github.com/gpiozero/gpiozero/issues/665>

⁹⁷⁹ <https://github.com/gpiozero/gpiozero/issues/719>

⁹⁸⁰ <https://github.com/gpiozero/gpiozero/issues/640>

⁹⁸¹ <https://github.com/gpiozero/gpiozero/issues/532>

⁹⁸² <https://github.com/gpiozero/gpiozero/issues/714>

⁹⁸³ <https://colorzero.readthedocs.io/en/stable>

⁹⁸⁴ <https://github.com/gpiozero/gpiozero/issues/655>

⁹⁸⁵ <https://github.com/gpiozero/gpiozero/issues/681>

⁹⁸⁶ <https://github.com/gpiozero/gpiozero/issues/717>

⁹⁸⁷ <https://github.com/gpiozero/gpiozero/issues/502>

⁹⁸⁸ <https://github.com/gpiozero/gpiozero/issues/680>

⁹⁸⁹ <https://github.com/gpiozero/gpiozero/issues/681>

⁹⁹⁰ <https://github.com/gpiozero/gpiozero/issues/717>

⁹⁹¹ <https://github.com/gpiozero/gpiozero/issues/591>

⁹⁹² <https://github.com/gpiozero/gpiozero/issues/713>

⁹⁹³ <https://github.com/gpiozero/gpiozero/issues/675>

⁹⁹⁴ <https://github.com/gpiozero/gpiozero/issues/722>

⁹⁹⁵ <https://github.com/gpiozero/gpiozero/issues/470>

- Allow non-PWM use of *Robot* (page 176). (#481⁹⁹⁶)
- Added optional `enable` init param to *Motor* (page 134). (#366⁹⁹⁷)
- Added `--xyz` option to **pinout** command line tool to open pinout.xyz⁹⁹⁸ in a web browser. (#604⁹⁹⁹)
- Added 3B+, 3A+ and CM3+ to Pi model data. (#627¹⁰⁰⁰, #704¹⁰⁰¹)
- Minor improvements to *Energien* (page 180), thanks to Steve Amor. (#629¹⁰⁰², #634¹⁰⁰³)
- Allow *SmoothedInputDevice* (page 120), *LightSensor* (page 111) and *MotionSensor* (page 109) to have pull-up configured. (#652¹⁰⁰⁴)
- Allow input devices to be pulled up or down externally, thanks to Philippe Muller. (#593¹⁰⁰⁵, #658¹⁰⁰⁶)
- Minor changes to support Python 3.7, thanks to Russel Winder and Rick Ansell. (#666¹⁰⁰⁷, #668¹⁰⁰⁸, #669¹⁰⁰⁹, #671¹⁰¹⁰, #673¹⁰¹¹)
- Added `zip_values()` (page 208) source tool.
- Correct row/col numbering logic in *PinInfo* (page 219). (#674¹⁰¹²)
- Many additional tests, and other improvements to the test suite.
- Many documentation corrections, additions and clarifications.
- Automatic documentation class hierarchy diagram generation.
- Automatic copyright attribution in source files.

26.8 Release 1.4.1 (2018-02-20)

This release is mostly bug-fixes, but a few enhancements have made it in too:

- Added `curve_left` and `curve_right` parameters to *Robot.forward()* (page 177) and *Robot.backward()* (page 177). (#306¹⁰¹³ and #619¹⁰¹⁴)
- Fixed *DistanceSensor* (page 113) returning incorrect readings after a long pause, and added a lock to ensure multiple distance sensors can operate simultaneously in a single project. (#584¹⁰¹⁵, #595¹⁰¹⁶, #617¹⁰¹⁷, #618¹⁰¹⁸)
- Added support for phase/enable motor drivers with *PhaseEnableMotor* (page 136), *PhaseEnableRobot* (page 178), and descendants, thanks to Ian Harcombe! (#386¹⁰¹⁹)

⁹⁹⁶ <https://github.com/gpiozero/gpiozero/issues/481>

⁹⁹⁷ <https://github.com/gpiozero/gpiozero/issues/366>

⁹⁹⁸ <https://pinout.xyz>

⁹⁹⁹ <https://github.com/gpiozero/gpiozero/issues/604>

¹⁰⁰⁰ <https://github.com/gpiozero/gpiozero/issues/627>

¹⁰⁰¹ <https://github.com/gpiozero/gpiozero/issues/704>

¹⁰⁰² <https://github.com/gpiozero/gpiozero/issues/629>

¹⁰⁰³ <https://github.com/gpiozero/gpiozero/issues/634>

¹⁰⁰⁴ <https://github.com/gpiozero/gpiozero/issues/652>

¹⁰⁰⁵ <https://github.com/gpiozero/gpiozero/issues/593>

¹⁰⁰⁶ <https://github.com/gpiozero/gpiozero/issues/658>

¹⁰⁰⁷ <https://github.com/gpiozero/gpiozero/issues/666>

¹⁰⁰⁸ <https://github.com/gpiozero/gpiozero/issues/668>

¹⁰⁰⁹ <https://github.com/gpiozero/gpiozero/issues/669>

¹⁰¹⁰ <https://github.com/gpiozero/gpiozero/issues/671>

¹⁰¹¹ <https://github.com/gpiozero/gpiozero/issues/673>

¹⁰¹² <https://github.com/gpiozero/gpiozero/issues/674>

¹⁰¹³ <https://github.com/gpiozero/gpiozero/issues/306>

¹⁰¹⁴ <https://github.com/gpiozero/gpiozero/issues/619>

¹⁰¹⁵ <https://github.com/gpiozero/gpiozero/issues/584>

¹⁰¹⁶ <https://github.com/gpiozero/gpiozero/issues/595>

¹⁰¹⁷ <https://github.com/gpiozero/gpiozero/issues/617>

¹⁰¹⁸ <https://github.com/gpiozero/gpiozero/issues/618>

¹⁰¹⁹ <https://github.com/gpiozero/gpiozero/issues/386>

- A variety of other minor enhancements, largely thanks to Andrew Scheller! (#479¹⁰²⁰, #489¹⁰²¹, #491¹⁰²², #492¹⁰²³)

26.9 Release 1.4.0 (2017-07-26)

- Pin factory is now *configurable from device constructors* (page 223) as well as command line. NOTE: this is a backwards incompatible change for manual pin construction but it's hoped this is (currently) a sufficiently rare use case that this won't affect too many people and the benefits of the new system warrant such a change, i.e. the ability to use remote pin factories with HAT classes that don't accept pin assignments (#279¹⁰²⁴)
- Major work on SPI, primarily to support remote hardware SPI (#421¹⁰²⁵, #459¹⁰²⁶, #465¹⁰²⁷, #468¹⁰²⁸, #575¹⁰²⁹)
- Pin reservation now works properly between GPIO and SPI devices (#459¹⁰³⁰, #468¹⁰³¹)
- Lots of work on the documentation: *source/values chapter* (page 61), better charts, more recipes, *remote GPIO configuration* (page 45), mock pins, better PDF output (#484¹⁰³², #469¹⁰³³, #523¹⁰³⁴, #520¹⁰³⁵, #434¹⁰³⁶, #565¹⁰³⁷, #576¹⁰³⁸)
- Support for *StatusZero* (page 181) and *StatusBoard* (page 182) HATs (#558¹⁰³⁹)
- Added **pinout** command line tool to provide a simple reference to the GPIO layout and information about the associated Pi (#497¹⁰⁴⁰, #504¹⁰⁴¹) thanks to Stewart Adcock for the initial work
- `pi_info()` (page 217) made more lenient for new (unknown) Pi models (#529¹⁰⁴²)
- Fixed a variety of packaging issues (#535¹⁰⁴³, #518¹⁰⁴⁴, #519¹⁰⁴⁵)
- Improved text in factory fallback warnings (#572¹⁰⁴⁶)

¹⁰²⁰ <https://github.com/gpiozero/gpiozero/issues/479>

¹⁰²¹ <https://github.com/gpiozero/gpiozero/issues/489>

¹⁰²² <https://github.com/gpiozero/gpiozero/issues/491>

¹⁰²³ <https://github.com/gpiozero/gpiozero/issues/492>

¹⁰²⁴ <https://github.com/gpiozero/gpiozero/issues/279>

¹⁰²⁵ <https://github.com/gpiozero/gpiozero/issues/421>

¹⁰²⁶ <https://github.com/gpiozero/gpiozero/issues/459>

¹⁰²⁷ <https://github.com/gpiozero/gpiozero/issues/465>

¹⁰²⁸ <https://github.com/gpiozero/gpiozero/issues/468>

¹⁰²⁹ <https://github.com/gpiozero/gpiozero/issues/575>

¹⁰³⁰ <https://github.com/gpiozero/gpiozero/issues/459>

¹⁰³¹ <https://github.com/gpiozero/gpiozero/issues/468>

¹⁰³² <https://github.com/gpiozero/gpiozero/issues/484>

¹⁰³³ <https://github.com/gpiozero/gpiozero/issues/469>

¹⁰³⁴ <https://github.com/gpiozero/gpiozero/issues/523>

¹⁰³⁵ <https://github.com/gpiozero/gpiozero/issues/520>

¹⁰³⁶ <https://github.com/gpiozero/gpiozero/issues/434>

¹⁰³⁷ <https://github.com/gpiozero/gpiozero/issues/565>

¹⁰³⁸ <https://github.com/gpiozero/gpiozero/issues/576>

¹⁰³⁹ <https://github.com/gpiozero/gpiozero/issues/558>

¹⁰⁴⁰ <https://github.com/gpiozero/gpiozero/issues/497>

¹⁰⁴¹ <https://github.com/gpiozero/gpiozero/issues/504>

¹⁰⁴² <https://github.com/gpiozero/gpiozero/issues/529>

¹⁰⁴³ <https://github.com/gpiozero/gpiozero/issues/535>

¹⁰⁴⁴ <https://github.com/gpiozero/gpiozero/issues/518>

¹⁰⁴⁵ <https://github.com/gpiozero/gpiozero/issues/519>

¹⁰⁴⁶ <https://github.com/gpiozero/gpiozero/issues/572>

26.10 Release 1.3.2 (2017-03-03)

- Added new Pi models to stop `pi_info()` (page 217) breaking
- Fix issue with `pi_info()` (page 217) breaking on unknown Pi models

26.11 Release 1.3.1 (2016-08-31 ... later)

- Fixed hardware SPI support which Dave broke in 1.3.0. Sorry!
- Some minor docs changes

26.12 Release 1.3.0 (2016-08-31)

- Added `ButtonBoard` (page 165) for reading multiple buttons in a single class (#340¹⁰⁴⁷)
- Added `Servo` (page 137) and `AngularServo` (page 139) classes for controlling simple servo motors (#248¹⁰⁴⁸)
- Lots of work on supporting easier use of internal and third-party pin implementations (#359¹⁰⁴⁹)
- `Robot` (page 176) now has a proper `value` (page 178) attribute (#305¹⁰⁵⁰)
- Added `CPUTemperature` (page 192) as another demo of “internal” devices (#294¹⁰⁵¹)
- A temporary work-around for an issue with `DistanceSensor` (page 113) was included but a full fix is in the works (#385¹⁰⁵²)
- More work on the documentation (#320¹⁰⁵³, #295¹⁰⁵⁴, #289¹⁰⁵⁵, etc.)

Not quite as much as we’d hoped to get done this time, but we’re rushing to make a Raspbian freeze. As always, thanks to the community - your suggestions and PRs have been brilliant and even if we don’t take stuff exactly as is, it’s always great to see your ideas. Onto 1.4!

26.13 Release 1.2.0 (2016-04-10)

- Added `Energenie` (page 180) class for controlling Energenie plugs (#69¹⁰⁵⁶)
- Added `LineSensor` (page 108) class for single line-sensors (#109¹⁰⁵⁷)
- Added `DistanceSensor` (page 113) class for HC-SR04 ultra-sonic sensors (#114¹⁰⁵⁸)
- Added `SnowPi` (page 183) class for the Ryantek Snow-pi board (#130¹⁰⁵⁹)
- Added `when_held` (page 106) (and related properties) to `Button` (page 105) (#115¹⁰⁶⁰)

¹⁰⁴⁷ <https://github.com/gpiozero/gpiozero/issues/340>

¹⁰⁴⁸ <https://github.com/gpiozero/gpiozero/issues/248>

¹⁰⁴⁹ <https://github.com/gpiozero/gpiozero/issues/359>

¹⁰⁵⁰ <https://github.com/gpiozero/gpiozero/issues/305>

¹⁰⁵¹ <https://github.com/gpiozero/gpiozero/issues/294>

¹⁰⁵² <https://github.com/gpiozero/gpiozero/issues/385>

¹⁰⁵³ <https://github.com/gpiozero/gpiozero/issues/320>

¹⁰⁵⁴ <https://github.com/gpiozero/gpiozero/issues/295>

¹⁰⁵⁵ <https://github.com/gpiozero/gpiozero/issues/289>

¹⁰⁵⁶ <https://github.com/gpiozero/gpiozero/issues/69>

¹⁰⁵⁷ <https://github.com/gpiozero/gpiozero/issues/109>

¹⁰⁵⁸ <https://github.com/gpiozero/gpiozero/issues/114>

¹⁰⁵⁹ <https://github.com/gpiozero/gpiozero/issues/130>

¹⁰⁶⁰ <https://github.com/gpiozero/gpiozero/issues/115>

- Fixed issues with installing GPIO Zero for python 3 on Raspbian Wheezy releases (#140¹⁰⁶¹)
- Added support for lots of ADC chips (MCP3xxx family) (#162¹⁰⁶²) - many thanks to pcopa and lurch!
- Added support for pigpiod as a pin implementation with *PiGPIOPin* (page 236) (#180¹⁰⁶³)
- Many refinements to the base classes mean more consistency in composite devices and several bugs squashed (#164¹⁰⁶⁴, #175¹⁰⁶⁵, #182¹⁰⁶⁶, #189¹⁰⁶⁷, #193¹⁰⁶⁸, #229¹⁰⁶⁹)
- GPIO Zero is now aware of what sort of Pi it's running on via *pi_info()* (page 217) and has a fairly extensive database of Pi information which it uses to determine when users request impossible things (like pull-down on a pin with a physical pull-up resistor) (#222¹⁰⁷⁰)
- The source/values system was enhanced to ensure normal usage doesn't stress the CPU and lots of utilities were added (#181¹⁰⁷¹, #251¹⁰⁷²)

And I'll just add a note of thanks to the many people in the community who contributed to this release: we've had some great PRs, suggestions, and bug reports in this version. Of particular note:

- Schelto van Doorn was instrumental in adding support for numerous ADC chips
- Alex Eames generously donated a RasPiO Analog board which was extremely useful in developing the software SPI interface (and testing the ADC support)
- Andrew Scheller squashed several dozen bugs (usually a day or so after Dave had introduced them ;)

As always, many thanks to the whole community - we look forward to hearing from you more in 1.3!

26.14 Release 1.1.0 (2016-02-08)

- Documentation converted to reST and expanded to include generic classes and several more recipes (#80¹⁰⁷³, #82¹⁰⁷⁴, #101¹⁰⁷⁵, #119¹⁰⁷⁶, #135¹⁰⁷⁷, #168¹⁰⁷⁸)
- New *CamJamKitRobot* (page 179) class with the pre-defined motor pins for the new CamJam EduKit
- New *LEDBarGraph* (page 160) class (many thanks to Martin O'Hanlon!) (#126¹⁰⁷⁹, #176¹⁰⁸⁰)
- New *Pin* (page 227) implementation abstracts out the concept of a GPIO pin paving the way for alternate library support and IO extenders in future (#141¹⁰⁸¹)
- New *LEDBoard.blink()* (page 158) method which works properly even when background is set to `False` (#94¹⁰⁸², #161¹⁰⁸³)
- New *RGBLED.blink()* (page 129) method which implements (rudimentary) color fading too! (#135¹⁰⁸⁴,

¹⁰⁶¹ <https://github.com/gpiozero/gpiozero/issues/140>

¹⁰⁶² <https://github.com/gpiozero/gpiozero/issues/162>

¹⁰⁶³ <https://github.com/gpiozero/gpiozero/issues/180>

¹⁰⁶⁴ <https://github.com/gpiozero/gpiozero/issues/164>

¹⁰⁶⁵ <https://github.com/gpiozero/gpiozero/issues/175>

¹⁰⁶⁶ <https://github.com/gpiozero/gpiozero/issues/182>

¹⁰⁶⁷ <https://github.com/gpiozero/gpiozero/issues/189>

¹⁰⁶⁸ <https://github.com/gpiozero/gpiozero/issues/193>

¹⁰⁶⁹ <https://github.com/gpiozero/gpiozero/issues/229>

¹⁰⁷⁰ <https://github.com/gpiozero/gpiozero/issues/222>

¹⁰⁷¹ <https://github.com/gpiozero/gpiozero/issues/181>

¹⁰⁷² <https://github.com/gpiozero/gpiozero/issues/251>

¹⁰⁷³ <https://github.com/gpiozero/gpiozero/issues/80>

¹⁰⁷⁴ <https://github.com/gpiozero/gpiozero/issues/82>

¹⁰⁷⁵ <https://github.com/gpiozero/gpiozero/issues/101>

¹⁰⁷⁶ <https://github.com/gpiozero/gpiozero/issues/119>

¹⁰⁷⁷ <https://github.com/gpiozero/gpiozero/issues/135>

¹⁰⁷⁸ <https://github.com/gpiozero/gpiozero/issues/168>

¹⁰⁷⁹ <https://github.com/gpiozero/gpiozero/issues/126>

¹⁰⁸⁰ <https://github.com/gpiozero/gpiozero/issues/176>

¹⁰⁸¹ <https://github.com/gpiozero/gpiozero/issues/141>

¹⁰⁸² <https://github.com/gpiozero/gpiozero/issues/94>

¹⁰⁸³ <https://github.com/gpiozero/gpiozero/issues/161>

¹⁰⁸⁴ <https://github.com/gpiozero/gpiozero/issues/135>

#174¹⁰⁸⁵)

- New `initial_value` attribute on `OutputDevice` (page 144) ensures consistent behaviour on construction (#118¹⁰⁸⁶)
- New `active_high` attribute on `PWMOutputDevice` (page 142) and `RGBLED` (page 128) allows use of common anode devices (#143¹⁰⁸⁷, #154¹⁰⁸⁸)
- Loads of new ADC chips supported (many thanks to GitHub user pcopa!) (#150¹⁰⁸⁹)

26.15 Release 1.0.0 (2015-11-16)

- Debian packaging added (#44¹⁰⁹⁰)
- `PWMLLED` (page 127) class added (#58¹⁰⁹¹)
- `TemperatureSensor` removed pending further work (#93¹⁰⁹²)
- `Buzzer.beep()` (page 132) alias method added (#75¹⁰⁹³)
- `Motor` (page 134) PWM devices exposed, and `Robot` (page 176) motor devices exposed (#107¹⁰⁹⁴)

26.16 Release 0.9.0 (2015-10-25)

Fourth public beta

- Added source and values properties to all relevant classes (#76¹⁰⁹⁵)
- Fix names of parameters in `Motor` (page 134) constructor (#79¹⁰⁹⁶)
- Added wrappers for LED groups on add-on boards (#81¹⁰⁹⁷)

26.17 Release 0.8.0 (2015-10-16)

Third public beta

- Added generic `AnalogInputDevice` (page 153) class along with specific classes for the `MCP3008` (page 149) and `MCP3004` (page 149) (#41¹⁰⁹⁸)
- Fixed `DigitalOutputDevice.blink()` (page 141) (#57¹⁰⁹⁹)

¹⁰⁸⁵ <https://github.com/gpiozero/gpiozero/issues/174>

¹⁰⁸⁶ <https://github.com/gpiozero/gpiozero/issues/118>

¹⁰⁸⁷ <https://github.com/gpiozero/gpiozero/issues/143>

¹⁰⁸⁸ <https://github.com/gpiozero/gpiozero/issues/154>

¹⁰⁸⁹ <https://github.com/gpiozero/gpiozero/issues/150>

¹⁰⁹⁰ <https://github.com/gpiozero/gpiozero/issues/44>

¹⁰⁹¹ <https://github.com/gpiozero/gpiozero/issues/58>

¹⁰⁹² <https://github.com/gpiozero/gpiozero/issues/93>

¹⁰⁹³ <https://github.com/gpiozero/gpiozero/issues/75>

¹⁰⁹⁴ <https://github.com/gpiozero/gpiozero/issues/107>

¹⁰⁹⁵ <https://github.com/gpiozero/gpiozero/issues/76>

¹⁰⁹⁶ <https://github.com/gpiozero/gpiozero/issues/79>

¹⁰⁹⁷ <https://github.com/gpiozero/gpiozero/issues/81>

¹⁰⁹⁸ <https://github.com/gpiozero/gpiozero/issues/41>

¹⁰⁹⁹ <https://github.com/gpiozero/gpiozero/issues/57>

26.18 Release 0.7.0 (2015-10-09)

Second public beta

26.19 Release 0.6.0 (2015-09-28)

First public beta

26.20 Release 0.5.0 (2015-09-24)

26.21 Release 0.4.0 (2015-09-23)

26.22 Release 0.3.0 (2015-09-22)

26.23 Release 0.2.0 (2015-09-21)

Initial release

LICENSE

Copyright © 2015-2020 Ben Nuttall <ben@bennuttall.com> and contributors; see [gpiozero](#) (page 1) for current list
SPDX-License-Identifier: BSD-3-Clause

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

PYTHON MODULE INDEX

g

- `gpiozero`, 3
- `gpiozero.boards`, 157
- `gpiozero.devices`, 197
- `gpiozero.exc`, 239
- `gpiozero.fonts`, 211
- `gpiozero.input_devices`, 105
- `gpiozero.internal_devices`, 189
- `gpiozero.output_devices`, 125
- `gpiozero.pins`, 221
 - `gpiozero.pins.data`, 217
 - `gpiozero.pins.lgpio`, 235
 - `gpiozero.pins.local`, 234
 - `gpiozero.pins.mock`, 237
 - `gpiozero.pins.native`, 237
 - `gpiozero.pins.pi`, 233
 - `gpiozero.pins.pigpio`, 236
 - `gpiozero.pins.rpigpio`, 235
- `gpiozero.spi_devices`, 147
- `gpiozero.tones`, 215
- `gpiozero.tools`, 203

Symbols

`_shared_key()` (*gpiozero.SharedMixin* class method), 200

`--color`
pinout command line option, 71

`--help`
pinout command line option, 71
pintest command line option, 76

`--monochrome`
pinout command line option, 71

`--pins`
pintest command line option, 76

`--revision`
pinout command line option, 71
pintest command line option, 76

`--skip`
pintest command line option, 76

`--version`
pintest command line option, 76

`--xyz`
pinout command line option, 71

`--yes`
pintest command line option, 76

`-c`
pinout command line option, 71

`-h`
pinout command line option, 71
pintest command line option, 76

`-m`
pinout command line option, 71

`-p`
pintest command line option, 76

`-r`
pinout command line option, 71
pintest command line option, 76

`-s`
pintest command line option, 76

`-x`
pinout command line option, 71

`-y`
pintest command line option, 76

A

`absoluted()` (in module *gpiozero.tools*), 203

`active_high` (*gpiozero.OutputDevice* property), 144

`active_time` (*gpiozero.DigitalInputDevice* property), 119

`active_time` (*gpiozero.EventsMixin* property), 201

`all_values()` (in module *gpiozero.tools*), 206

`alternating_values()` (in module *gpiozero.tools*), 208

`amber` (*gpiozero.TrafficLights* attribute), 168

`AnalogInputDevice` (class in *gpiozero*), 153

`angle` (*gpiozero.AngularServo* property), 140

`AngularServo` (class in *gpiozero*), 139

`any_values()` (in module *gpiozero.tools*), 207

`arms` (*gpiozero.SnowPi* attribute), 183

`averaged()` (in module *gpiozero.tools*), 207

B

`backward()` (*gpiozero.Motor* method), 135

`backward()` (*gpiozero.PhaseEnableMotor* method), 136

`backward()` (*gpiozero.Robot* method), 177

`BadEventHandler`, 239

`BadPinFactory`, 240

`BadQueueLen`, 240

`BadWaitTime`, 239

`beep()` (*gpiozero.Buzzer* method), 132

`bits` (*gpiozero.AnalogInputDevice* property), 154

`bits_per_word` (*gpiozero.SPI* property), 230

`blink()` (*gpiozero.DigitalOutputDevice* method), 141

`blink()` (*gpiozero.LED* method), 126

`blink()` (*gpiozero.LEDBoard* method), 158

`blink()` (*gpiozero.PWMLED* method), 127

`blink()` (*gpiozero.PWMOutputDevice* method), 142

`blink()` (*gpiozero.RGBLED* method), 129

`blue` (*gpiozero.RGBLED* property), 130

`board_info` (*gpiozero.Factory* property), 227

`booleanized()` (in module *gpiozero.tools*), 203

`bounce` (*gpiozero.Pin* property), 228

`Button` (class in *gpiozero*), 105

`button` (*gpiozero.Pibrella* attribute), 176

`button` (*gpiozero.StatusBoard* attribute), 182

`button` (*gpiozero.TrafficLightsBuzzer* attribute), 169

`ButtonBoard` (class in *gpiozero*), 165

`Buzzer` (class in *gpiozero*), 131

`buzzer` (*gpiozero.JamHat* attribute), 175

`buzzer` (*gpiozero.Pibrella* attribute), 176

`buzzer` (*gpiozero.TrafficLightsBuzzer* attribute), 168

C

[CallbackSetToNone](#), 244
[CamJamKitRobot](#) (class in [gpiozero](#)), 179
[channel](#) ([gpiozero.MCP3002](#) property), 148
[channel](#) ([gpiozero.MCP3004](#) property), 149
[channel](#) ([gpiozero.MCP3008](#) property), 149
[channel](#) ([gpiozero.MCP3202](#) property), 150
[channel](#) ([gpiozero.MCP3204](#) property), 150
[channel](#) ([gpiozero.MCP3208](#) property), 150
[channel](#) ([gpiozero.MCP3302](#) property), 151
[channel](#) ([gpiozero.MCP3304](#) property), 152
[clamped\(\)](#) (in module [gpiozero.tools](#)), 204
[clock_mode](#) ([gpiozero.SPI](#) property), 231
[clock_phase](#) ([gpiozero.SPI](#) property), 231
[clock_polarity](#) ([gpiozero.SPI](#) property), 231
[close\(\)](#) ([gpiozero.CompositeDevice](#) method), 187
[close\(\)](#) ([gpiozero.Device](#) method), 199
[close\(\)](#) ([gpiozero.Factory](#) method), 226
[close\(\)](#) ([gpiozero.GPIODevice](#) method), 122
[close\(\)](#) ([gpiozero.Pin](#) method), 227
[close\(\)](#) ([gpiozero.pins.pi.PiFactory](#) method), 233
[close\(\)](#) ([gpiozero.SPIDevice](#) method), 154
[closed](#) ([gpiozero.CompositeDevice](#) property), 188
[closed](#) ([gpiozero.Device](#) property), 199
[closed](#) ([gpiozero.GPIODevice](#) property), 123
[closed](#) ([gpiozero.SPIDevice](#) property), 155
[col](#) ([gpiozero.PinInfo](#) attribute), 219
[color](#) ([gpiozero.RGBLED](#) property), 130
[columns](#) ([gpiozero.HeaderInfo](#) attribute), 218
[CompositeDevice](#) (class in [gpiozero](#)), 187
[CompositeDeviceBadDevice](#), 240
[CompositeDeviceBadName](#), 240
[CompositeDeviceBadOrder](#), 240
[CompositeDeviceError](#), 240
[CompositeOutputDevice](#) (class in [gpiozero](#)), 186
[cos_values\(\)](#) (in module [gpiozero.tools](#)), 208
[CPUTemperature](#) (class in [gpiozero](#)), 192

D

[detach\(\)](#) ([gpiozero.Servo](#) method), 138
[Device](#) (class in [gpiozero](#)), 199
[DeviceClosed](#), 239
[differential](#) ([gpiozero.MCP3002](#) property), 148
[differential](#) ([gpiozero.MCP3004](#) property), 149
[differential](#) ([gpiozero.MCP3008](#) property), 149
[differential](#) ([gpiozero.MCP3202](#) property), 150
[differential](#) ([gpiozero.MCP3204](#) property), 150
[differential](#) ([gpiozero.MCP3208](#) property), 150
[differential](#) ([gpiozero.MCP3302](#) property), 151
[differential](#) ([gpiozero.MCP3304](#) property), 152
[DigitalInputDevice](#) (class in [gpiozero](#)), 119
[DigitalOutputDevice](#) (class in [gpiozero](#)), 141
[DiskUsage](#) (class in [gpiozero](#)), 195
[distance](#) ([gpiozero.DistanceSensor](#) property), 114
[DistanceSensor](#) (class in [gpiozero](#)), 113
[DistanceSensorNoEcho](#), 243
[down\(\)](#) ([gpiozero.tones.Tone](#) method), 215

E

[echo](#) ([gpiozero.DistanceSensor](#) property), 114
[edges](#) ([gpiozero.Pin](#) property), 228
[end_time](#) ([gpiozero.TimeOfDay](#) property), 190
[Energenie](#) (class in [gpiozero](#)), 180
[EnergenieBadSocket](#), 240
[EnergenieSocketMissing](#), 240
[environment](#) variable
 [GPIOZERO_PIN_FACTORY](#), 49, 58, 77, 81, 89, 223, 224
 [GPIOZERO_TEST_INPUT_PIN](#), 102
 [GPIOZERO_TEST_PIN](#), 102
 [PIGPIO_ADDR](#), 48, 58, 77, 224
 [PIGPIO_PORT](#), 77
[EventsMixin](#) (class in [gpiozero](#)), 201
[eyes](#) ([gpiozero.PumpkinPi](#) attribute), 184
[eyes](#) ([gpiozero.SnowPi](#) attribute), 183

F

[Factory](#) (class in [gpiozero](#)), 226
[FishDish](#) (class in [gpiozero](#)), 173
[font](#) ([gpiozero.LEDCharDisplay](#) property), 163
[forward\(\)](#) ([gpiozero.Motor](#) method), 135
[forward\(\)](#) ([gpiozero.PhaseEnableMotor](#) method), 136
[forward\(\)](#) ([gpiozero.Robot](#) method), 177
[frame_width](#) ([gpiozero.Servo](#) property), 138
[frequency](#) ([gpiozero.Pin](#) property), 229
[frequency](#) ([gpiozero.PWMOutputDevice](#) property), 143
[frequency](#) ([gpiozero.tones.Tone](#) property), 216
[from_frequency\(\)](#) ([gpiozero.tones.Tone](#) class method), 216
[from_midi\(\)](#) ([gpiozero.tones.Tone](#) class method), 216
[from_note\(\)](#) ([gpiozero.tones.Tone](#) class method), 216
[function](#) ([gpiozero.Pin](#) property), 229
[function](#) ([gpiozero.PinInfo](#) attribute), 219

G

[GPIODevice](#) (class in [gpiozero](#)), 122
[GPIODeviceClosed](#), 241
[GPIODeviceError](#), 241
[GPIOPinInUse](#), 241
[GPIOPinMissing](#), 241
[gpiozero](#)
 module, 3
[gpiozero.boards](#)
 module, 157
[gpiozero.devices](#)
 module, 197
[gpiozero.exc](#)
 module, 239
[gpiozero.fonts](#)
 module, 211
[gpiozero.input_devices](#)
 module, 105
[gpiozero.internal_devices](#)
 module, 189
[gpiozero.output_devices](#)

- module, 125
- gpiozero.pins
 - module, 221
- gpiozero.pins.data
 - module, 217
- gpiozero.pins.lgpio
 - module, 235
- gpiozero.pins.local
 - module, 234
- gpiozero.pins.mock
 - module, 237
- gpiozero.pins.native
 - module, 237
- gpiozero.pins.pi
 - module, 233
- gpiozero.pins.pigpio
 - module, 236
- gpiozero.pins.rpigpio
 - module, 235
- gpiozero.spi_devices
 - module, 147
- gpiozero.tones
 - module, 215
- gpiozero.tools
 - module, 203
- GPIOWERO_PIN_FACTORY, 49, 58, 81, 89, 223, 224
- GPIOWERO_TEST_INPUT_PIN, 102
- GPIOWERO_TEST_PIN, 102
- GPIOWeroError, 239
- GPIOWeroWarning, 243
- green (*gpiozero.RGBLED* property), 130
- green (*gpiozero.StatusBoard* attribute), 182
- green (*gpiozero.StatusZero* attribute), 181
- green (*gpiozero.TrafficLights* attribute), 168

H

- HeaderInfo (class in *gpiozero*), 218
- held_time (*gpiozero.Button* property), 106
- held_time (*gpiozero.HoldMixin* property), 202
- hold_repeat (*gpiozero.Button* property), 106
- hold_repeat (*gpiozero.HoldMixin* property), 202
- hold_time (*gpiozero.Button* property), 106
- hold_time (*gpiozero.HoldMixin* property), 202
- HoldMixin (class in *gpiozero*), 202
- host (*gpiozero.PingServer* property), 191

I

- inactive_time (*gpiozero.DigitalInputDevice* property), 119
- inactive_time (*gpiozero.EventsMixin* property), 201
- info (*gpiozero.Pin* property), 229
- info (*gpiozero.pins.pi.PiPin* property), 234
- input_with_pull() (*gpiozero.Pin* method), 228
- InputDevice (class in *gpiozero*), 121
- InputDeviceError, 241
- inputs (*gpiozero.Pibrella* attribute), 176
- interfaces (*gpiozero.PinInfo* attribute), 219
- InternalDevice (class in *gpiozero*), 196

- inverted() (in module *gpiozero.tools*), 204
- is_active (*gpiozero.AngularServo* property), 140
- is_active (*gpiozero.Buzzer* property), 132
- is_active (*gpiozero.CompositeDevice* property), 188
- is_active (*gpiozero.CPUTemperature* property), 193
- is_active (*gpiozero.Device* property), 199
- is_active (*gpiozero.DiskUsage* property), 195
- is_active (*gpiozero.InputDevice* property), 122
- is_active (*gpiozero.LoadAverage* property), 194
- is_active (*gpiozero.Motor* property), 135
- is_active (*gpiozero.PhaseEnableMotor* property), 136
- is_active (*gpiozero.PingServer* property), 191
- is_active (*gpiozero.PWMOutputDevice* property), 143
- is_active (*gpiozero.Servo* property), 138
- is_active (*gpiozero.SmoothedInputDevice* property), 121
- is_active (*gpiozero.TimeOfDay* property), 190
- is_active (*gpiozero.TonalBuzzer* property), 134
- is_held (*gpiozero.Button* property), 106
- is_held (*gpiozero.HoldMixin* property), 202
- is_lit (*gpiozero.LED* property), 126
- is_lit (*gpiozero.LEDCollection* property), 186
- is_lit (*gpiozero.PWMLed* property), 128
- is_lit (*gpiozero.RGBLED* property), 130
- is_pressed (*gpiozero.Button* property), 106
- is_pressed (*gpiozero.ButtonBoard* property), 166

J

- JamHat (class in *gpiozero*), 174

L

- LED (class in *gpiozero*), 125
- LEDBarGraph (class in *gpiozero*), 160
- LEDBoard (class in *gpiozero*), 157
- LedBorg (class in *gpiozero*), 170
- LEDCharDisplay (class in *gpiozero*), 162
- LEDCharFont (class in *gpiozero*), 165
- LEDCollection (class in *gpiozero*), 186
- LEDMultiCharDisplay (class in *gpiozero*), 163
- leds (*gpiozero.LEDCollection* property), 186
- left() (*gpiozero.Robot* method), 177
- left_motor (*gpiozero.Robot* attribute), 177
- LGPIOWactory (class in *gpiozero.pins.lgpio*), 235
- LGPIOPin (class in *gpiozero.pins.lgpio*), 236
- light_detected (*gpiozero.LightSensor* property), 112
- lights (*gpiozero.Pibrella* attribute), 176
- lights (*gpiozero.StatusBoard* attribute), 182
- lights (*gpiozero.TrafficLightsBuzzer* attribute), 168
- LightSensor (class in *gpiozero*), 111
- LineSensor (class in *gpiozero*), 108
- lit_count (*gpiozero.LEDBarGraph* property), 161
- load_average (*gpiozero.LoadAverage* property), 194
- load_font_14seg() (in module *gpiozero.fonts*), 211
- load_font_7seg() (in module *gpiozero.fonts*), 211

`load_segment_font()` (in module *gpiozero.fonts*), 212
LoadAverage (class in *gpiozero*), 193
LocalPiFactory (class in *gpiozero.pins.local*), 234
LocalPiPin (class in *gpiozero.pins.local*), 235
`lsb_first` (*gpiozero.SPI* property), 232

M

`max()` (*gpiozero.AngularServo* method), 140
`max()` (*gpiozero.Servo* method), 138
`max_angle` (*gpiozero.AngularServo* property), 140
`max_distance` (*gpiozero.DistanceSensor* property), 114
`max_pulse_width` (*gpiozero.Servo* property), 138
`max_steps` (*gpiozero.RotaryEncoder* property), 116
`max_tone` (*gpiozero.TonalBuzzer* property), 134
`max_voltage` (*gpiozero.AnalogInputDevice* property), 154
MCP3001 (class in *gpiozero*), 148
MCP3002 (class in *gpiozero*), 148
MCP3004 (class in *gpiozero*), 149
MCP3008 (class in *gpiozero*), 149
MCP3201 (class in *gpiozero*), 149
MCP3202 (class in *gpiozero*), 150
MCP3204 (class in *gpiozero*), 150
MCP3208 (class in *gpiozero*), 150
MCP3301 (class in *gpiozero*), 151
MCP3302 (class in *gpiozero*), 151
MCP3304 (class in *gpiozero*), 152
`mid()` (*gpiozero.AngularServo* method), 140
`mid()` (*gpiozero.Servo* method), 138
`mid_tone` (*gpiozero.TonalBuzzer* property), 134
`midi` (*gpiozero.tones.Tone* property), 216
`min()` (*gpiozero.AngularServo* method), 140
`min()` (*gpiozero.Servo* method), 138
`min_angle` (*gpiozero.AngularServo* property), 140
`min_pulse_width` (*gpiozero.Servo* property), 138
`min_tone` (*gpiozero.TonalBuzzer* property), 134
MockChargingPin (class in *gpiozero.pins.mock*), 238
MockConnectedPin (class in *gpiozero.pins.mock*), 238
MockFactory (class in *gpiozero.pins.mock*), 237
MockPin (class in *gpiozero.pins.mock*), 238
MockPWMPin (class in *gpiozero.pins.mock*), 238
MockSPIDevice (class in *gpiozero.pins.mock*), 238
MockTriggerPin (class in *gpiozero.pins.mock*), 238
module
 gpiozero, 3
 gpiozero.boards, 157
 gpiozero.devices, 197
 gpiozero.exc, 239
 gpiozero.fonts, 211
 gpiozero.input_devices, 105
 gpiozero.internal_devices, 189
 gpiozero.output_devices, 125
 gpiozero.pins, 221
 gpiozero.pins.data, 217
 gpiozero.pins.lgpio, 235

gpiozero.pins.local, 234
gpiozero.pins.mock, 237
gpiozero.pins.native, 237
gpiozero.pins.pi, 233
gpiozero.pins.pigpio, 236
gpiozero.pins.rpigpio, 235
gpiozero.spi_devices, 147
gpiozero.tones, 215
gpiozero.tools, 203
`motion_detected` (*gpiozero.MotionSensor* property), 110
MotionSensor (class in *gpiozero*), 109
Motor (class in *gpiozero*), 134
`multiplied()` (in module *gpiozero.tools*), 207

N

`name` (*gpiozero.HeaderInfo* attribute), 218
`name` (*gpiozero.PinInfo* attribute), 219
`namedtuple` (*gpiozero.CompositeDevice* property), 188
`names` (*gpiozero.PinInfo* attribute), 219
Native2711Pin (class in *gpiozero.pins.native*), 237
Native2835Pin (class in *gpiozero.pins.native*), 237
NativeFactory (class in *gpiozero.pins.native*), 237
NativePin (class in *gpiozero.pins.native*), 237
`negated()` (in module *gpiozero.tools*), 204
`nose` (*gpiozero.SnowPi* attribute), 183
`note` (*gpiozero.tones.Tone* property), 216
`number` (*gpiozero.PinInfo* attribute), 219

O

`octaves` (*gpiozero.TonalBuzzer* property), 134
`off()` (*gpiozero.Buzzer* method), 132
`off()` (*gpiozero.CompositeOutputDevice* method), 186
`off()` (*gpiozero.DigitalOutputDevice* method), 142
`off()` (*gpiozero.Energenie* method), 180
`off()` (*gpiozero.JamHat* method), 175
`off()` (*gpiozero.LED* method), 126
`off()` (*gpiozero.LEDBoard* method), 158
`off()` (*gpiozero.OutputDevice* method), 144
`off()` (*gpiozero.Pibrella* method), 176
`off()` (*gpiozero.PWMLED* method), 127
`off()` (*gpiozero.PWMOutputDevice* method), 143
`off()` (*gpiozero.RGBLED* method), 130
`on()` (*gpiozero.Buzzer* method), 132
`on()` (*gpiozero.CompositeOutputDevice* method), 186
`on()` (*gpiozero.DigitalOutputDevice* method), 142
`on()` (*gpiozero.Energenie* method), 180
`on()` (*gpiozero.JamHat* method), 175
`on()` (*gpiozero.LED* method), 126
`on()` (*gpiozero.LEDBoard* method), 158
`on()` (*gpiozero.OutputDevice* method), 144
`on()` (*gpiozero.Pibrella* method), 176
`on()` (*gpiozero.PWMLED* method), 127
`on()` (*gpiozero.PWMOutputDevice* method), 143
`on()` (*gpiozero.RGBLED* method), 130
`output_with_state()` (*gpiozero.Pin* method), 228
OutputDevice (class in *gpiozero*), 144

OutputDeviceBadValue, 242
 OutputDeviceError, 242
 outputs (*gpiozero.Pibrella* attribute), 176

P

partial (*gpiozero.SmoothedInputDevice* property), 121
 PhaseEnableMotor (class in *gpiozero*), 136
 PhaseEnableRobot (class in *gpiozero*), 178
 pi_info() (in module *gpiozero*), 217
 PiBoardInfo (class in *gpiozero*), 217
 Pibrella (class in *gpiozero*), 175
 PiFactory (class in *gpiozero.pins.pi*), 233
 PIGPIO_ADDR, 48, 58, 224
 PiGPIOFactory (class in *gpiozero.pins.pigpio*), 236
 PiGPIOPin (class in *gpiozero.pins.pigpio*), 236
 PiHutXmasTree (class in *gpiozero*), 169
 PiLiter (class in *gpiozero*), 170
 PiLiterBarGraph (class in *gpiozero*), 171
 Pin (class in *gpiozero*), 227
 pin (*gpiozero.Button* property), 106
 pin (*gpiozero.Buzzer* property), 132
 pin (*gpiozero.GPIODevice* property), 123
 pin (*gpiozero.LED* property), 126
 pin (*gpiozero.LightSensor* property), 112
 pin (*gpiozero.LineSensor* property), 108
 pin (*gpiozero.MotionSensor* property), 110
 pin (*gpiozero.PWMLED* property), 128
 pin() (*gpiozero.Factory* method), 226
 pin() (*gpiozero.pins.mock.MockFactory* method), 237
 pin() (*gpiozero.pins.pi.PiFactory* method), 233
 pin_class (*gpiozero.pins.mock.MockFactory* attribute), 237
 pin_factory (*gpiozero.Device* attribute), 199
 PinEdgeDetectUnsupported, 242
 PinError, 242
 PinFactoryFallback, 244
 PinFixedPull, 242
 PingServer (class in *gpiozero*), 191
 PinInfo (class in *gpiozero*), 219
 PinInvalidBounce, 242
 PinInvalidEdges, 242
 PinInvalidFunction, 242
 PinInvalidPin, 243
 PinInvalidPull, 242
 PinInvalidState, 242
 PinMultiplePins, 243
 PinNonPhysical, 244
 PinNoPins, 243
 pinout command line option
 --color, 71
 --help, 71
 --monochrome, 71
 --revision, 71
 --xyz, 71
 -c, 71
 -h, 71
 -m, 71
 -r, 71
 -x, 71
 PinPWMError, 243
 PinPWMFixedValue, 243
 PinPWMUnsupported, 243
 pins (*gpiozero.HeaderInfo* attribute), 218
 PinSetInput, 242
 PinSPIUnsupported, 243
 pintest command line option
 --help, 76
 --pins, 76
 --revision, 76
 --skip, 76
 --version, 76
 --yes, 76
 -h, 76
 -p, 76
 -r, 76
 -s, 76
 -y, 76
 PinUnknownPi, 243
 PinUnsupported, 242
 PinWarning, 244
 PiPin (class in *gpiozero.pins.pi*), 234
 PiStop (class in *gpiozero*), 172
 PiTraffic (class in *gpiozero*), 171
 play() (*gpiozero.TonalBuzzer* method), 133
 plex_delay (*gpiozero.LEDMultiCharDisplay* property), 164
 PolledInternalDevice (class in *gpiozero*), 196
 PololuDRV8835Robot (class in *gpiozero*), 179
 post_delayed() (in module *gpiozero.tools*), 204
 post_periodic_filtered() (in module *gpiozero.tools*), 204
 pprint() (*gpiozero.HeaderInfo* method), 218
 pre_delayed() (in module *gpiozero.tools*), 205
 pre_periodic_filtered() (in module *gpiozero.tools*), 205
 pressed_time (*gpiozero.ButtonBoard* property), 166
 pull (*gpiozero.Pin* property), 229
 pull (*gpiozero.PinInfo* attribute), 219
 pull_up (*gpiozero.Button* property), 106
 pull_up (*gpiozero.InputDevice* property), 122
 pull_up (*gpiozero.PinInfo* attribute), 219
 pulse() (*gpiozero.LEDBoard* method), 159
 pulse() (*gpiozero.PWMLED* method), 127
 pulse() (*gpiozero.PWMOutputDevice* method), 143
 pulse() (*gpiozero.RGBLED* method), 130
 pulse_width (*gpiozero.Servo* property), 138
 PumpkinPi (class in *gpiozero*), 184
 PWMLED (class in *gpiozero*), 127
 PWMOutputDevice (class in *gpiozero*), 142

Q

quantized() (in module *gpiozero.tools*), 205
 queue_len (*gpiozero.SmoothedInputDevice* property), 121
 queued() (in module *gpiozero.tools*), 205

R

[ramping_values\(\)](#) (in module [gpiozero.tools](#)), 209
[random_values\(\)](#) (in module [gpiozero.tools](#)), 209
[rate](#) ([gpiozero.SPI](#) property), 232
[raw_value](#) ([gpiozero.AnalogInputDevice](#) property), 154
[read\(\)](#) ([gpiozero.SPI](#) method), 230
[red](#) ([gpiozero.RGBLED](#) property), 130
[red](#) ([gpiozero.StatusBoard](#) attribute), 182
[red](#) ([gpiozero.StatusZero](#) attribute), 181
[red](#) ([gpiozero.TrafficLights](#) attribute), 168
[release_all\(\)](#) ([gpiozero.Factory](#) method), 226
[release_pins\(\)](#) ([gpiozero.Factory](#) method), 226
[reserve_pins\(\)](#) ([gpiozero.Factory](#) method), 226
[reset\(\)](#) ([gpiozero.pins.mock.MockFactory](#) method), 237
[reverse\(\)](#) ([gpiozero.Motor](#) method), 135
[reverse\(\)](#) ([gpiozero.PhaseEnableMotor](#) method), 136
[reverse\(\)](#) ([gpiozero.Robot](#) method), 177
[RGBLED](#) (class in [gpiozero](#)), 128
[right\(\)](#) ([gpiozero.Robot](#) method), 177
[right_motor](#) ([gpiozero.Robot](#) attribute), 177
[Robot](#) (class in [gpiozero](#)), 176
[RotaryEncoder](#) (class in [gpiozero](#)), 115
[row](#) ([gpiozero.PinInfo](#) attribute), 219
[rows](#) ([gpiozero.HeaderInfo](#) attribute), 218
[RPiGPIOFactory](#) (class in [gpiozero.pins.rpigpio](#)), 235
[RPiGPIOPin](#) (class in [gpiozero.pins.rpigpio](#)), 235
[RyanteckRobot](#) (class in [gpiozero](#)), 178

S

[scaled\(\)](#) (in module [gpiozero.tools](#)), 206
[select_high](#) ([gpiozero.SPI](#) property), 232
[Servo](#) (class in [gpiozero](#)), 137
[SharedMixin](#) (class in [gpiozero](#)), 200
[sides](#) ([gpiozero.PumpkinPi](#) attribute), 184
[sin_values\(\)](#) (in module [gpiozero.tools](#)), 209
[smoothed\(\)](#) (in module [gpiozero.tools](#)), 206
[SmoothedInputDevice](#) (class in [gpiozero](#)), 120
[SnowPi](#) (class in [gpiozero](#)), 183
[socket](#) ([gpiozero.Energenie](#) property), 180
[source](#) ([gpiozero.LEDBarGraph](#) property), 161
[source](#) ([gpiozero.SourceMixin](#) property), 200
[source_delay](#) ([gpiozero.SourceMixin](#) property), 200
[SourceMixin](#) (class in [gpiozero](#)), 200
[SPI](#) (class in [gpiozero](#)), 230
[spi\(\)](#) ([gpiozero.Factory](#) method), 227
[spi\(\)](#) ([gpiozero.pins.pi.PiFactory](#) method), 233
[SPIBadArgs](#), 240
[SPIBadChannel](#), 241
[SPIDevice](#) (class in [gpiozero](#)), 154
[SPIError](#), 240
[SPIFixedBitOrder](#), 241
[SPIFixedClockMode](#), 241
[SPIFixedSelect](#), 241
[SPIFixedWordSize](#), 241
[SPIInvalidClockMode](#), 241
[SPIInvalidWordSize](#), 241

[SPISoftwareFallback](#), 244
[SPIWarning](#), 244
[star](#) ([gpiozero.PiHutXmasTree](#) attribute), 169
[start_time](#) ([gpiozero.TimeOfDay](#) property), 190
[state](#) ([gpiozero.Pin](#) property), 229
[StatusBoard](#) (class in [gpiozero](#)), 182
[StatusZero](#) (class in [gpiozero](#)), 181
[steps](#) ([gpiozero.RotaryEncoder](#) property), 116
[stop\(\)](#) ([gpiozero.Motor](#) method), 135
[stop\(\)](#) ([gpiozero.PhaseEnableMotor](#) method), 136
[stop\(\)](#) ([gpiozero.Robot](#) method), 177
[stop\(\)](#) ([gpiozero.TonalBuzzer](#) method), 133
[summed\(\)](#) (in module [gpiozero.tools](#)), 208

T

[temperature](#) ([gpiozero.CPUTemperature](#) property), 193
[threshold](#) ([gpiozero.SmoothedInputDevice](#) property), 121
[threshold_distance](#) ([gpiozero.DistanceSensor](#) property), 114
[threshold_steps](#) ([gpiozero.RotaryEncoder](#) property), 117
[ThresholdOutOfRange](#), 244
[ticks\(\)](#) ([gpiozero.Factory](#) method), 227
[ticks\(\)](#) ([gpiozero.pins.local.LocalPiFactory](#) static method), 234
[ticks\(\)](#) ([gpiozero.pins.mock.MockFactory](#) static method), 237
[ticks_diff\(\)](#) ([gpiozero.Factory](#) method), 227
[ticks_diff\(\)](#) ([gpiozero.pins.local.LocalPiFactory](#) static method), 235
[ticks_diff\(\)](#) ([gpiozero.pins.mock.MockFactory](#) static method), 238
[TimeOfDay](#) (class in [gpiozero](#)), 190
[toggle\(\)](#) ([gpiozero.Buzzer](#) method), 132
[toggle\(\)](#) ([gpiozero.CompositeOutputDevice](#) method), 186
[toggle\(\)](#) ([gpiozero.LED](#) method), 126
[toggle\(\)](#) ([gpiozero.LEDBoard](#) method), 159
[toggle\(\)](#) ([gpiozero.OutputDevice](#) method), 144
[toggle\(\)](#) ([gpiozero.PWMLED](#) method), 128
[toggle\(\)](#) ([gpiozero.PWMOutputDevice](#) method), 143
[toggle\(\)](#) ([gpiozero.RGBLED](#) method), 130
[TonalBuzzer](#) (class in [gpiozero](#)), 133
[Tone](#) (class in [gpiozero.tones](#)), 215
[tone](#) ([gpiozero.TonalBuzzer](#) property), 134
[TrafficHat](#) (class in [gpiozero](#)), 173
[TrafficLights](#) (class in [gpiozero](#)), 167
[TrafficLightsBuzzer](#) (class in [gpiozero](#)), 168
[TrafficpHat](#) (class in [gpiozero](#)), 174
[transfer\(\)](#) ([gpiozero.SPI](#) method), 230
[trigger](#) ([gpiozero.DistanceSensor](#) property), 114

U

[up\(\)](#) ([gpiozero.tones.Tone](#) method), 216
[usage](#) ([gpiozero.DiskUsage](#) property), 195
[utc](#) ([gpiozero.TimeOfDay](#) property), 190

V

value (*gpiozero.AnalogInputDevice* property), 154
 value (*gpiozero.AngularServo* property), 140
 value (*gpiozero.Button* property), 106
 value (*gpiozero.ButtonBoard* property), 166
 value (*gpiozero.Buzzer* property), 132
 value (*gpiozero.CompositeDevice* property), 188
 value (*gpiozero.CompositeOutputDevice* property), 186
 value (*gpiozero.CPUTemperature* property), 193
 value (*gpiozero.Device* property), 199
 value (*gpiozero.DigitalInputDevice* property), 119
 value (*gpiozero.DigitalOutputDevice* property), 142
 value (*gpiozero.DiskUsage* property), 195
 value (*gpiozero.DistanceSensor* property), 115
 value (*gpiozero.Energenie* property), 180
 value (*gpiozero.GPIODevice* property), 123
 value (*gpiozero.InputDevice* property), 122
 value (*gpiozero.LED* property), 126
 value (*gpiozero.LEDBarGraph* property), 161
 value (*gpiozero.LEDCharDisplay* property), 163
 value (*gpiozero.LEDMultiCharDisplay* property), 164
 value (*gpiozero.LightSensor* property), 112
 value (*gpiozero.LineSensor* property), 109
 value (*gpiozero.LoadAverage* property), 194
 value (*gpiozero.MCP3001* property), 148
 value (*gpiozero.MCP3002* property), 148
 value (*gpiozero.MCP3004* property), 149
 value (*gpiozero.MCP3008* property), 149
 value (*gpiozero.MCP3201* property), 149
 value (*gpiozero.MCP3202* property), 150
 value (*gpiozero.MCP3204* property), 150
 value (*gpiozero.MCP3208* property), 151
 value (*gpiozero.MCP3301* property), 151
 value (*gpiozero.MCP3302* property), 151
 value (*gpiozero.MCP3304* property), 152
 value (*gpiozero.MotionSensor* property), 110
 value (*gpiozero.Motor* property), 135
 value (*gpiozero.OutputDevice* property), 145
 value (*gpiozero.PhaseEnableMotor* property), 136
 value (*gpiozero.PingServer* property), 191
 value (*gpiozero.PWMLED* property), 128
 value (*gpiozero.PWMOutputDevice* property), 143
 value (*gpiozero.RGBLED* property), 130
 value (*gpiozero.Robot* property), 178
 value (*gpiozero.RotaryEncoder* property), 117
 value (*gpiozero.Servo* property), 138
 value (*gpiozero.SmoothedInputDevice* property), 121
 value (*gpiozero.TimeOfDay* property), 190
 value (*gpiozero.TonalBuzzer* property), 134
 values (*gpiozero.LEDBarGraph* property), 161
 values (*gpiozero.ValuesMixin* property), 200
 ValuesMixin (class in *gpiozero*), 200
 voltage (*gpiozero.AnalogInputDevice* property), 154

W

wait_for_active() (*gpiozero.DigitalInputDevice* method), 119

wait_for_active() (*gpiozero.EventsMixin* method), 201
 wait_for_dark() (*gpiozero.LightSensor* method), 112
 wait_for_in_range() (*gpiozero.DistanceSensor* method), 114
 wait_for_inactive() (*gpiozero.DigitalInputDevice* method), 119
 wait_for_inactive() (*gpiozero.EventsMixin* method), 201
 wait_for_light() (*gpiozero.LightSensor* method), 112
 wait_for_line() (*gpiozero.LineSensor* method), 108
 wait_for_motion() (*gpiozero.MotionSensor* method), 110
 wait_for_no_line() (*gpiozero.LineSensor* method), 108
 wait_for_no_motion() (*gpiozero.MotionSensor* method), 110
 wait_for_out_of_range() (*gpiozero.DistanceSensor* method), 114
 wait_for_press() (*gpiozero.Button* method), 106
 wait_for_press() (*gpiozero.ButtonBoard* method), 166
 wait_for_release() (*gpiozero.Button* method), 106
 wait_for_release() (*gpiozero.ButtonBoard* method), 166
 wait_for_rotate() (*gpiozero.RotaryEncoder* method), 116
 wait_for_rotate_clockwise() (*gpiozero.RotaryEncoder* method), 116
 wait_for_rotate_counter_clockwise() (*gpiozero.RotaryEncoder* method), 116
 when_activated (*gpiozero.CPUTemperature* attribute), 193
 when_activated (*gpiozero.DigitalInputDevice* attribute), 119
 when_activated (*gpiozero.DiskUsage* attribute), 195
 when_activated (*gpiozero.EventsMixin* attribute), 201
 when_activated (*gpiozero.LoadAverage* attribute), 194
 when_activated (*gpiozero.PingServer* attribute), 192
 when_activated (*gpiozero.TimeOfDay* attribute), 190
 when_changed (*gpiozero.Pin* property), 229
 when_dark (*gpiozero.LightSensor* attribute), 112
 when_deactivated (*gpiozero.CPUTemperature* attribute), 193
 when_deactivated (*gpiozero.DigitalInputDevice* attribute), 119
 when_deactivated (*gpiozero.DiskUsage* attribute), 195
 when_deactivated (*gpiozero.EventsMixin* attribute), 201

`when_deactivated` (*gpiozero.LoadAverage* attribute), 194
`when_deactivated` (*gpiozero.PingServer* attribute), 192
`when_deactivated` (*gpiozero.TimeOfDay* attribute), 191
`when_held` (*gpiozero.Button* attribute), 106
`when_held` (*gpiozero.HoldMixin* attribute), 202
`when_in_range` (*gpiozero.DistanceSensor* attribute), 115
`when_light` (*gpiozero.LightSensor* attribute), 112
`when_line` (*gpiozero.LineSensor* attribute), 109
`when_motion` (*gpiozero.MotionSensor* attribute), 110
`when_no_line` (*gpiozero.LineSensor* attribute), 109
`when_no_motion` (*gpiozero.MotionSensor* attribute), 111
`when_out_of_range` (*gpiozero.DistanceSensor* attribute), 115
`when_pressed` (*gpiozero.Button* attribute), 107
`when_pressed` (*gpiozero.ButtonBoard* attribute), 166
`when_released` (*gpiozero.Button* attribute), 107
`when_released` (*gpiozero.ButtonBoard* attribute), 167
`when_rotated` (*gpiozero.RotaryEncoder* attribute), 117
`when_rotated_clockwise` (*gpiozero.RotaryEncoder* attribute), 117
`when_rotated_counter_clockwise` (*gpiozero.RotaryEncoder* attribute), 117
`wrap` (*gpiozero.RotaryEncoder* property), 117
`write()` (*gpiozero.SPI* method), 230

Y

`yellow` (*gpiozero.TrafficLights* attribute), 168

Z

`zip_values()` (in module *gpiozero.tools*), 208
`ZombieThread`, 240